



CYGNUS-S3™

Special Readout and Control Instruction Manual



CYGNUS-ES3



CYGNUS-DINS3

CONTENTS

1.0	INTRODUCTION	5
1.1	Copyright	5
2.0	INSTALLATION	6
2.1	CYGNUS® basic set-up	7
2.2	Fuses.....	8
3.0	ELECTRICAL CONNECTIONS	9
4.0	INSTALLATION OF MODEL PS-90 AND PS-24 POWER AMPLIFIERS	9
5.0	KEYPAD NAVIGATION	10
6.0	SYSTEM SET-UP	11
6.1	Hardware configuration.....	11
6.1.1	Run/stop	11
6.1.2	E-stop	11
6.2	Software configuration	11
6.2.1	Change display settings (optional)	11
6.2.2	I/O configuration	12
6.2.3	Remote tension set point/set-up select (optional)	13
6.3	Load cell calibration (required).....	14
6.3.1	Precision calibration	14
6.3.2	Weightless calibration.....	15
6.4	Optional input device calibration.....	16
6.4.1	Web velocity calibration	16
6.4.2	Rpm calibration	17
6.4.3	Diameter calibration	18
6.5	Output calibration (optional)	19
7.0	TUNING	20
7.1	Quick stabilize – first step.....	20
7.2	Optimize manual tuning.....	21
7.3	Auto tuning	22
7.4	Direct parameter access tuning (optional)	23
8.0	OPTIONAL FUNCTIONS	24
8.1	Changing units of measure or language.....	24
8.2	Taper tension (optional)	25
8.3	Inertia / acceleration compensation (optional)	26
8.4	Hold level control (optional)	27
8.5	Gain scheduling (optional).....	28
8.6	Out of round roll compensation (optional)	29
8.7	Alarms (optional).....	30
8.8	Splice features (optional).....	31
8.9	Inverse diameter output (optional)	32
8.10	Communication (optional)	33

CONTENTS

8.11	Setups	34
8.11.1	Changing from one set-up to another	34
8.11.2	Copy setups.....	34
8.12	Security lock out.....	35
9.0	TROUBLESHOOTING	36
9.1	Out of round roll comp OFF.....	39
9.2	Out of round roll comp ACTIVE	39
9.3	Auto-tune diagnostics	39
9.4	Load cell diagnostics.....	40
9.5	Gain scheduling diagnostics	42
9.5.1	System is unstable	42
9.5.2	Gain Scheduling problems	42
9.6	Gain scheduling theory.....	43
9.7	Auto tune and gain scheduling.....	44
10.0	SCREEN DEFINITIONS, ALPHABETICAL	45
11.0	SPECIFICATIONS	65
12.0	SERVICE	66

LIST OF FIGURES

Figure 1.	System types	57
Figure 2.	Fieldbus card installation.....	58
Figure 3.	CYGNUS wiring diagram	59
Figure 4.	Load cell wiring detail.....	60
Figure 5.	Wiring diagram for use of digital inputs	61
Figure 6.	Wiring diagrams, remote tension setpoint	62
Figure 7.	Wiring diagrams, remote setup select.....	62
Figure 8.	CYGNUS-E wiring layout	63
Figure 9.	Outline dimensions, CYGNUS-DIN and CYGNUS-E.....	64

LIST OF TABLES

Table 1.	Load cell diagnostics	41
Table 2.	Voltage table, remote setup select.....	62

1.0 Introduction

The MAGPOWR® Model CYGNUS™ is a microprocessor-based control designed for precise closed loop tension control of a moving web. The CYGNUS is capable of controlling web tension in unwind, rewind, or point-to-point applications in any web press.

1.1 Copyright

All of the information herein is the exclusive proprietary property of Maxcess International, and is disclosed with the understanding that it will be retained in confidence and will neither be duplicated nor copied in whole or in part nor be used for any purpose other than for which disclosed.

Copyright 2004, 2018, all rights reserved.

Periodically there will be updates to this manual. The latest version is available on our website or by calling your regional office listed on the back page of this publication.

2.0 Installation

Model CYGNUS-E is intended for mounting on any flat vertical surface capable of supporting it. See Figure 9 for dimensions. The CYGNUS-E meets the environmental and mechanical requirements of EN50178. CYGNUS-E exceeds the environmental degree of protection requirement with an IP65 rating. If the IP65 rating is required in the final installation, sealing type cable grips should be used for cable entry. Four mounting holes are provided for attachment of the CYGNUS-E to the mounting surface. The means of attachment should comply with the essential requirements of the appropriate standard(s) and is the responsibility of the installer.

Model CYGNUS-DIN is intended for installation through a DIN panel opening in a customer panel or enclosure. The panel itself must provide sufficient strength to support the weight of the CYGNUS-DIN as well as insure the integrity of the environmental seal. The CYGNUS-DIN maintains a degree of protection of IP65 over its front panel. It also meets the environmental and mechanical requirements of EN50178. The CYGNUS-DIN mounting clips found on both sides of the enclosure behind the front panel will accommodate panel thickness of 0.06 inches (1.5 mm) to 0.25 in. (6.9 mm).

Wiring to and from the enclosure must be done with double or reinforced insulation or protective screening which provides protective separation. All wiring outside either of the CYGNUS enclosures should comply with the essential requirements of the appropriate local standard(s) and is the responsibility of the installer.

If using a magnetic particle clutch or brake, see Figure 6 to install the Model PS-90 or PS-24 Power Amplifiers inside the CYGNUS-E enclosure.

Section 2.1 provides a summary of the basic set-up and calibration of the CYGNUS control. Additional features and options of the CYGNUS control are described later in this manual.

2.1 CYGNUS® basic set-up

This section provides a summary of the basic set-up and calibration of the CYGNUS control. Additional features and options of the CYGNUS control are described later in this manual.

NOTE: The CYGNUS-DINS3 is a special version of CYGNUS intended to be used for readout only. The isolated output of TB1 main output terminal has been converted to output a signal proportional to measured tension, and does not provide a corrective signal.

1. The connections that are required for the basic CYGNUS system are the following: (see sections 2.0 and 3.0 for specific wiring requirements.)
 - 115 or 230 VAC power (TB2.1 and TB2.2)
 - One or two load cells (TB6.1 through TB6.4, see section 6.3)
 - RUN/STOP using the CYGNUS internal logic supply between TB3.1 and TB3.2 (this is typically accomplished by using a switch between these terminals) (For tension readout operation, it can be accomplished with a jumper wire.)
 - TB1 isolated analog tension reference output to reading device.
2. (Not applicable for readout only operation) When using a power amplifier, set the current range jumper to the proper setting for the clutch or brake being used (refer to amplifier User's Manual and the clutch or brake User's Manual for proper settings). The following is also required:
 - Power amplifier input (if used), 115 vac for PS-90 or 24 vac or VDC for PS-24
 - Output from power amplifier to clutch or brake.
3. Close the RUN/STOP circuit (TB3.1 and TB3.2) to put the CYGNUS into HOLD mode (see section 6.1.1). (For tension readout operation, this may be accomplished with a jumper wire.)
4. Calibrate the load cells (refer to section 6.3).
 - During load cell calibration, be sure to select the appropriate system type (section 6.3 lists the system type options available).
5. Turn tension on by pressing the TENSION ON/OFF key and put the CYGNUS into AUTO mode by switching open the RUN/STOP circuit. Run the machine at a reduced line speed and observe the system. (Not applicable for readout only operation.)
6. Refer to Section 7.0 for tuning methods that will optimize the responsiveness (Auto Tune is recommended) and proceed to dynamically tune the system. (Not applicable for readout only operation.)
7. Basic set-up is complete. Refer to the CYGNUS instruction manual for additional features and options. Always use the RUN/STOP feature to put the CYGNUS into HOLD mode whenever the machine is stopped to avoid a possible high-tension condition during start-up. (Not applicable for readout only operation)

2.2 Fuses

The only maintenance that may be required on CYGNUS is fuse replacement. Replacement of any fuse requires opening the enclosure, which circumvents the enclosure IP rating.



WARNING: DISCONNECT MAINS BEFORE OPENING ENCLOSURE

To replace a fuse:

On Model CYGNUS-DIN:

1. Disconnect the supply mains.
2. Remove the four screws on the rear of the CYGNUS which retain the top cover.
3. Remove the cover.
4. Remove and replace the blown fuse.
5. Re-install cover.
6. Reconnect supply mains

On Model CYGNUS-E:

1. Disconnect the supply mains.
2. Open the door of the CYGNUS-E by loosening the two retaining screws.
3. Remove the four screws on the rear of the CYGNUS which retain the cover.
4. Remove the cover.
5. Remove and replace the blown fuse.
6. Re-install cover.
7. Close the door and re-tighten the two retaining screws.
8. Reconnect supply mains.

3.0 Electrical connections

Figure 3 shows the connections that are required for the basic CYGNUS system. They are:

- 115 or 230 vac power
- One or two MAGPOWR load cells
- Tension reference output to readout device
- RUN/STOP using the CYGNUS internal logic supply (For readout only – Jumper TB3-1&2)
- OUTPUT to clutch or brake amplifier, current-to-pressure transducer, motor controller, etc. (Not applicable for tension readout only operation)
- Power Amplifier input (if used) 115 vac for PS-90 for 90 VDC clutch or brake.
- Power Amplifier input (if used) 24 VDC or 24 vac for PS-24 for 24 VDC clutch or brake.
- OUTPUT from power amplifier to clutch or brake (if used)

Route AC power away from sensor and control wiring. MAGPOWR sensor cables are color coded and labeled on the name plate. Run all wiring in shielded cable. Connect shields to the enclosure using the standoffs provided. Maximum shield length and maximum length of wires outside of the shield is 3 inches (75 mm).

4.0 Installation of model PS-90 and PS-24 power amplifiers

INTO CYGNUS-E (IF USED)

(Not applicable for readout only operation)

PS-90

1. Install the PS-90 before applying power to the CYGNUS-E control.
2. Set JP1 on the power amplifier for the desired output current range to match the specific clutch or brake model to be controlled.
3. Connect 115 VAC input as instructed in the PS-90 instruction manual.
4. Connect the CYGNUS-E 0 to 10 VDC control output (TB1.1 and 2) to the PS-90 control signal input (terminals 25 and 26), as instructed in the PS-90 instruction manual.
5. Connect the PS-90 90 VDC output (terminals 4 and 5) to clutch or brake to be controlled, as instructed in the PS-90 instruction manual.
6. Mount Power Amplifier per Figure 5 using the DIN Rail provided inside the CYGNUS-E
7. Re-secure door.


PS-24 (See PS-24 instruction manual for non-isolated wiring instructions)

1. Install the PS-24 before applying power to the CYGNUS-E control.
2. Set JP1 on the power amplifier for the desired output current range to match the specific clutch or brake model to be controlled.
3. Connect 24 VDC or 24 VAC input as instructed in the PS-24 instruction manual.
4. Connect the CYGNUS-E 0 to 10 VDC control output (TB1.1 and 2) to the PS-24 control signal input (terminals 25 and 26), as instructed in the PS-24 instruction manual.
5. Connect the PS-24 24 VDC output (terminals 4 and 5) to clutch or brake to be controlled, as instructed in the PS-24 instruction manual.
6. Mount Power Amplifier per Figure 5 using the DIN Rail provided inside the CYGNUS-E
7. Re-secure door.

KEYPAD NAVIGATION

5.0 Keypad navigation

Home Screen (Digital)

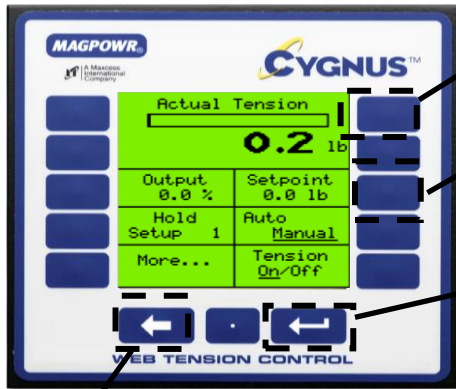


Ten Tactile Feedback “smart” keys that change functions as you navigate through different screens.

Function of each key corresponds to the displayed item next to it.

Enter key is used to enter selected numeric data.

Back space key clears the last entry. Repeated pushing will take you back to Home Screen one step at a time.


Tension Setpoint Input
(Press “Setpoint” key to reach this screen)

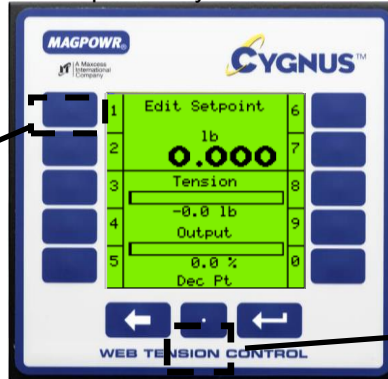

Numeric values are input using keys next to corresponding number (Example shown would input a “1” in the Edit Setpoint screen)

Decimal point

Home Screen (Analog)

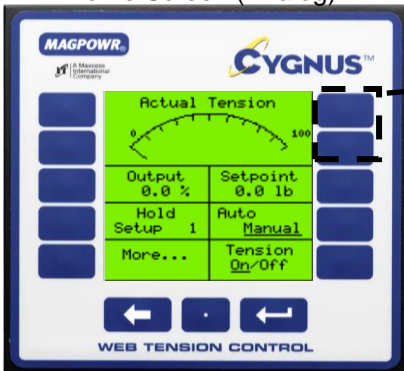


Hidden key feature allows operator to change from analog to digital display by depressing any of the top four keys when at the Home screen. Press again to return to digital home screen.

Home Key will always take you directly back to the “Home Screen”.

Screen prompts that stretch across entire display can be accessed by pressing the button on either side.

General Navigation

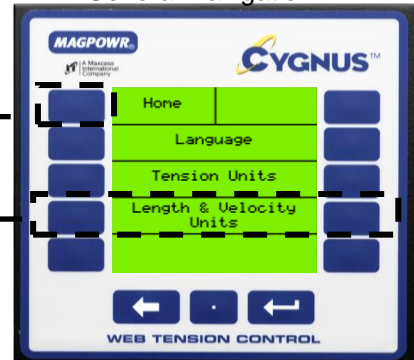

6.0 System set-up

6.1 Hardware configuration

6.1.1 Run/stop

For tension readout only – jumper terminal TB3.1 to TB3.2. Connect TB3.1 to TB3.2 to initiate the stopping function. During STOP TIME the CYGNUS continues to control tension as a closed loop system but INERTIA COMP and STOP MULTIPLIER are also activated.

See Figure 6 to use active logic inputs (5 or 24 VDC).

6.1.2 E-stop


E-stop is an auxiliary function not intended to provide category 1 safety protection
(Not applicable for readout only operation)

Open the connection between TB3.3 and TB3.2 to initiate E-STOP. On unwinds the output goes to 100% on. On all other systems the output goes to zero.

See Figure 5 to use active logic inputs (5 or 24 VDC).

6.2 Software configuration


6.2.1 Change display settings (optional)

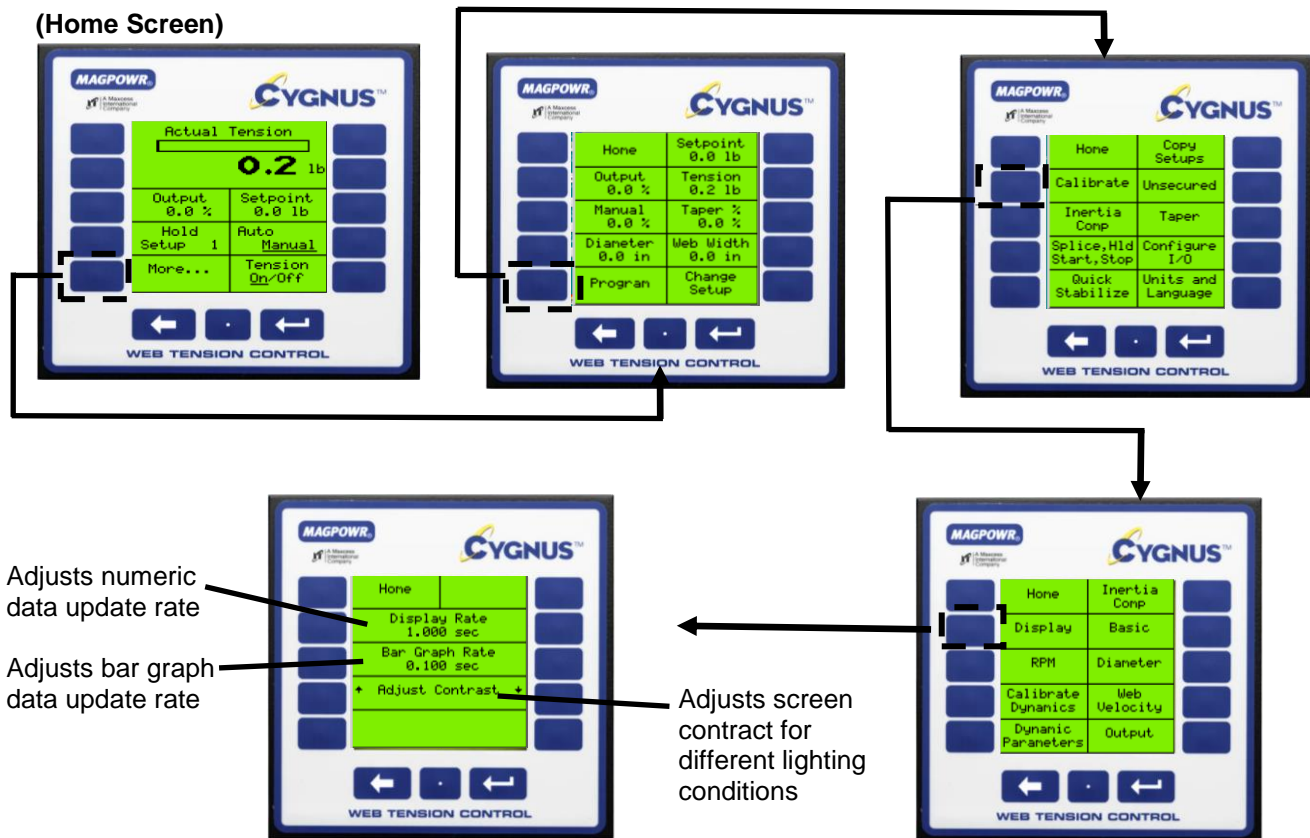

NOTE: Default values work well in most applications.

SYSTEM SETUP

6.2.2 I/O configuration (Home Screen)

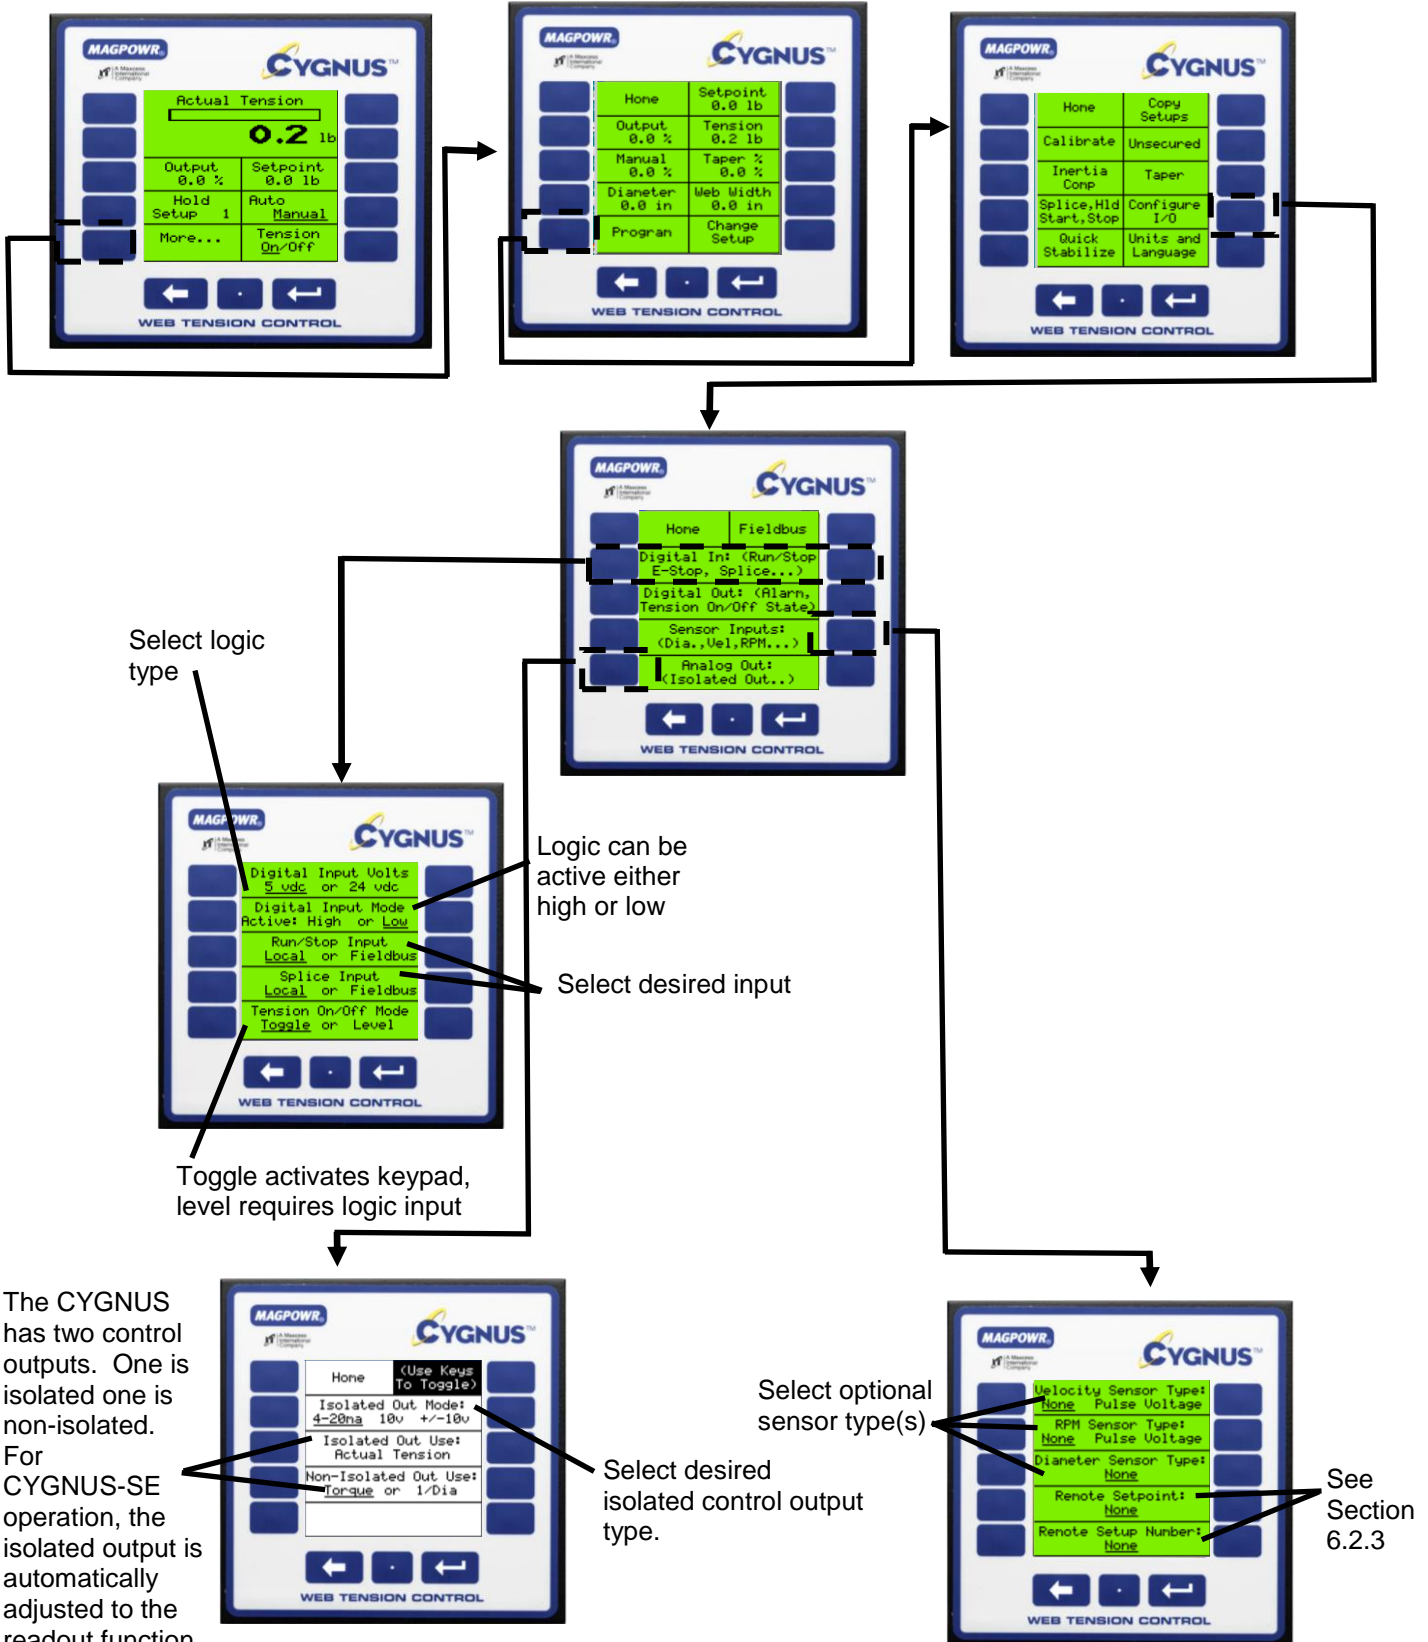


SYSTEM SETUP

6.2.3 Remote tension set point/set-up select (optional)

This option allows both the desired tension and the setup number to be set by an external input. The desired tension input can be either a 0 to 10 VDC analog signal or a remote potentiometer. The analog setup number select input and can be either a 0 to 10 VDC signal or a remote potentiometer.

(Home Screen)

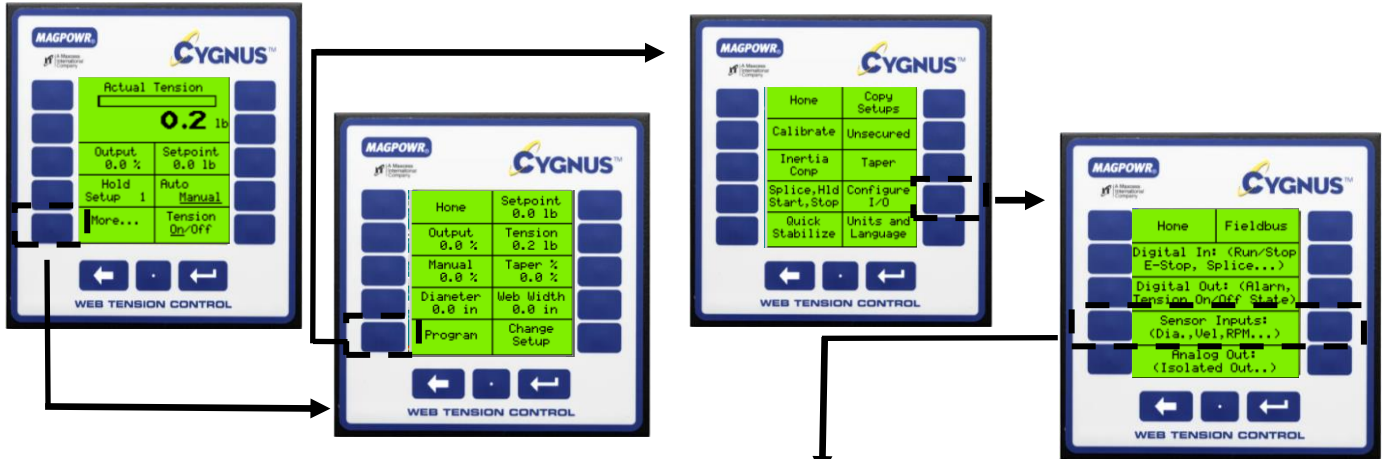


NOTES:


1. There are (4) assignable inputs (TB4-2, TB4-2, TB5-1 and TB5-3) on the CYGNUS and (5) possible inputs. If you are using "Remote Setup Select", "Remote Setpoint", "Web Velocity" and "Roll RPM" you must use Velocity/RPM Method to calculate diameter.
2. Remote Setpoint Potentiometer must be calibrated. This is done during Load Cell Calibration. The screen will prompt you to "Adjust remote setpoint device to max."

Assign which "available" terminal input will be used for Remote Setpoint.

Assign which "available" terminal input will be used for Remote Setup Select.

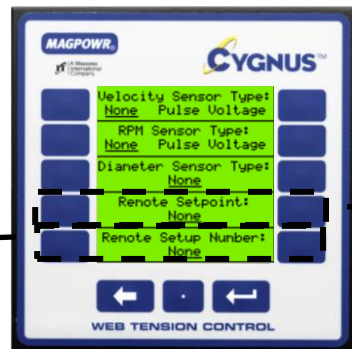

(Use ← to return to previous screen)

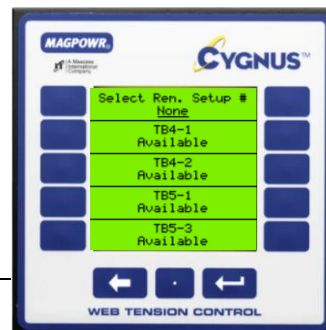

See Figure 6 for Remote Setpoint Wiring

See Figure 7 for Remote Setup wiring

See Table 2 if setup is being done via a programmable logic controller.


SYSTEM SETUP

6.3 Load cell calibration (required)

6.3.1 Precision calibration

This is the most accurate method of calibration. Use for all applications in which tension accuracy is critical.


(Home Screen)

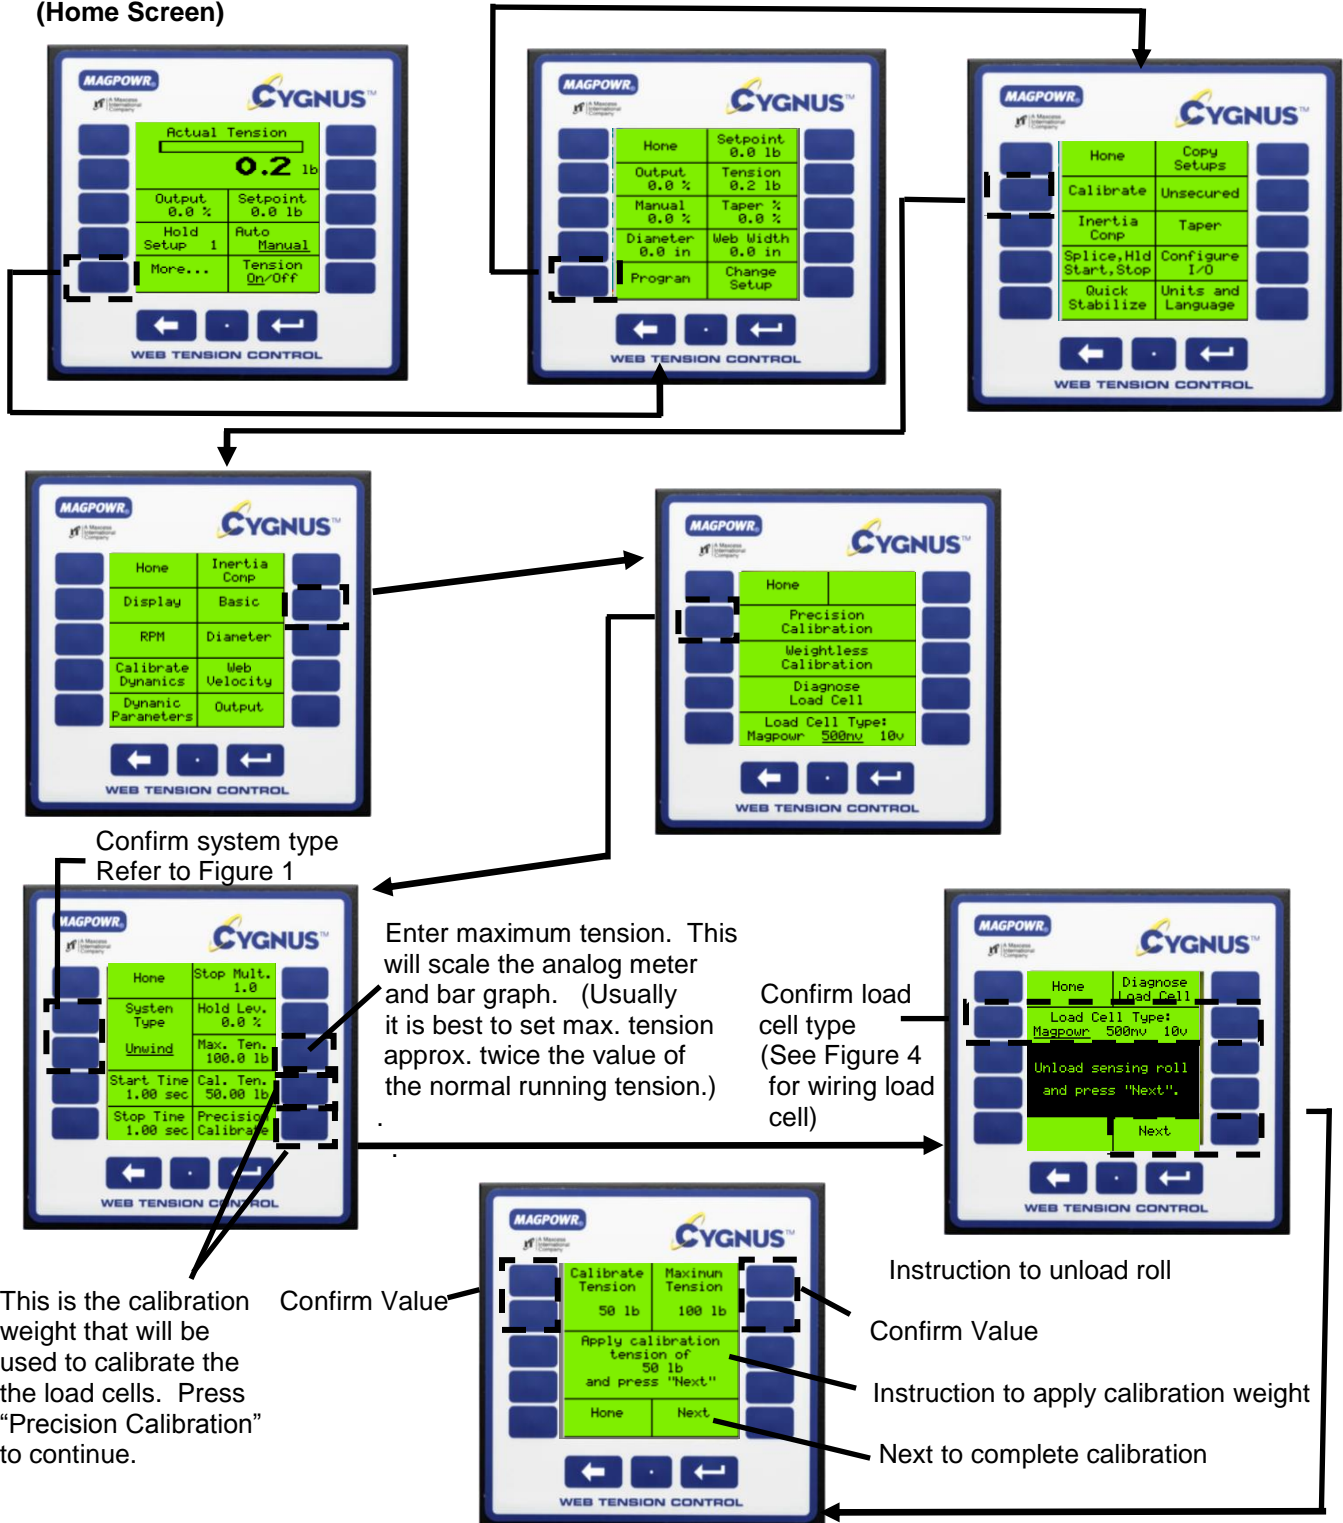

SYSTEM SETUP

6.3.2 Weightless calibration

This is a quick method of calibrating load cells without the need of hanging weights to simulate tension. For tension critical applications use the Precision Calibration method. (NOTE: Repeatability and sensor performance will not be affected)

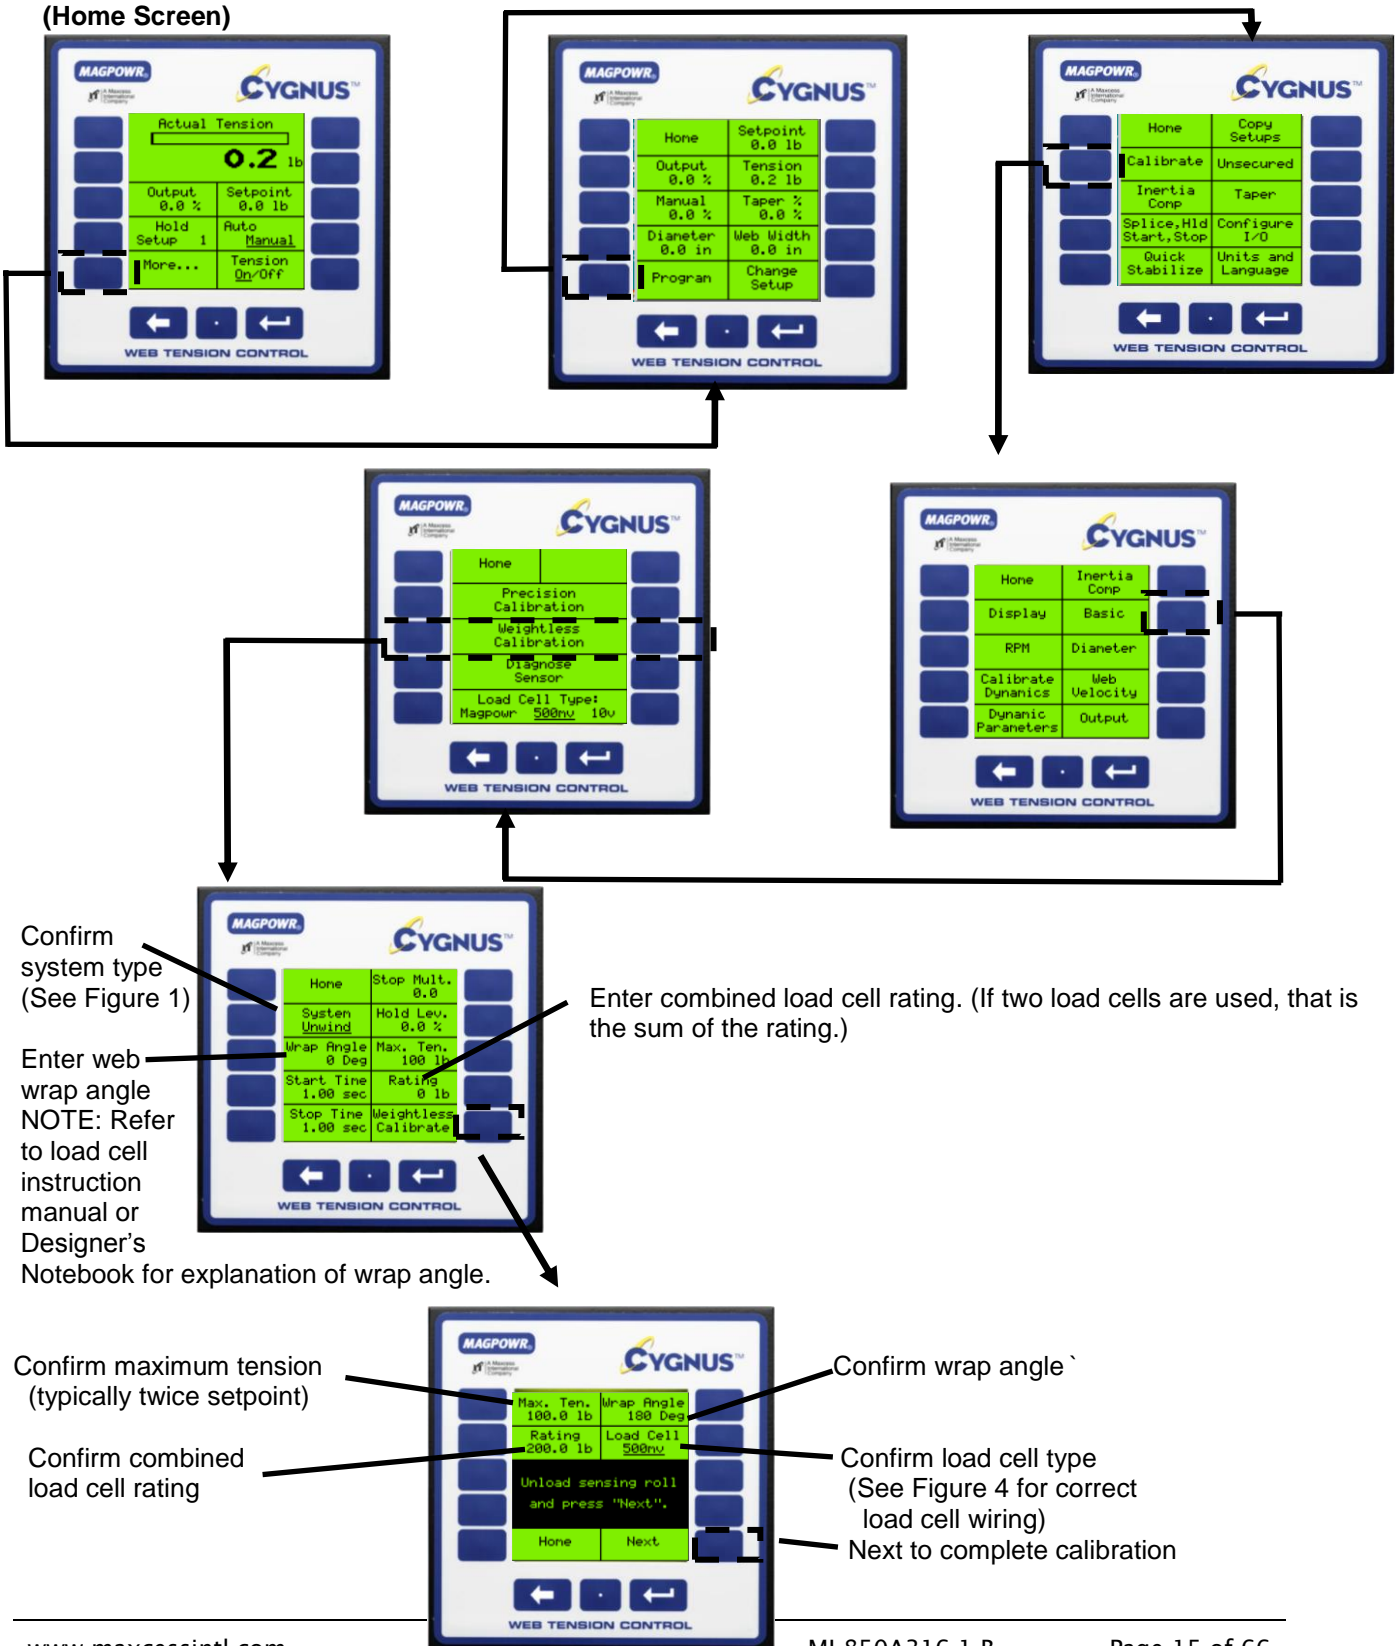

SYSTEM SETUP


6.4 Optional input device calibration

(NOT APPLICABLE FOR READOUT ONLY OPERATION)

6.4.1 Web velocity calibration

(Machine must be running)

Web velocity input is an option. You only need to calibrate web velocity if you are using a velocity sensor. Configure I/O must be configured to accept the appropriate signal before proceeding.

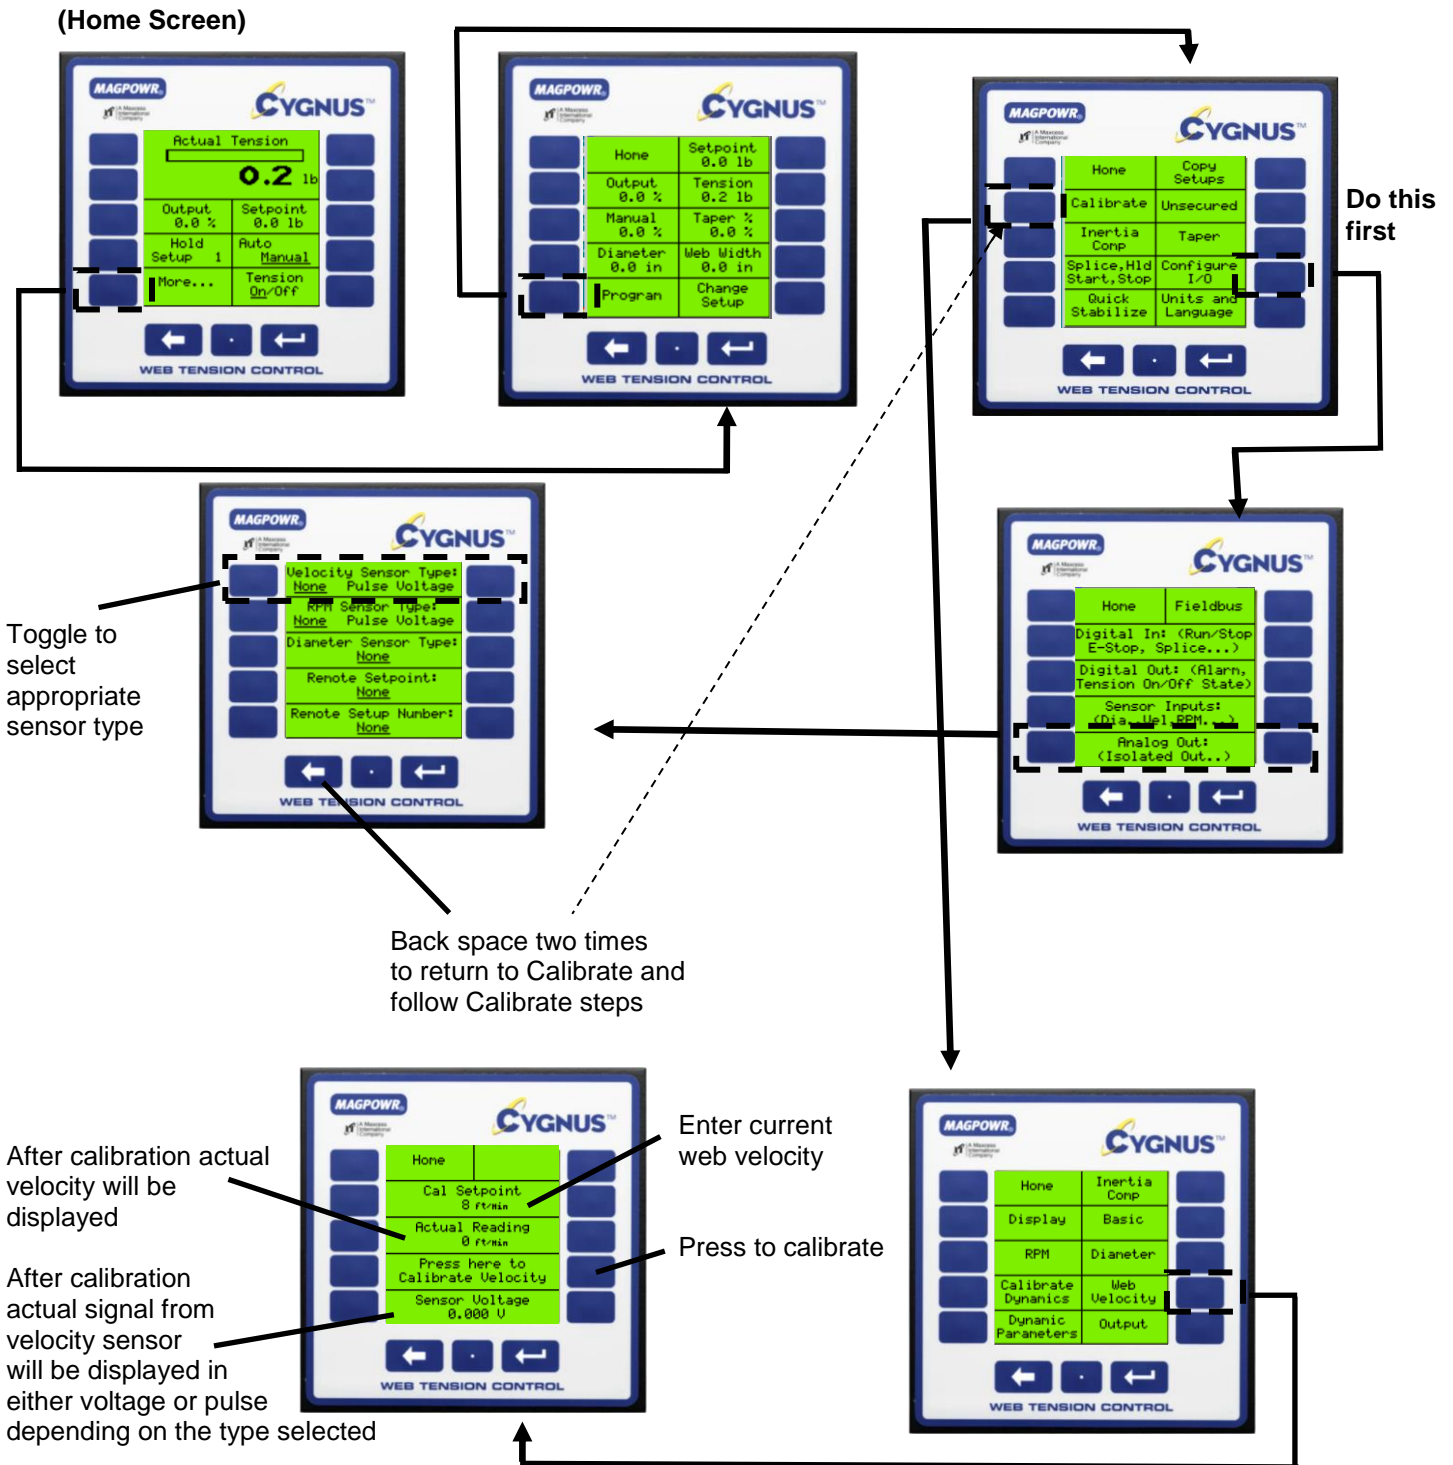


SYSTEM SETUP

6.4.2 Rpm calibration

(Machine must be running)

If using an optional RPM sensor you must calibrate the output of the sensor so the CYGNUS can recognize actual RPM.

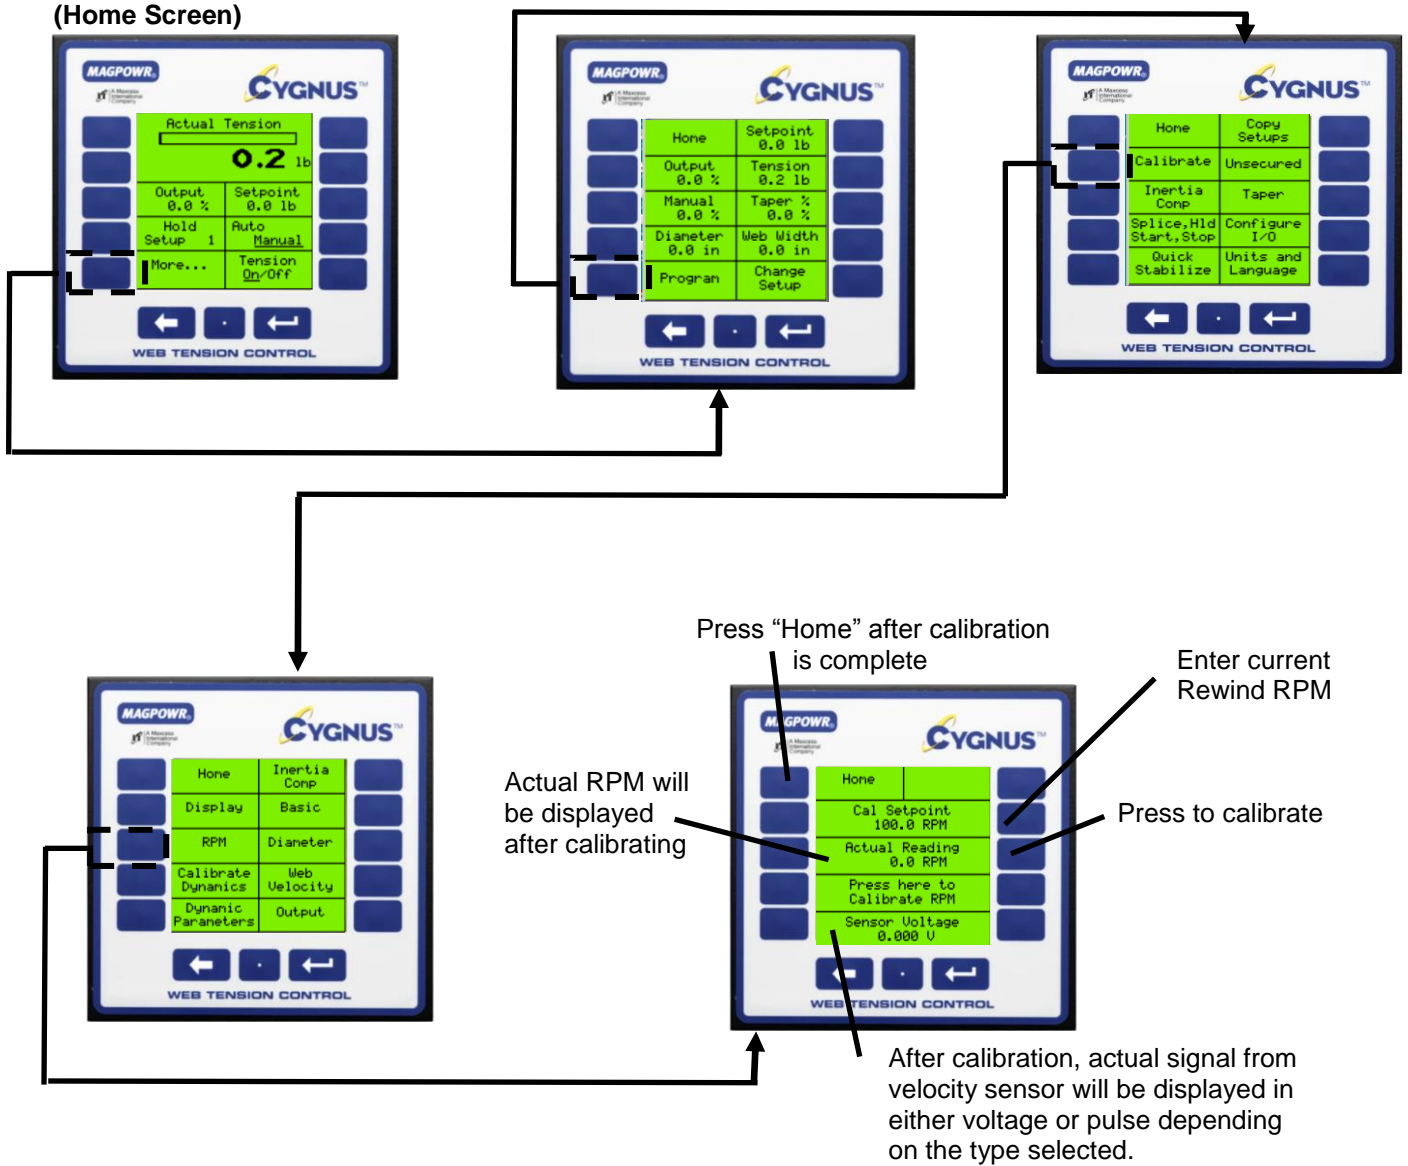


SYSTEM SETUP

6.4.3 Diameter calibration

(If using Velocity/RPM inputs, you must calibrate them first. See Sections 6.4.1 and 6.4.2)


(Home Screen)

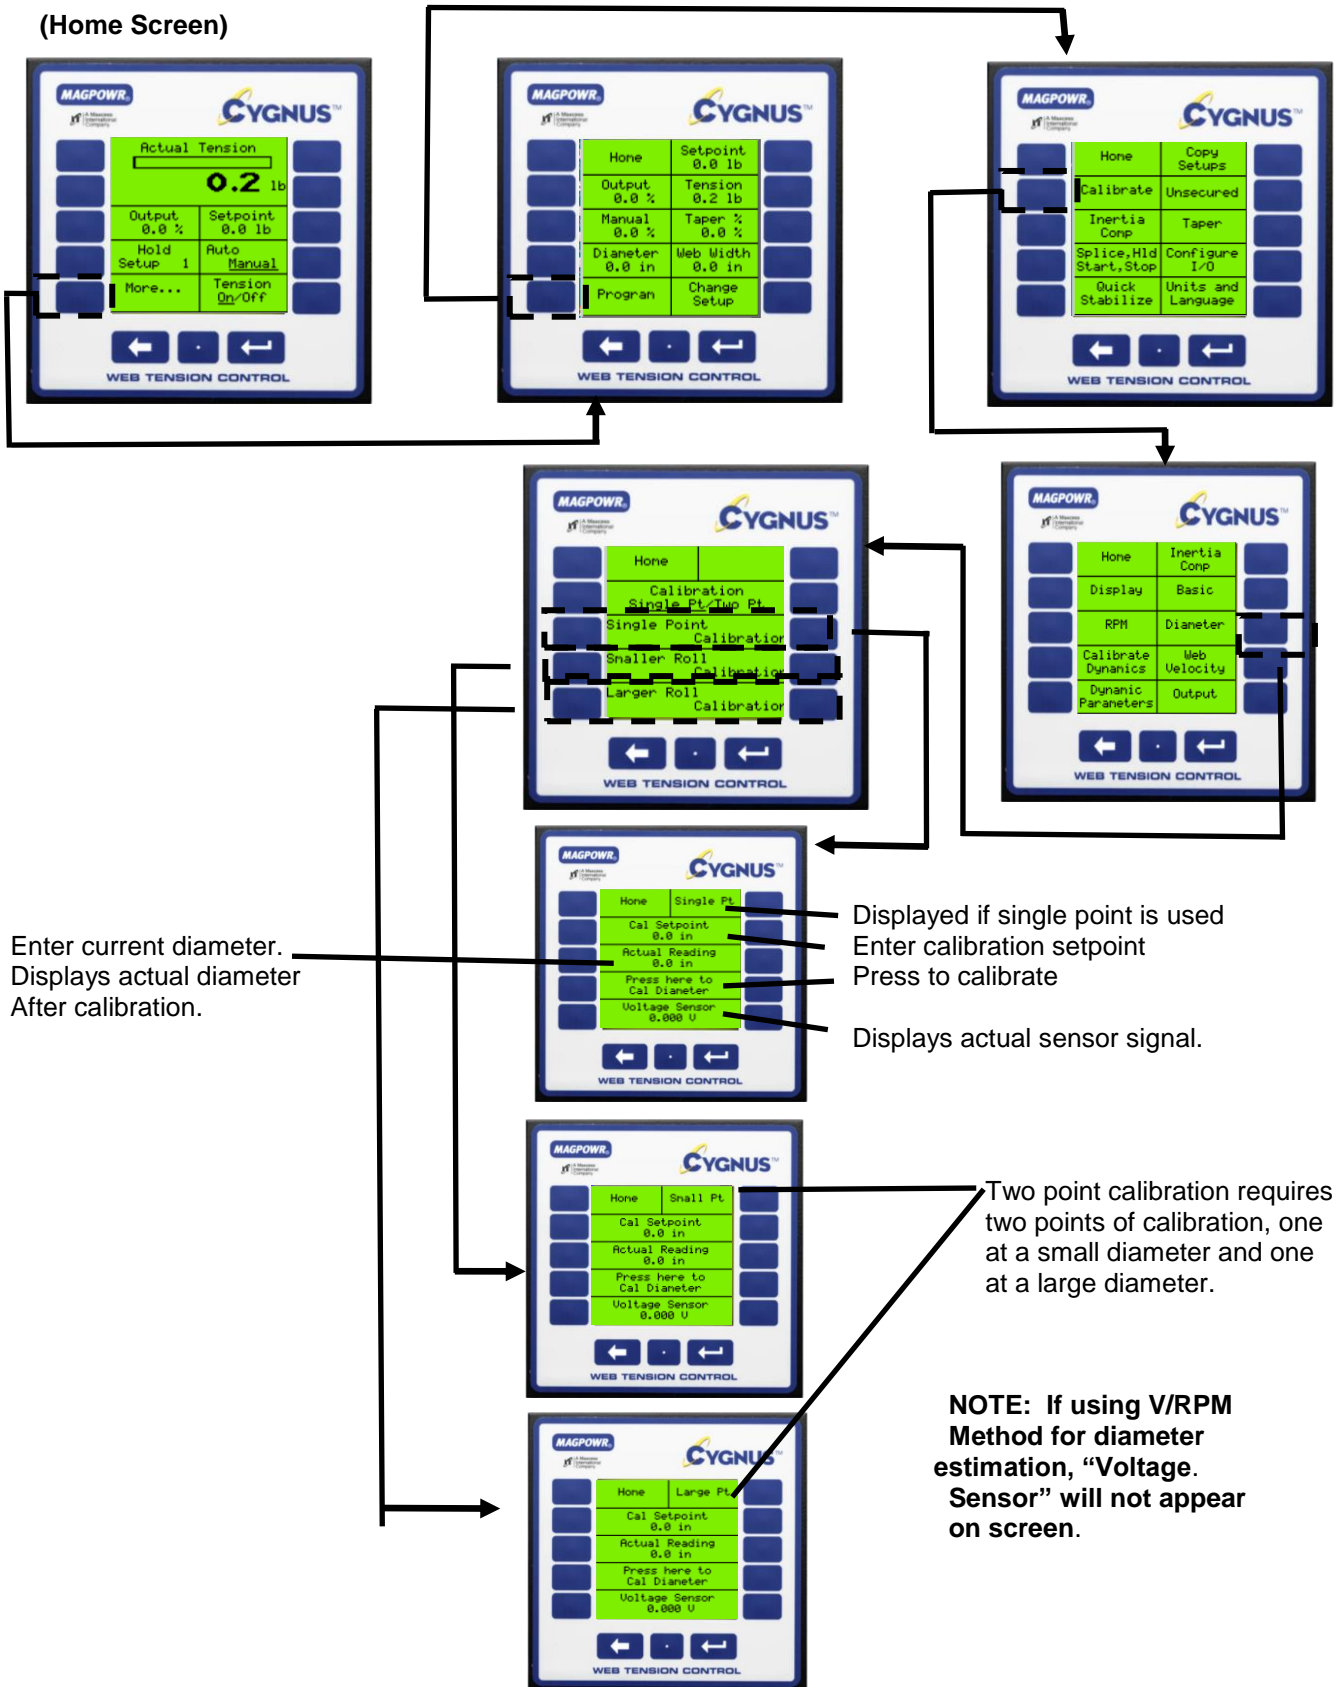

SYSTEM SETUP

6.5 Output calibration (optional)

(Home Screen)

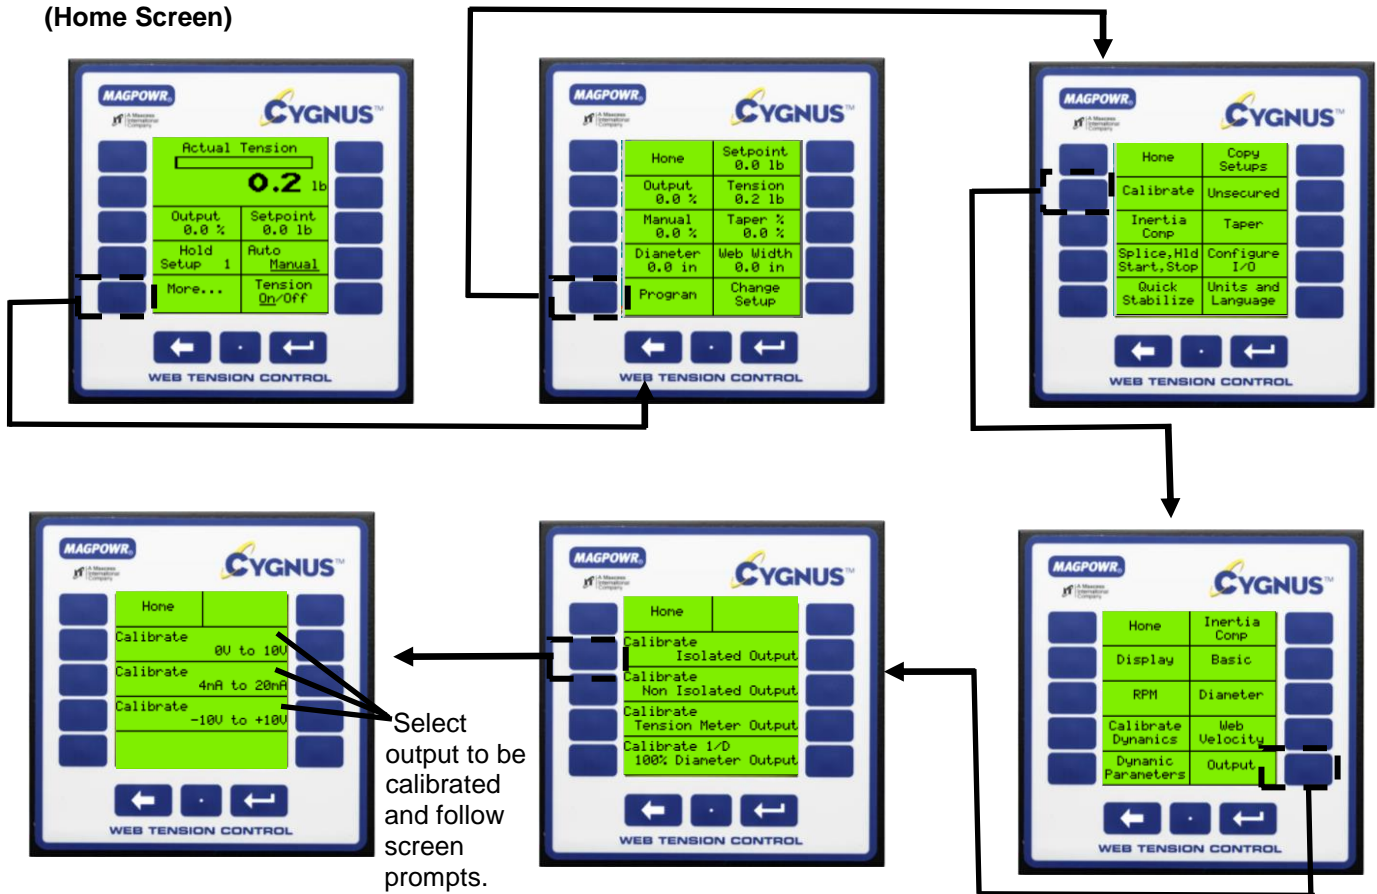


7.0 Tuning

(NOT APPLICABLE FOR READOUT ONLY OPERATION)

There are three ways to tune your system. The method used depends on your personal preference and end requirements. All tuning must be done with the machine running. In general, the tuning procedures consists of two steps. First is a "Quick Stabilize" to get the control loop stable if upon start-up the default parameters do not provide a stable loop. If the machine is stable at initial start-up, this step is not necessary. The second step is "Optimization", using one of two methods. In each method the system is optimized by first tuning to make the system slightly unstable, then adjusting the tuning parameters to make it stable. By doing so the system is tuned to be as responsive as possible and still remain stable throughout its range of operation.

7.1 Quick stabilize - first step


Default tuning parameters are embedded in the CYGNUS and were selected to minimize instability. If the system is exhibiting extreme fluctuations at start-up, perform the following procedure to quickly stabilize it. Fine tuning using one of the following methods will still be required.

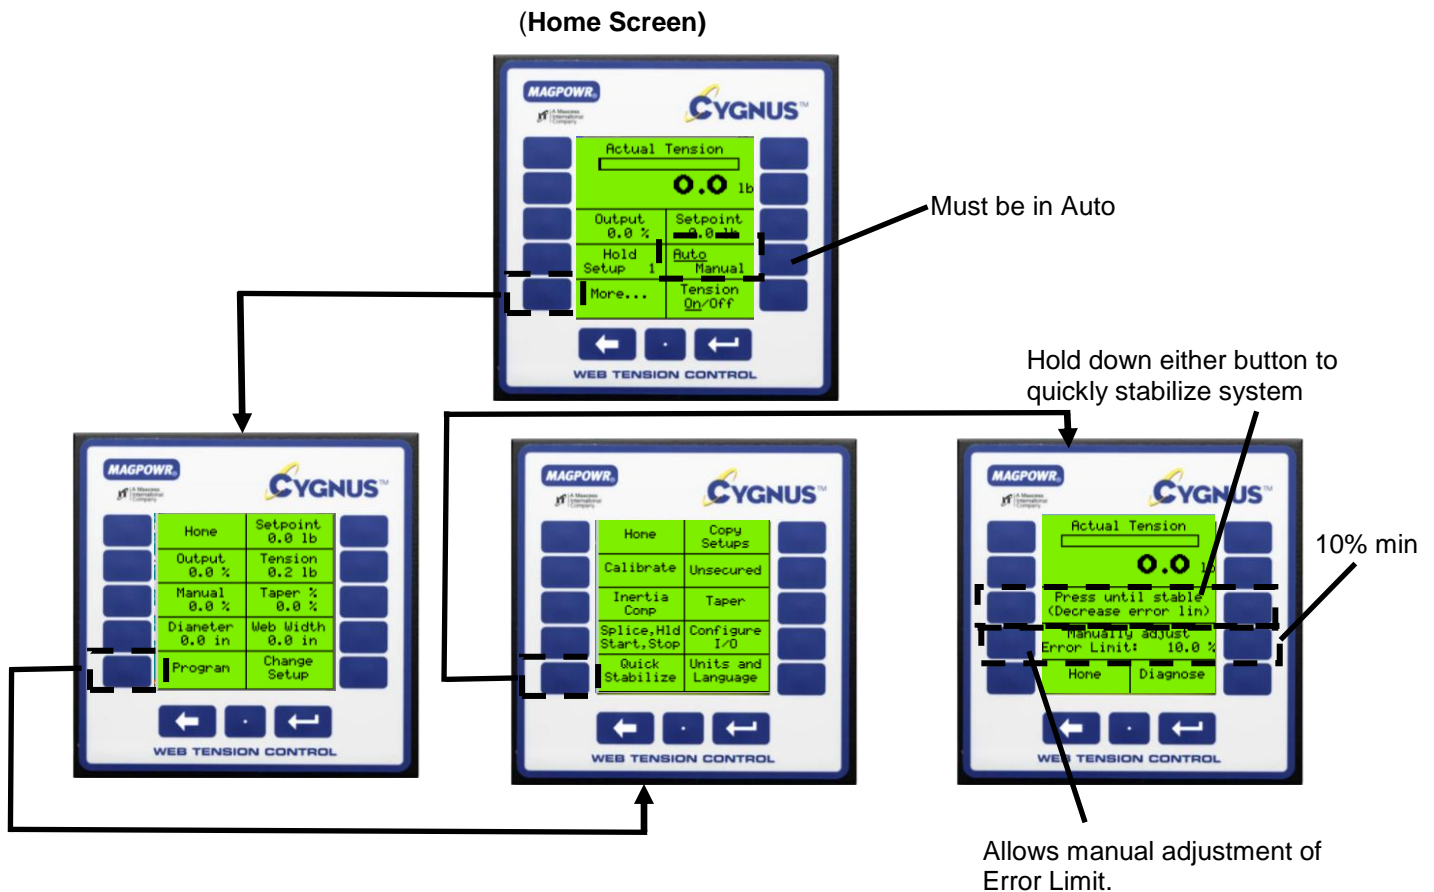

7.2 Optimize manual tuning

Manual tuning allows the operator to adjust tuning parameters by using one button to stabilize the system and another button to destabilize the system. “Optimizing” allows for precise tuning by first making the system unstable, then re-stabilizing it. NOTE: System must be running to Manually Tune.


(Home Screen)

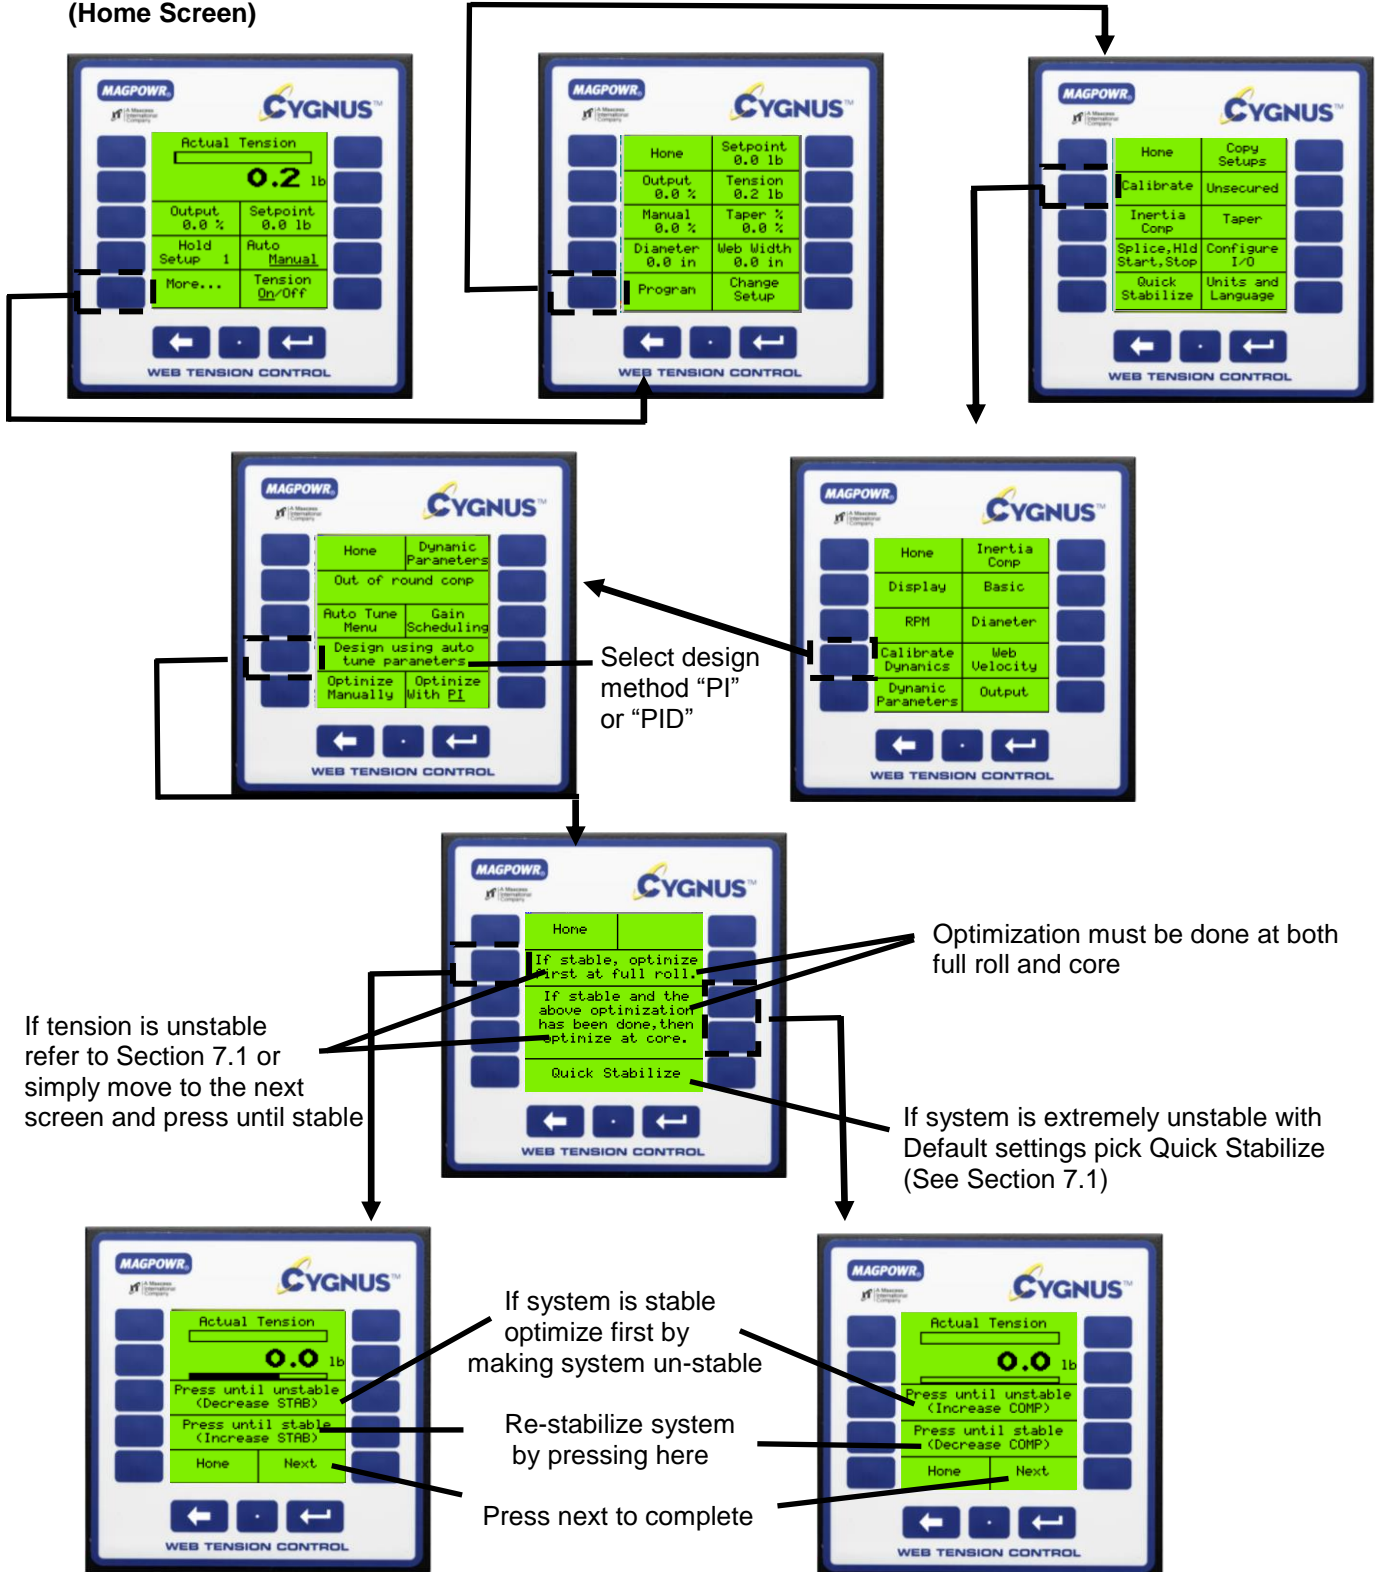

7.3 Auto tuning

By pressing a single button, the CYGNUS has the unique ability to automatically determine the stable/optimized tuning parameters for most systems. NOTE: Systems with large transients may require manual tuning as outlined in Section 7.2. System must be running in Manual Mode to Auto Tune.


(Home Screen)

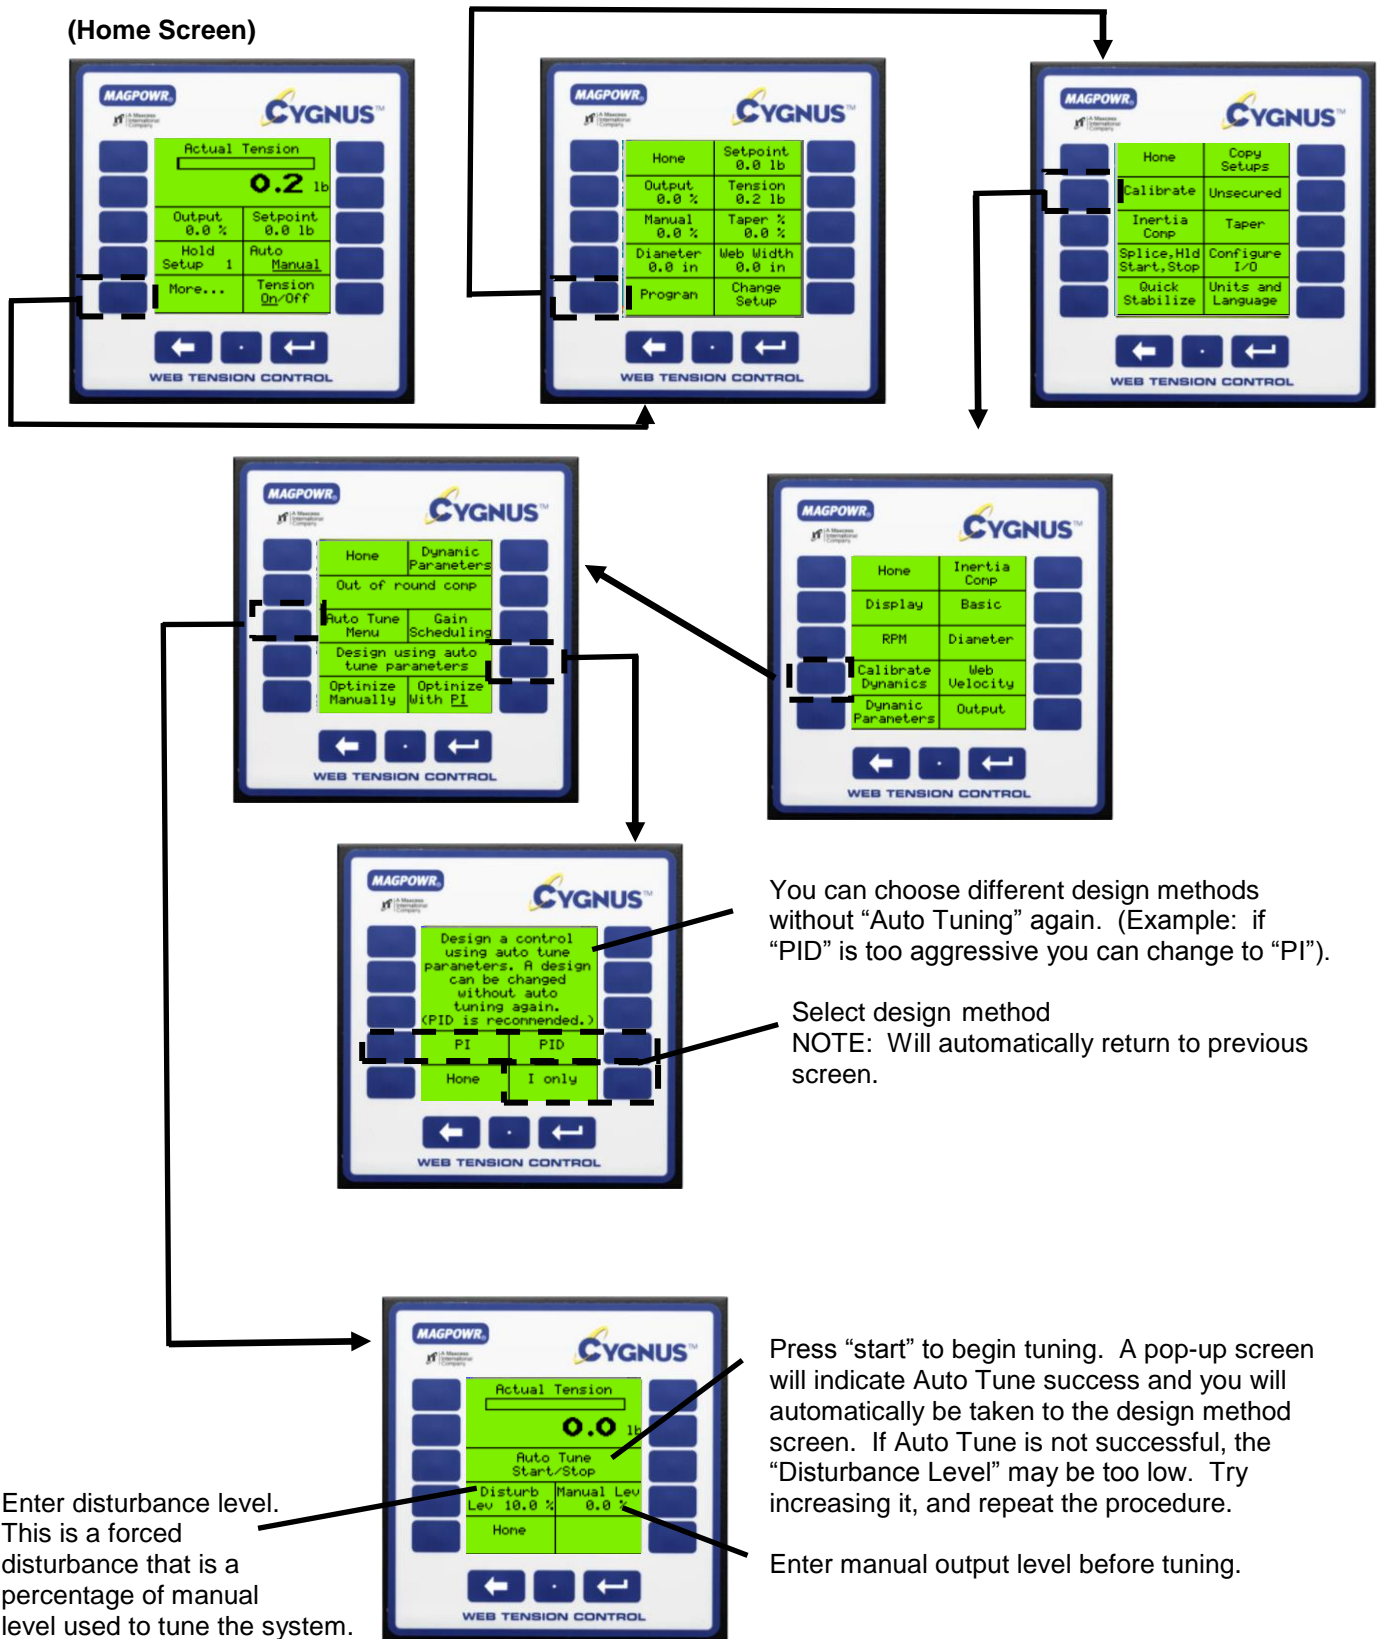

TUNING

7.4 Direct parameter access tuning (optional)

Tuning parameters can easily be directly accessed for re-entry of data.

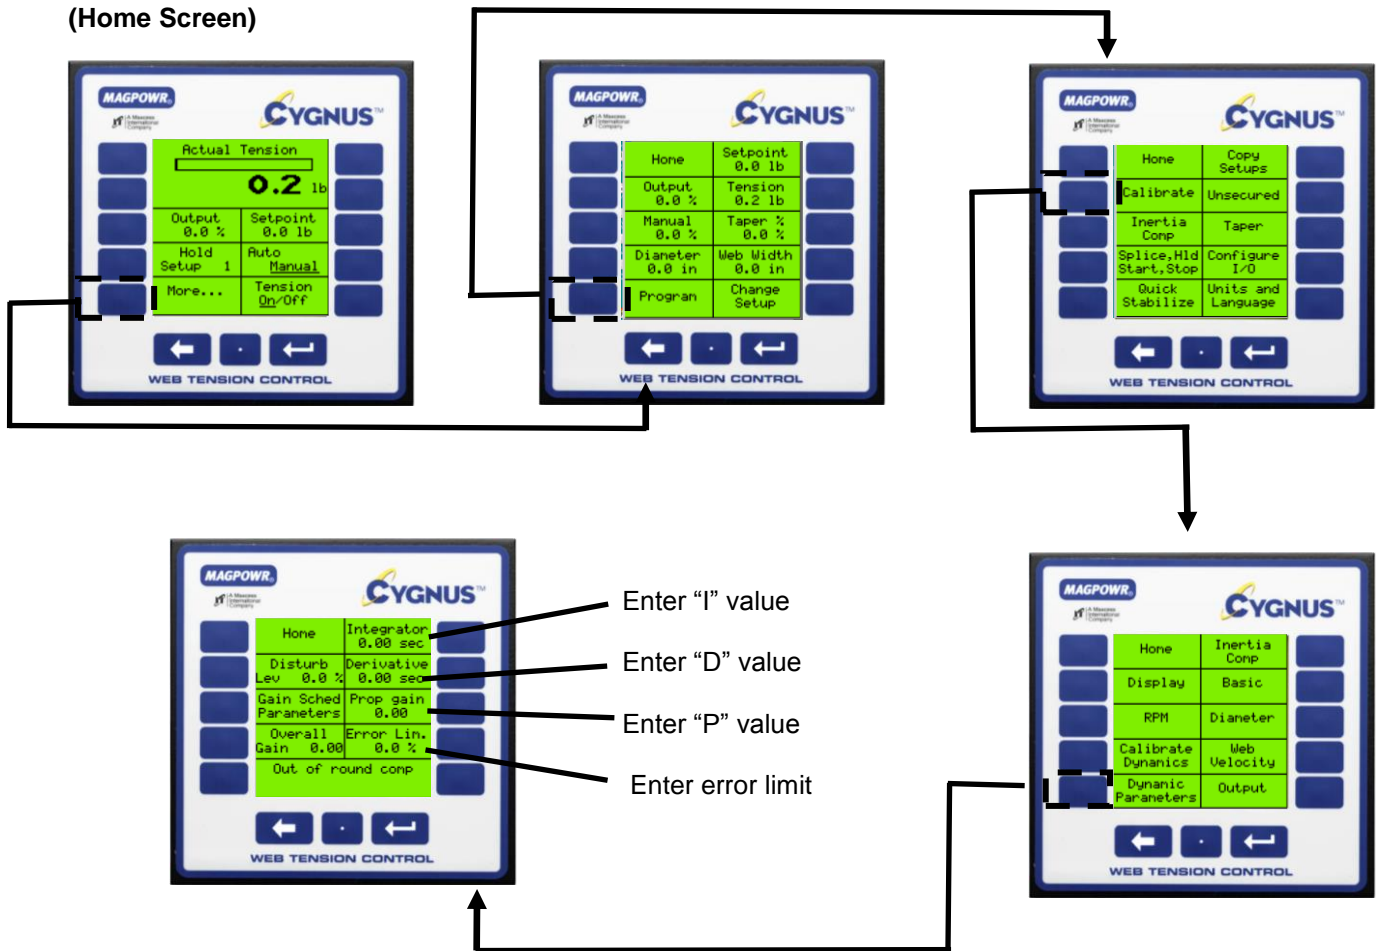

Direct access to tuning parameters is intended for easy input of previously recorded values generated by Auto Tuning or Manual Optimization.


For Controls Engineers who may wish to calculate their own values, the equation is:

$$(\text{Overall Gain}) \left(P + \frac{1}{sI} + sD \right) (\text{ERROR})$$

OPTIONAL FUNCTIONS

8.0 Optional functions

8.1 Changing units of measure or language

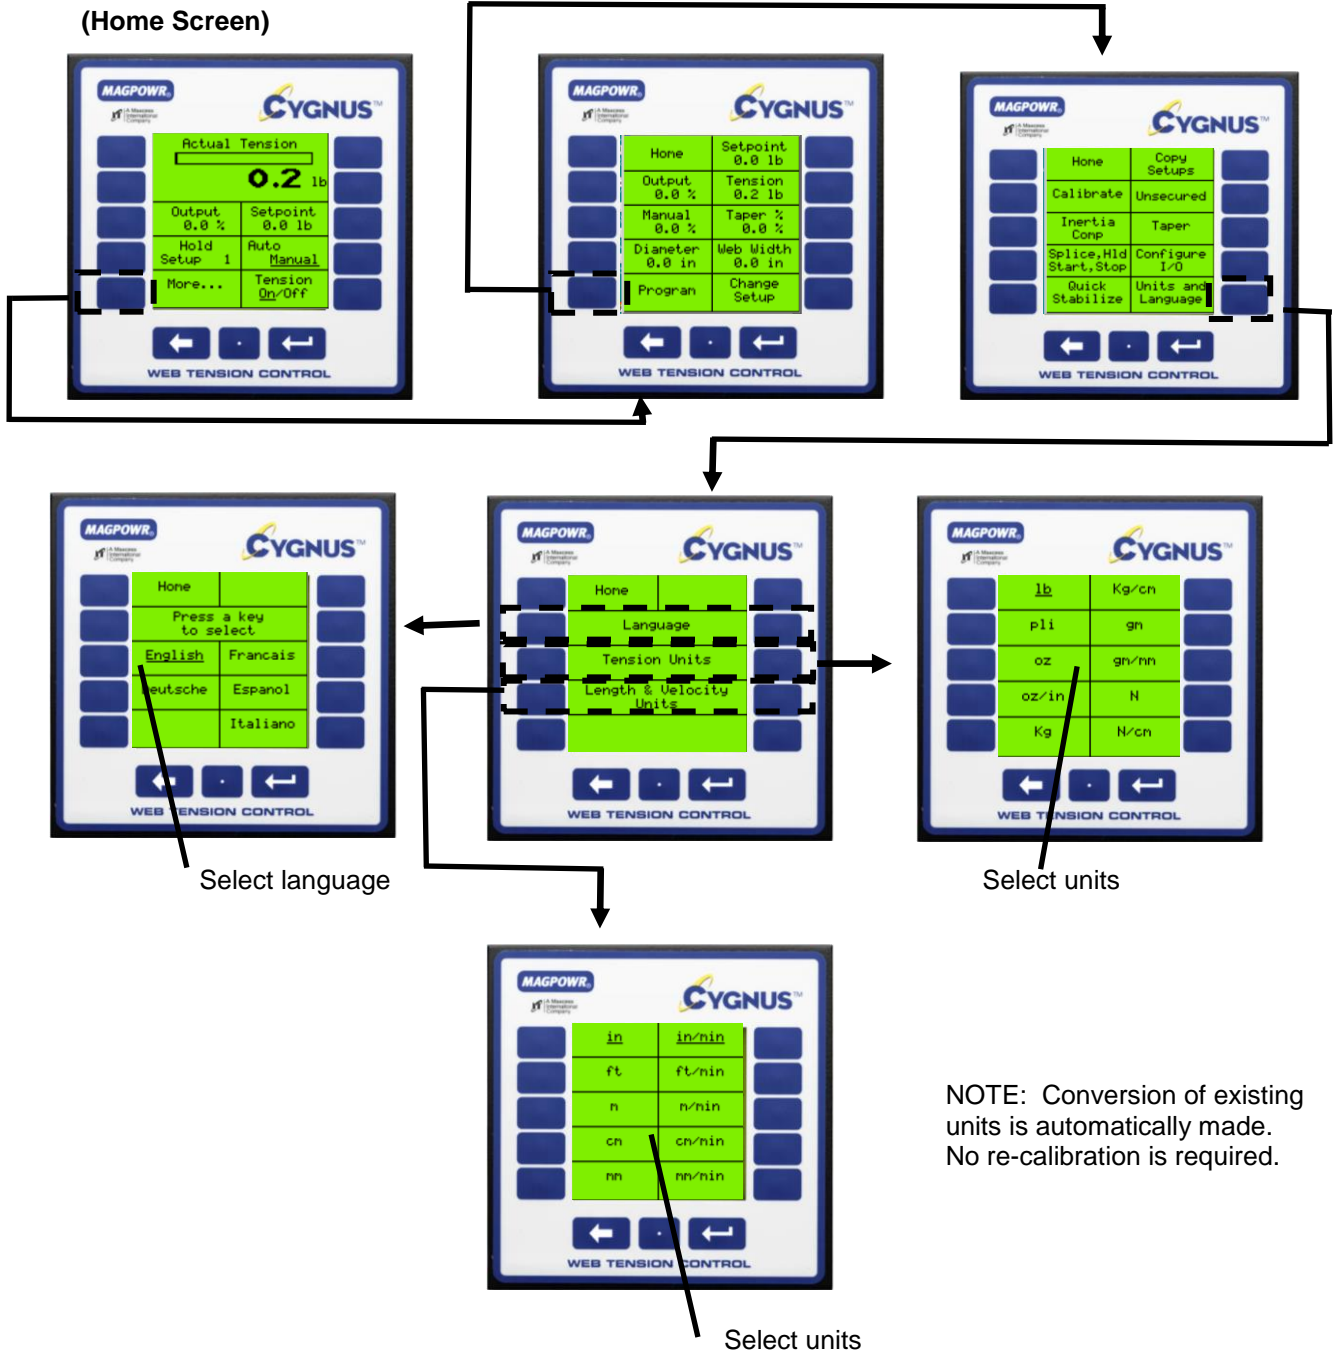


OPTIONAL FUNCTIONS

8.2 Taper tension (optional)

(NOT APPLICABLE FOR READOUT ONLY OPERATION)

Taper Tension is the reduction of tension as the diameter increases on a rewind. Taper Tension is desired on rewinds to prevent crushed cores and telescoping rolls caused by excess tension build up. Taper can be achieved by either estimating diameter, using the optional diameter input, or calculating diameter based on roll RPM and Velocity inputs (see Section 6.4 to calibrate these devices)

(Home Screen)

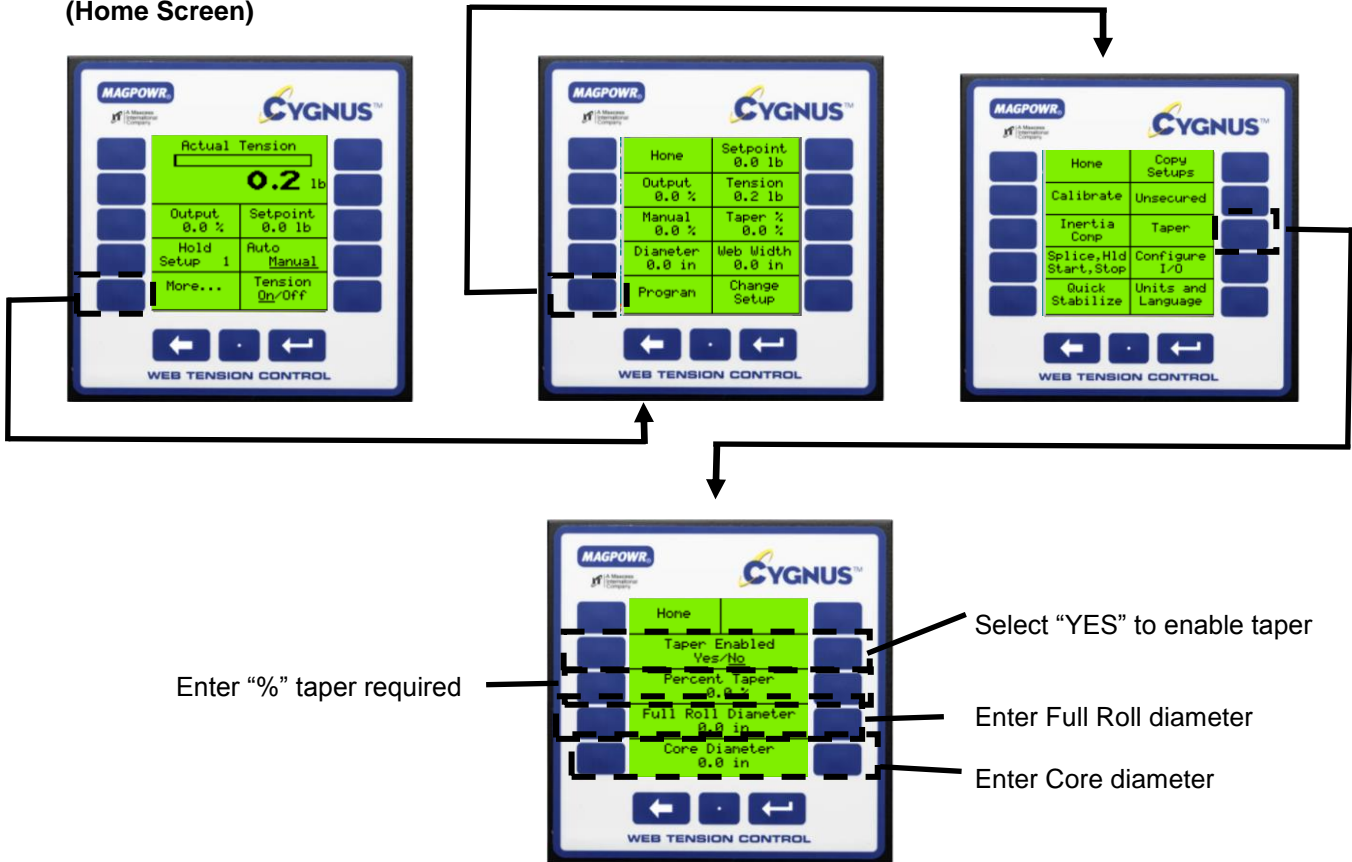

NOTE: "% Taper" is dependent on material and machine type and is totally subjective. Determination of the correct amount of taper for your application is a trial and error process.


OPTIONAL FUNCTIONS

8.3 Inertia / acceleration compensation (optional)

(NOT APPLICABLE FOR READOUT ONLY OPERATION)

This option is used for heavy rolls where the inertia negatively affects stopping and starting and acceleration/deceleration. With this feature the CYGNUS can compensate for the inertia and maintain better control. NOTE: This feature only works with linear ramping of velocity. While Inertia Comp can be used without Auxiliary Inputs, best results will be achieved when using a Diameter Input.

Accel Comp requires a web velocity input, but may be used without a diameter input. For best results, use a DC diameter input.

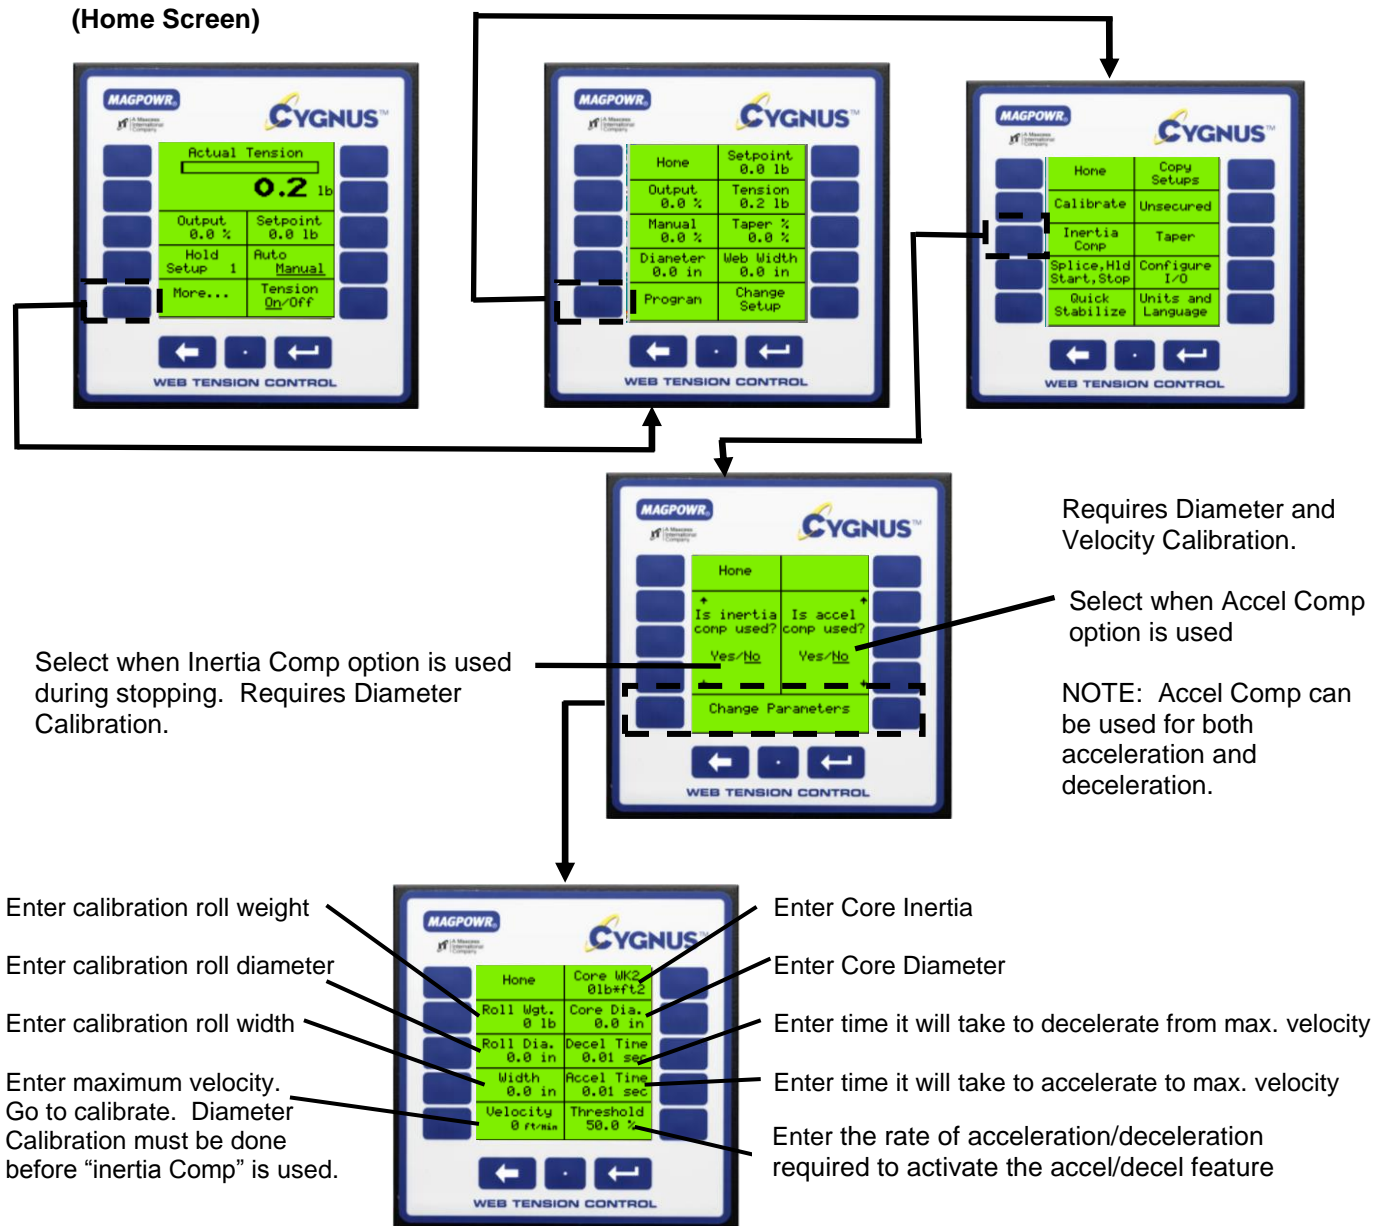


	INERTIA COMP	ACCEL/DECCEL COMP (Velocity sensor and calibration always required)
Best	DC Voltage Diameter Sensor	DC Voltage Diameter Sensor
Better	Calculated Diameter (RPM and Velocity inputs required. Calibration of both required)	Calculated Diameter (RPM input also required. RPM calibration required)
Good	Estimated Diameter	Estimated Diameter

OPTIONAL FUNCTIONS

8.4 Hold level control (optional)

(NOT APPLICABLE FOR READOUT ONLY OPERATION)

Hold Level is used to keep tension in the web after a machine is run through a controlled stop and is at rest. This level is adjustable from 0 to 100% of maximum output and should be set just high enough to prevent roll rotation while stopped, but not higher than necessary, since this value may have a momentary effect on tension at start. Hold level can be configured as a fixed value, to change with output, to change with tension setpoint, to change with diameter, or to change with tension and diameter.

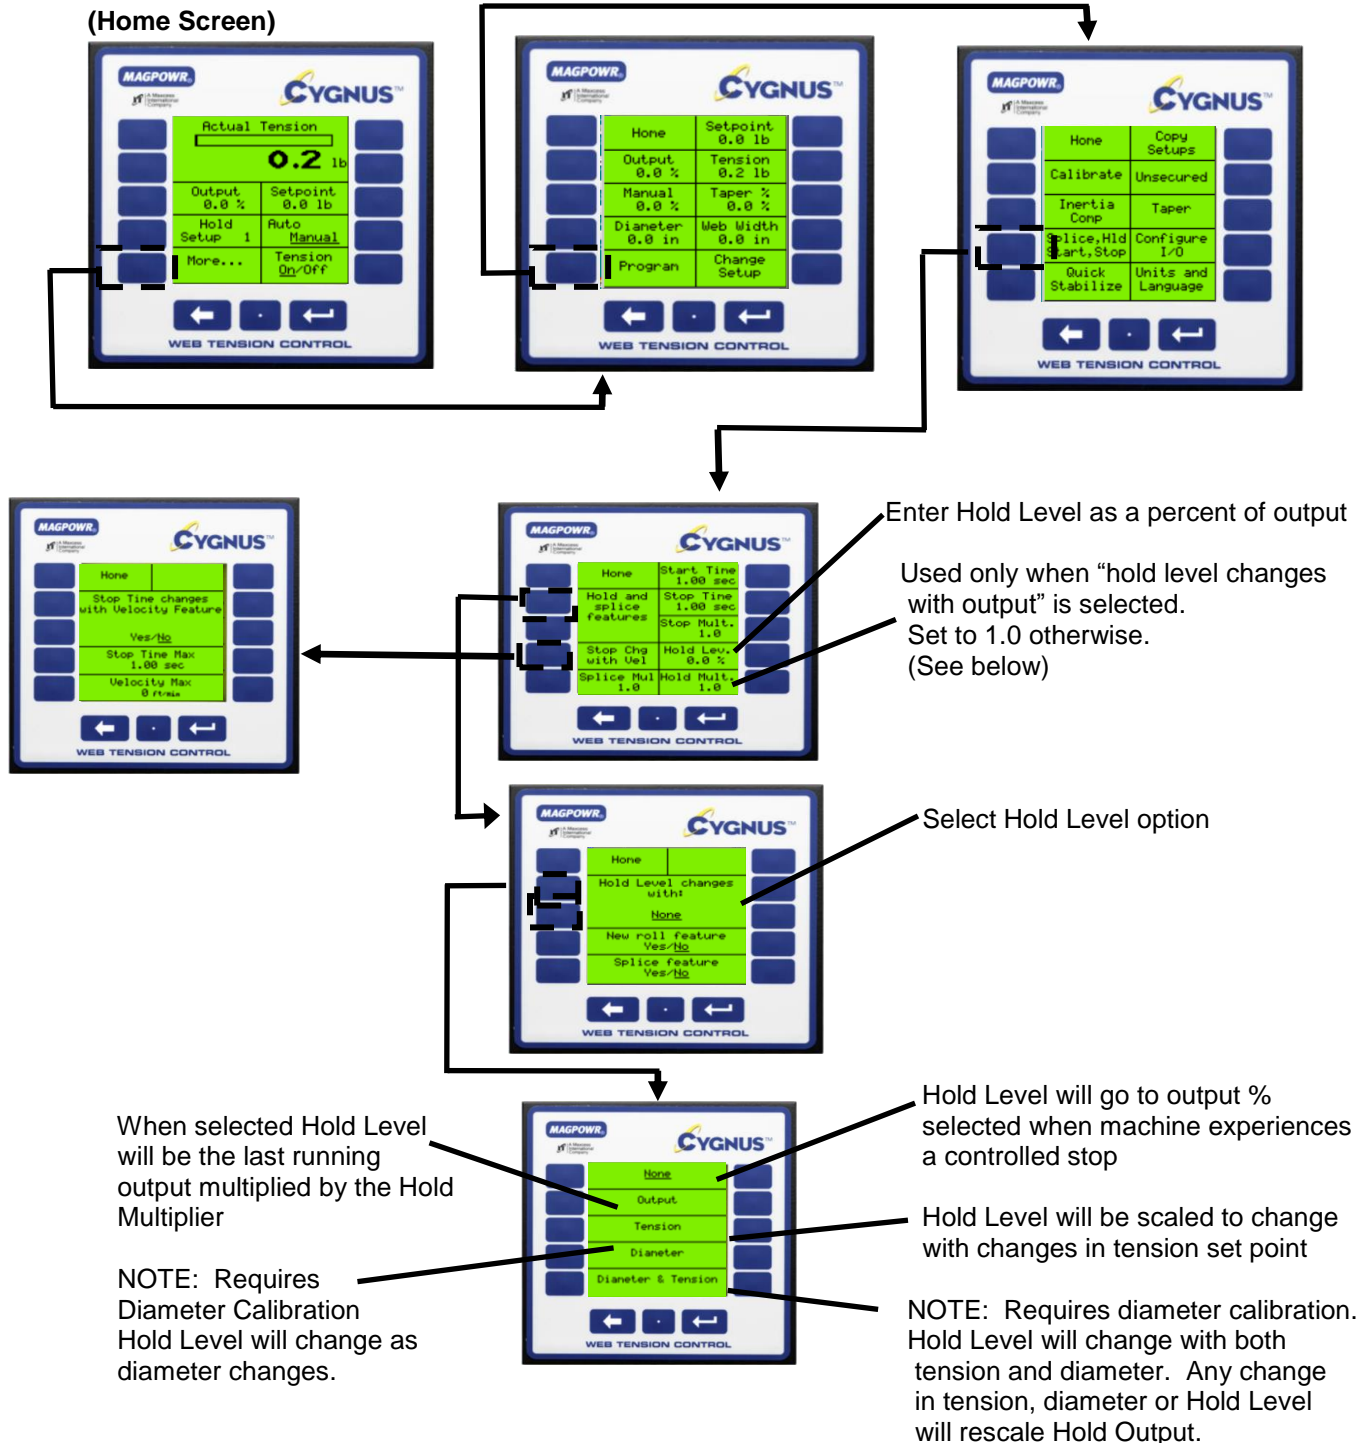


See Section 6.4 for calibration of diameter input devices.

OPTIONAL FUNCTIONS



8.5 Gain scheduling (optional)

(NOT APPLICABLE FOR READOUT ONLY OPERATION)

NOTE: This function requires diameter input and is typically used with large roll builds. It allows one set dynamic tuning parameters at core and a different set at full roll. As the roll changes, diameter the control interpolates all of the parameters to maintain optimized tuning through the entire roll.

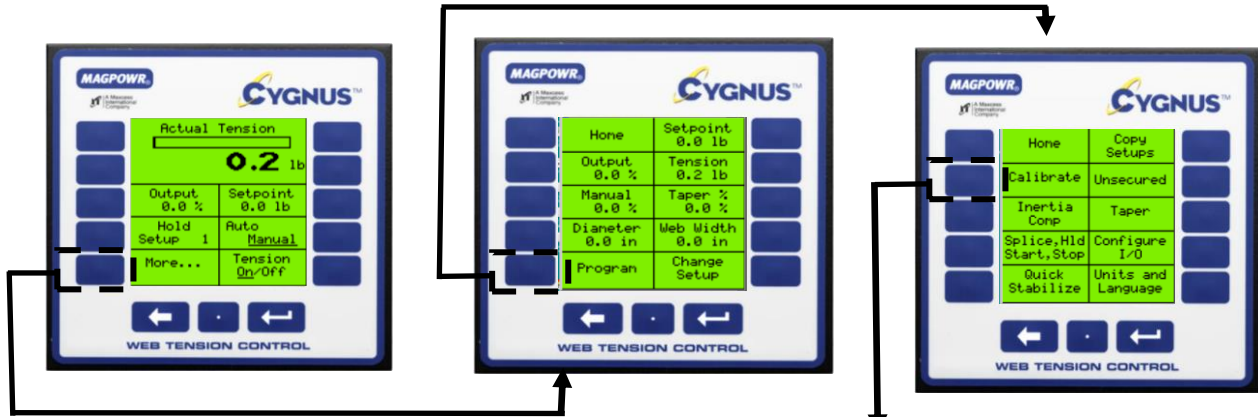


By one of these methods you must tune at full roll and core (See Section 7.3) After tuning at each roll size you must follow these screens to store each value.

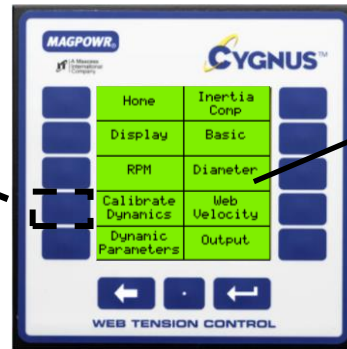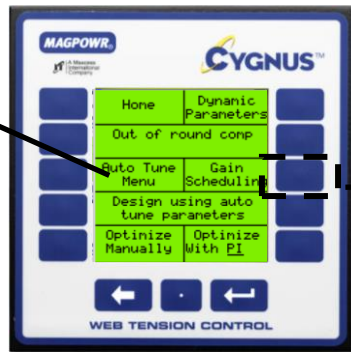

Diameter sensor type must be selected and calibrated (see Section 6.4)


Once you have "Auto Tuned" at core and chosen your design type (ie. P, PI, PID), the parameters may be stored by pressing this key.

If you find you have chosen too aggressive of a design "PID" vs. PI, you can recover previous tuning Parameters without Auto Tuning again.

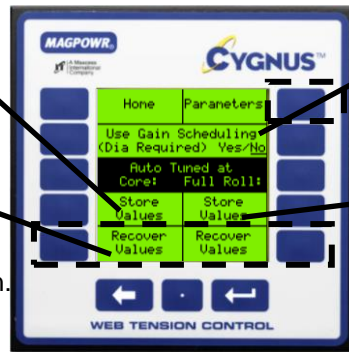

Selecting "yes" will activate Gain Scheduling.

Once you have tuned at full roll, store the values by pressing this key.

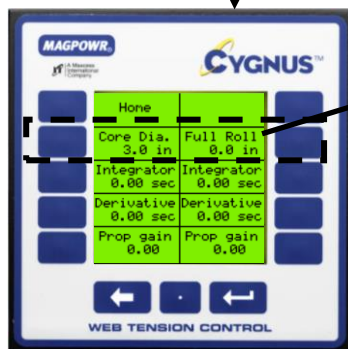

Values will automatically be set if Auto Tune was used.


All tuning parameters can be accessed and edited.

OPTIONAL FUNCTIONS

8.6 Out of round roll compensation (optional)


(NOT APPLICABLE FOR READOUT ONLY OPERATION)

CYGNUS has the unique ability to compensate for the Velocity/Tension transients caused by out of round rolls. This feature requires a roll RPM sensor input into TB4.2 and TB4.3. The RPM sensor must be a pulse type which outputs 1 pulse per revolution of the out-of-round roll. Calibrate RPM sensor per Section 6.4.2 of this manual. (NOTE: The system must be dynamically tuned before enabling this function.)

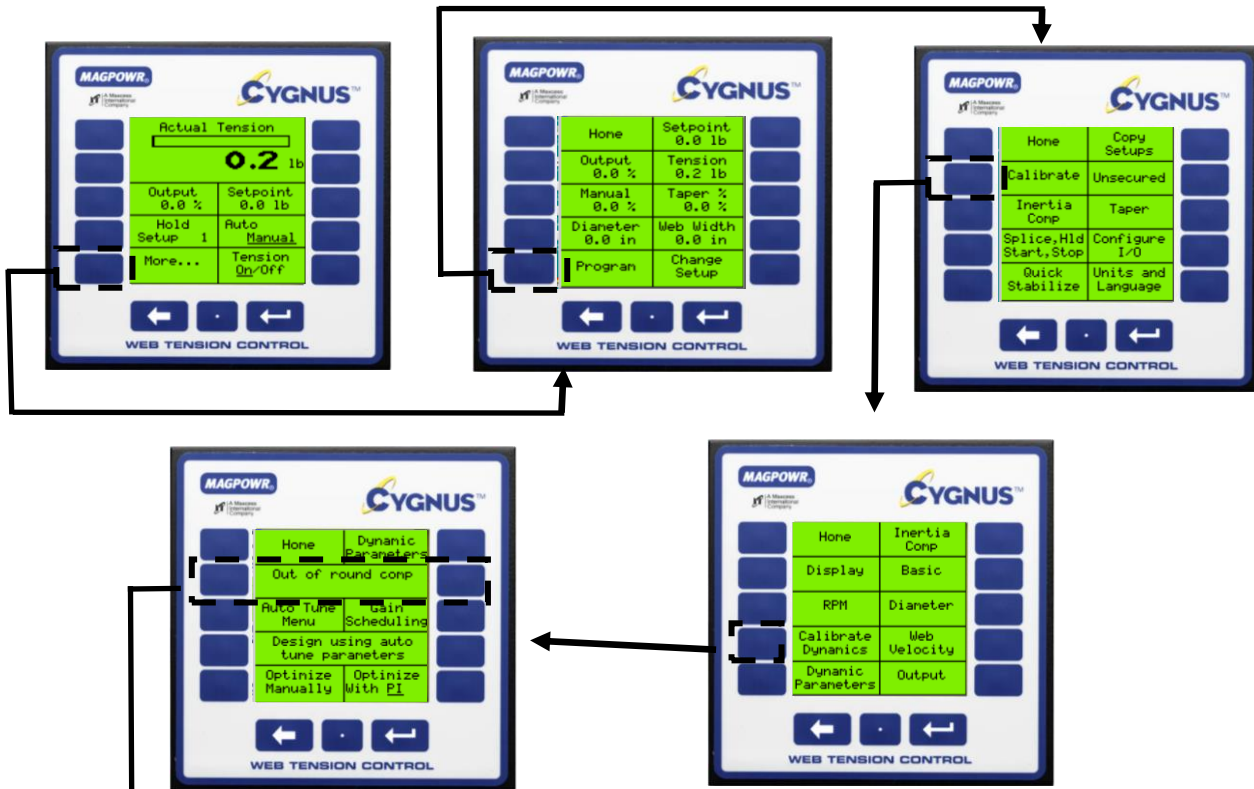

If system is unstable reduce the gain.

Actual RPM will be displayed here once RPM is calibrated.

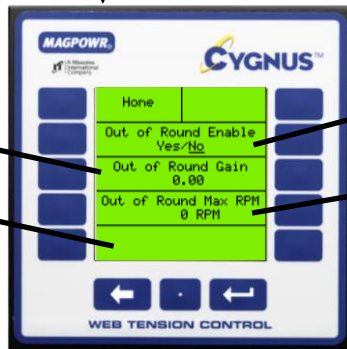

Select yes to enable out of round roll configuration.

This is "NOT" maximum roll RPM. This value is set automatically after you "Auto Tune" the system, and is the maximum RPM the out of round roll comp can tolerate. This is the cut-off RPM to ensure you are not crossing the natural frequency of the system. If the system will not stabilize, set this value below the RPM at which oscillations start.

OPTIONAL FUNCTIONS

8.7 Alarms (optional)

The Alarm Output is used to detect low or high tension and provide indication to an outside device. It is typically used for "Web Break Detection".




OPTIONAL FUNCTIONS

8.8 Splice features (optional)

(NOT APPLICABLE FOR READOUT ONLY OPERATION)

The CYGNUS contains helpful splice tools that control output during a splice and can reduce the tension transients typically experienced during a splice.

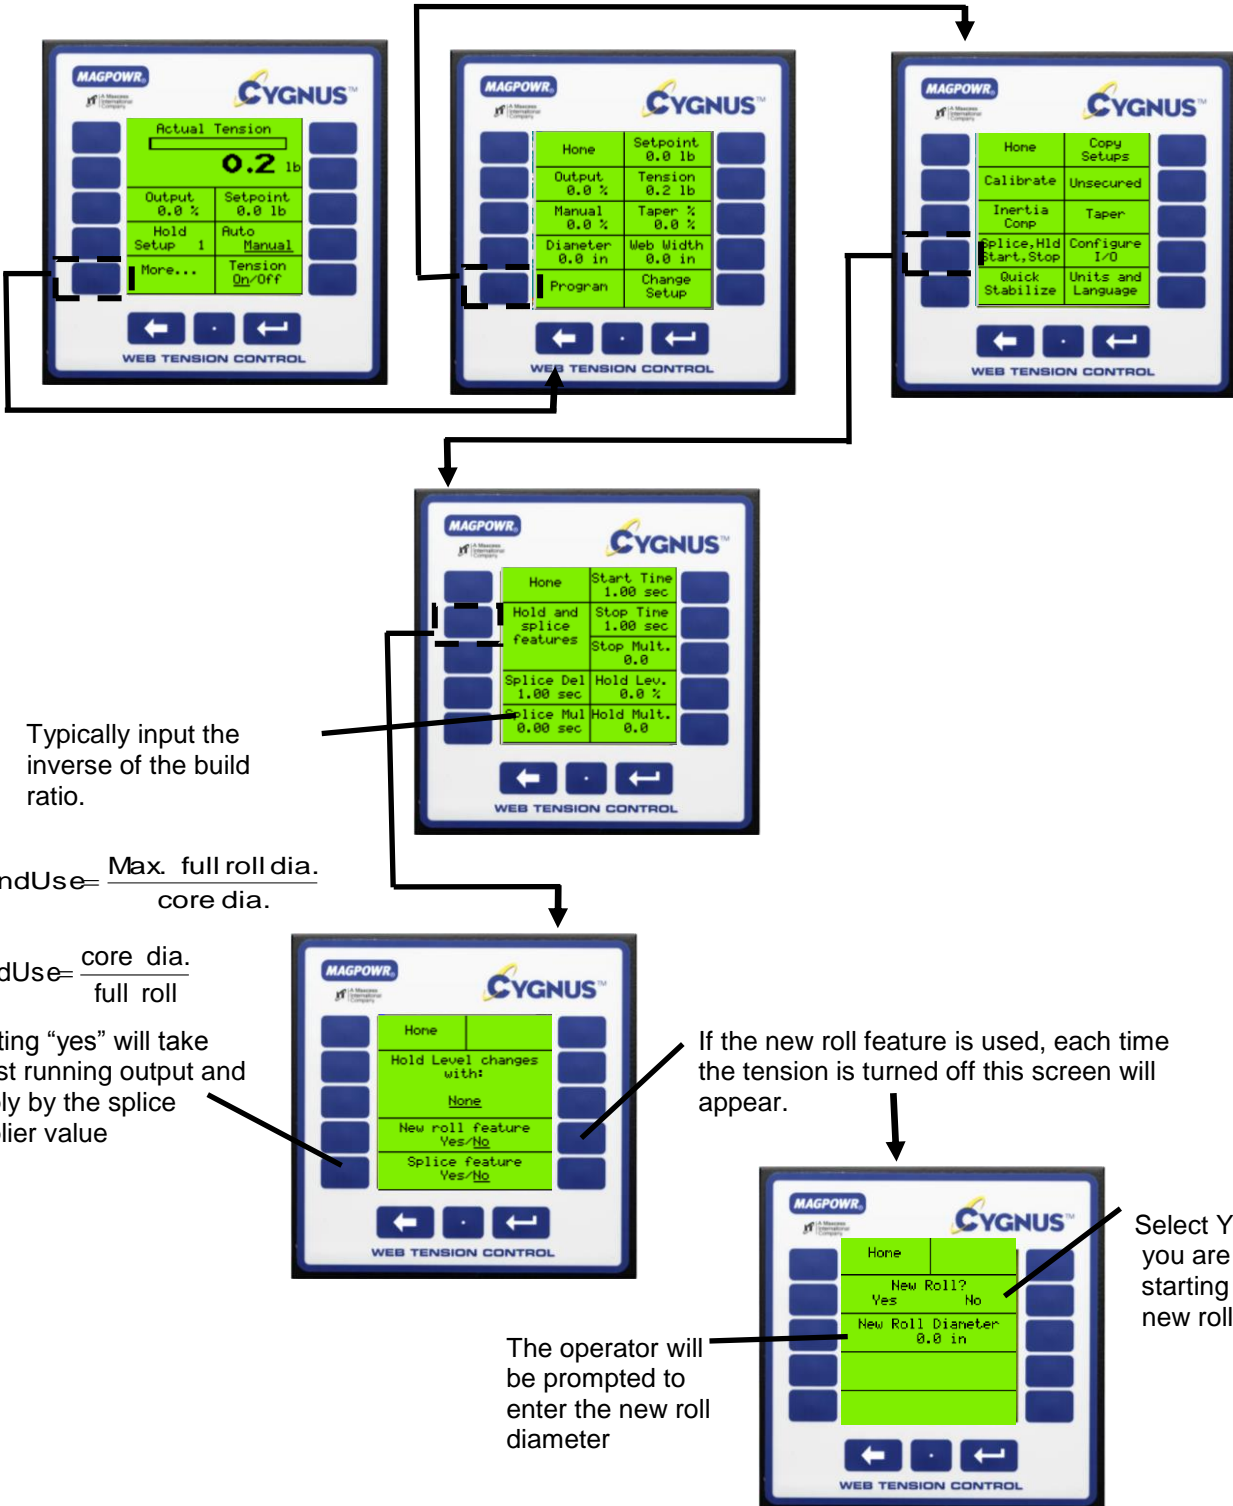

OPTIONAL FUNCTIONS

8.9 Inverse diameter output (optional)

(NOT APPLICABLE FOR READOUT ONLY OPERATION)

The inverse diameter output function is used to slow the motor/drive input RPM to a clutch as a rewind roll builds. This minimizes the slip watts required to be dissipated by the clutch and extends clutch life. This connection is labeled 1/D and is connected between TB4.3 and TB4.4




Note: this is The screen you Get on the emulator

CYGNUS has two control outputs. One is isolated and one is non-Isolated. Select the appropriate Isolation for your 1/Dia output requirements.

OPTIONAL FUNCTIONS

8.10 Communication (optional)

The CYGNUS connects to an Ethernet, DeviceNet or Profibus-DP bus through an optional HMS fieldbus system gateway. The gateway formats the data for the specific field bus. See Figures 2 & 3 for HMS gateway card installation. See COMMKIT manual for function address locations.

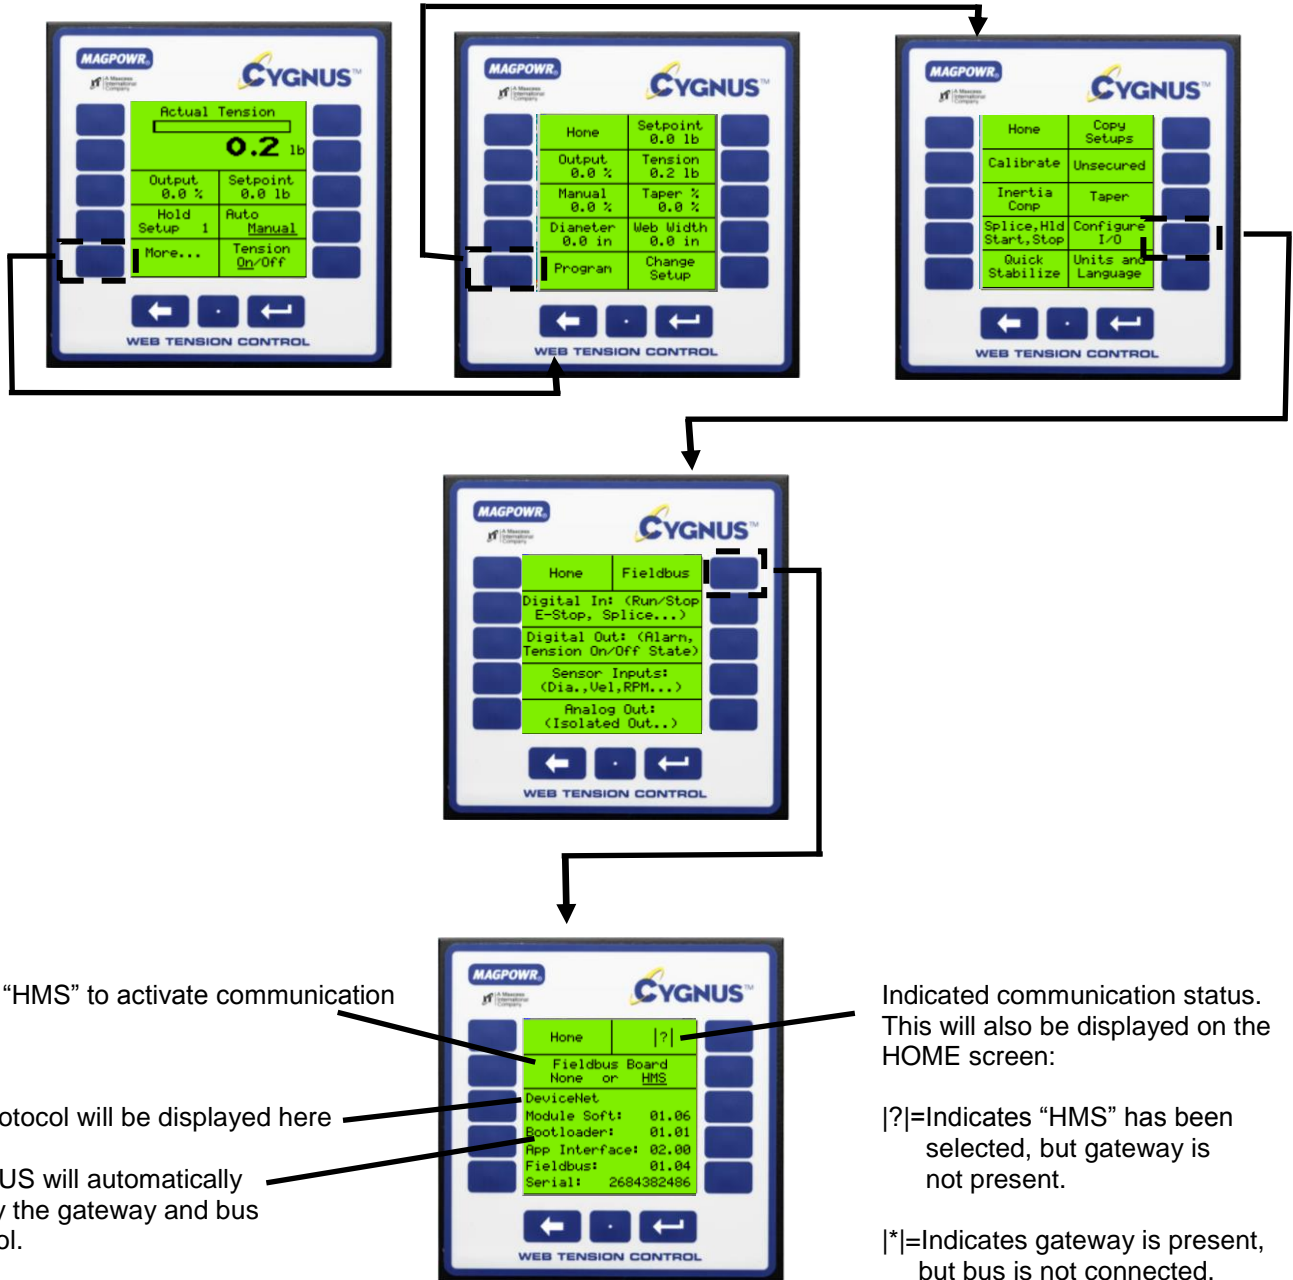


Refer to COMMKIT instruction manual for interface card setup instructions and a list of parameters.

OPTIONAL FUNCTIONS

8.11 Setups


The CYGNUS stores up to (10) individual setups for machines that run multiple materials. Individual setups can include different tuning parameters, hold levels and tension set points. Each is independent of the other setup but can be copied if many parameters are similar.

8.11.1 Changing from one set-up to another

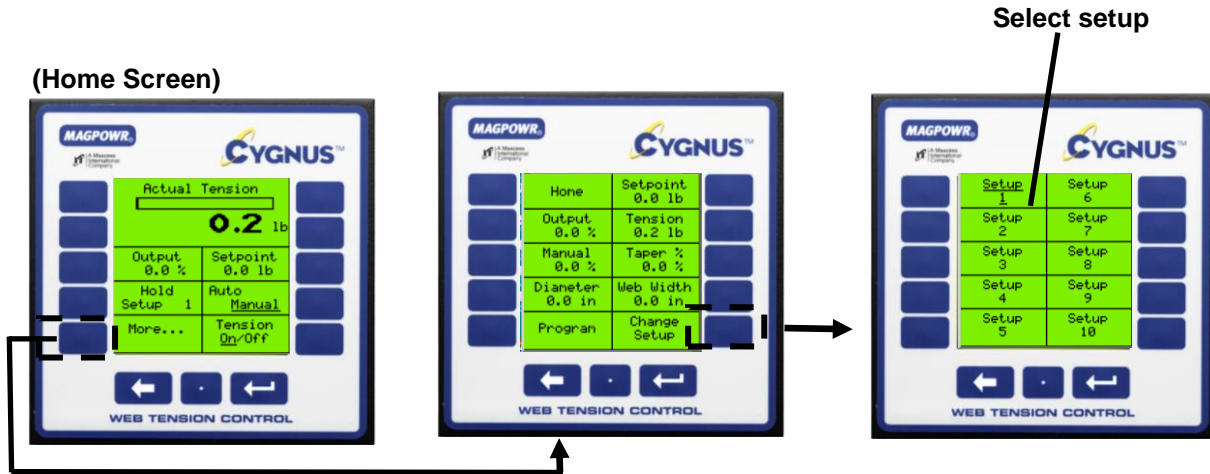

8.11.2 Copy setups


A time-saving shortcut when setting up two similar setups is to copy from one to another.

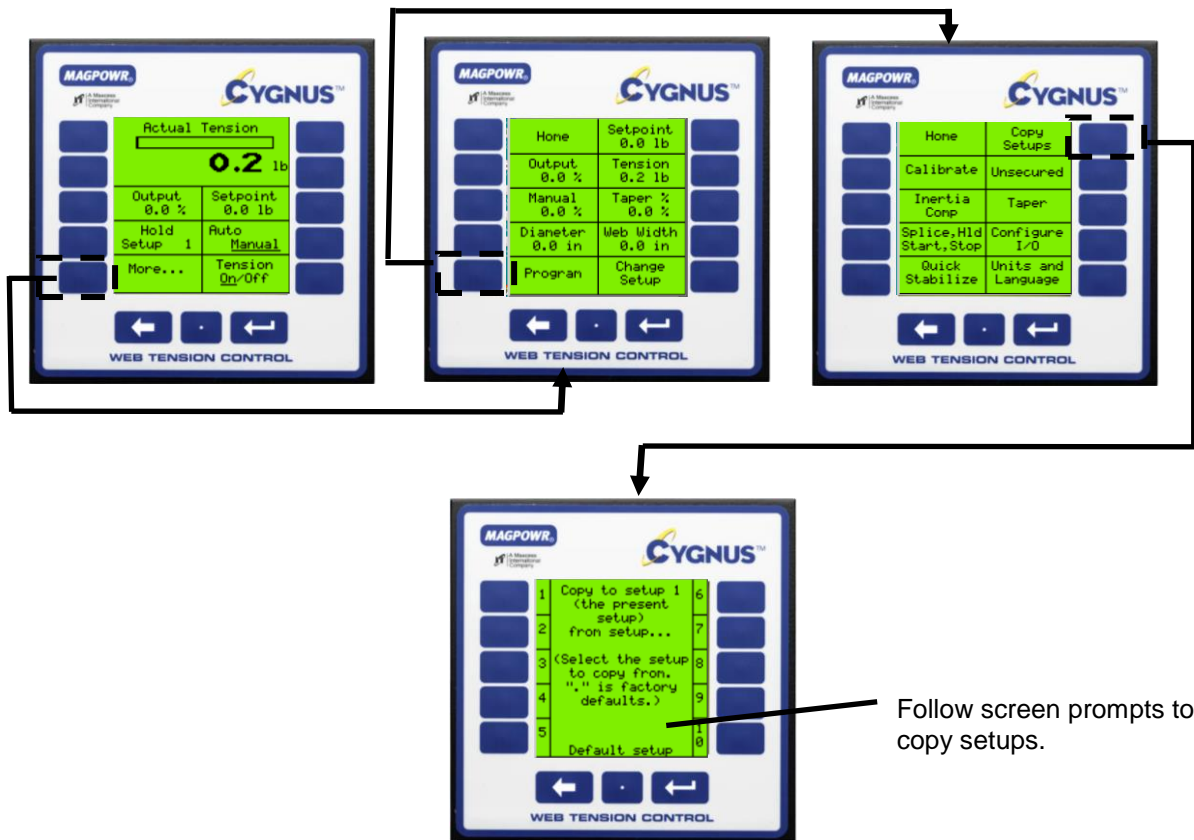


OPTIONAL FUNCTIONS

8.12 Security lock out

This function allows you to lock all tuning, calibration and configuration parameters to prevent unauthorized tampering. Operators will still have access to tension set point, tension on/off, auto/manual, manual output and set-up changes. (NOTE: When selecting a security code be sure to record it in the space provided below).

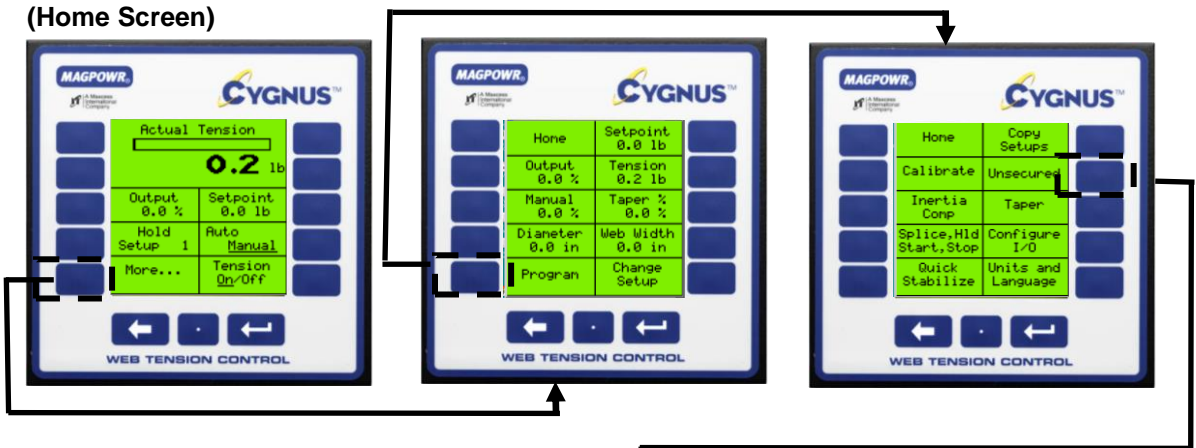

Record Security Code Here:

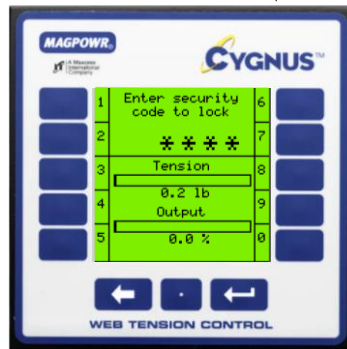

1. Enter 4 digit security code.
2. Screen will prompt you to re-enter code for confirmation.
3. Record code in manual.
4. Once code is confirmed a pop-up screen will appear acknowledging code has been accepted.
5. To un-secure control refer to above procedure and follow screen prompts.

9.0 Troubleshooting

Problem	Possible Cause	Solution or Diagnostic
Activating Gain Scheduling caused instability, and deactivating did not cure.	Gain Scheduling configured incorrectly.	See Section 8.5
Auto tune message: "...if oscillations do not stop within 15 cycles." <hr/> Auto tune message: "Oscillations should start within 10 sec..."	Oscillations in the tension in Manual mode are too large compared to the disturbance introduced by Auto tune.	See Section 7.3 Increase the Disturbance Level Percentage used during Auto tune.
Cannot change Digital Input Mode because the message "Not Allowed. Security Code Set or Not Stopped or Not In Manual" even though this does not seem to be true	E-Stop Incorrectly Active because Digital Input Mode was selected "High" but E-Stop was wire active low (or the other way around).	Correct the E-Stop wiring or switch to Manual mode in order to be able to change the Digital Input Mode at Home>>More...>>Program>>Configure I/O>>Digital In:
Message: "Gain Scheduling was not successful."	Gain Scheduling configured incorrectly.	See Section 8.5
Message: "Out of Round Roll compensation has been turned off."	Quick Stabilize always turns off Out of Round Roll compensation as a first step in regaining stability.	See Sections 7.1 and 9.2
Message: "Voltages do not match this load cell type"	Incorrect load cell connections	From the screen that gave the message press "Read Voltages" and consult Table?? for diagnostics. This message appears on: Home>>More...>>Program>>Calibrate>>Basic>>Diagnose Sensor.
	Wrong load cell type selected.	Navigate to Home>>More...>>Program>>Calibrate>>Basic And toggle Load Cell Type.
"Not successful" during Auto tune.		Make sure that the tension has been properly calibrated. Auto tune will not be successful if web is not moving or tension is not being measured.
"Not successful" when attempting to design using Auto tune parameters.	This message occurs when the Auto tune has not been completed successfully.	Make sure that Auto tune was run successfully. If pressing "Stop" interrupted Auto tune, Auto tune is not successful. Make sure that the tension has been properly calibrated. Auto tune will not be successful if web is not moving or tension is not being measured.
Output always high	E-Stop Active (unwinds)	(See above.)

TROUBLESHOOTING

Problem	Possible Cause	Solution or Diagnostic
	Process not running, but Cygnus is in Auto mode.	When the process is not running the tension control system is open loop. If the tension is even slightly below Setpoint, the Cygnus will turn full on attempting to correct the tension.
Output always low	Tension ON/OFF set to OFF	If "Tension On/Off Mode is set to "Toggle", from "Home" press Tension On/Off once. If "Tension On/Off Mode is set to "Level", one or more of the external Tension On/Off switches are active. "Active" depends upon the Digital Input Mode
	E-Stop Active (All control types except unwind)	For safety reasons E-Stop occurs with an open circuit. The logic is therefore different than the other digital inputs. E-Stop can also be mistakenly activated by selecting Digital Input Mode Active High when it is wired active low (and the other way around). If it is difficult to change the Digital Input Mode to the correct position, try switching to Manual mode on the Home screen.
	Process not running, but Cygnus is in Auto mode.	When the process is not running the tension control system is open loop. If the tension is even slightly above Setpoint, the Cygnus will turn full off attempting to correct the tension.
Screen blank	Contrast grossly misadjusted.	Remove power. Reapply power and wait 5 seconds to ensure that the Cygnus is on the HOME screen. Hold the decimal point key and the "Enter" key down for more than 2 seconds. The contrast will start changing through its full range of values. When the contrast is nearly correct press any side key. Refine the contrast using the keys marked with the arrows.
Screen difficult to read	Contrast misadjusted	Navigate to Home>>More..>>Program>>Calibrate>>Display and adjust contrast
	Power select switch improperly set.	Set 115/240 vac switch to the appropriate position.
Suspect incorrect tension readings or cannot calibrate load cells.	Incorrect load cell connections.	Navigate to Home>>More..>>Program>>Calibrate>>Basic>>Diagnose Sensor

TROUBLESHOOTING

Problem	Possible Cause	Solution or Diagnostic
Tension unstable	To Quick Stabilize	Navigate to Home>>More..>>Program>>Quick Stabilize>> "Press until stable" to immediately try to stabilize.
	To diagnose	Navigate to Home>>More..>>Program>>Quick Stabilize>> Diagnose And follow the directions.
	Out of Round Roll active and may need adjustment	See Section 9.2

9.1 Out of round roll comp OFF

Message: "Out of Round Roll Compensation has been turned off."

Out of Round Roll Compensation is immediately turned off with the first keystroke of Quick Stabilize. (This does not include minimization of Error Limit.) Continue with Paragraph 9.2.

9.2 Out of round roll comp ACTIVE

Navigate to:

Home>>More...>>Program>>Calibrate>>Calibrate Dynamics>>Out of round comp.

Alternately switch between "Yes" and "No" for Out of Round Enable

If oscillation do not improve when switching to "No":

Press **← >>Optimize Manually>>Quick Stabilize**
And follow the instructions.

If oscillations do improve:

If the instability first occurred at the present RPM set Out of Round Max RPM less than the present RPM as read on Actual RPM.

If the instability first occurred at a lower RPM set Out of Round Max RPM to a value less than that RPM.

(Out of Round Compensation will be disabled for all RPM's greater than Out of Round Max RPM. It may be possible to increase this Max RPM somewhat by reducing Out of Round Gain. Only experimentation can tell. Out of Round Gain is only active while Out of Round Comp is enabled and RPM is less than Out Of Round Max RPM.)

9.3 Auto-tune diagnostics

"Oscillations should start within 10 sec...."

"...if oscillations do not stop within 15 cycles."


Both of these problems can occur if there is an oscillation in the tension while in Manual Mode that is too large compared to the disturbance induced by Auto-Tune. This can often be corrected by either of the following:

- 1) Decrease the magnitude of the oscillation that is present while in manual mode. Note that, since we are in Manual Mode during Auto-Tune, we are talking about an oscillation that is being caused by the user's process, not by the Cygnus. Such oscillations could be caused by out of round rolls, failed bearings, etc. The magnitude of such oscillations can often be reduced by running at slower speed while Auto-Tuning.
- 2) Increase the Disturbance Level Percentage used by Auto-Tune. This level can be edited on the Auto-Tune menu. (**Home>>More...>>Calibrate>>Calibrate Dynamics>>Auto Tune Menu**). When Auto-Tune is started, the output will switch around the Manual Percentage by this amount in order to introduce an intentional disturbance in the tension. The user should be careful not to increase the Disturbance Level so much that damage will occur. Note that the Disturbance Level Percentage is a percentage of the Manual Level. (e.g. if Manual Level = 30%, and the Disturbance Level = 10% then the output will switch between 27% and 33%.

If neither of these is successful, Optimize Manually may be used.

9.4 Load cell diagnostics

The CYGNUS features diagnostic tools for load cells. The values displayed in the “Diagnose Load Cell” screens may aid in diagnostics. Refer to Table 1 for possible faults.

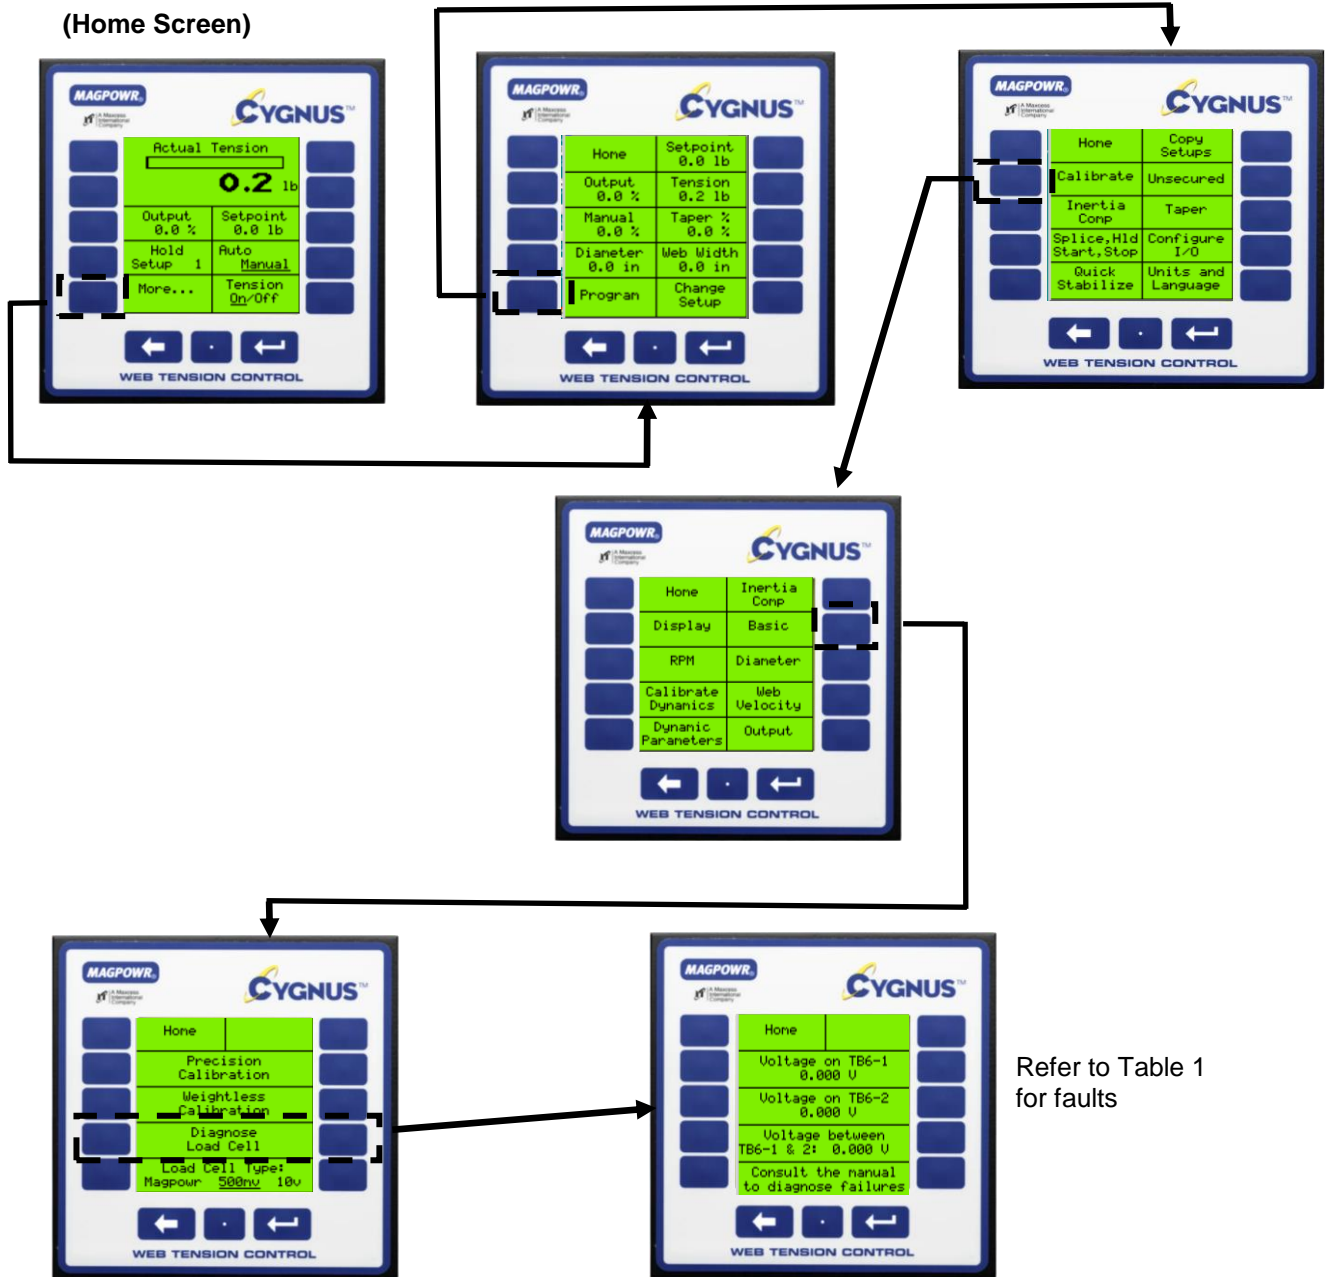

Refer to Table 1 for faults

TROUBLESHOOTING

Table 1. Load cell diagnostics

21 mv Load Cells									
All voltages without a code that are not in the Normal Range are unspecified faults.									
Normal Range is 0.00 VDC +/- 0.25 VDC									
	TB6-2 (S+)	-5.000	-1.667	-1.000	0.000	1.000	1.667	2.500	5.000
TB6-1 (S-)									
-5.000		A			D				
-1.667			J		M		G		
-1.000						P			
0.000		C	L		Normal		O		E
1.000				Q					
1.667			H		N		K		
2.500								I	
5.000					F				B

CODE	21 mv Load Cells (Could be either load cell or cable) Probable Fault
A	TB6-4 (P+) open
B	TB6-3 (P-) open
C	TB6-4 (P+) to TB6-2 (S+) leg open
D	TB6-4 (P+) to TB6-1 (S-) leg open
E	TB6-3 (P-) to TB6-2 (S+) leg open
F	TB6-3 (P-) to TB6-1 (S-) leg open
G	(TB6-4 (P+) and TB6-2 (S+) reversed) or (TB6-3 (P-) and TB6-1 (S-) reversed)
H	(TB6-4 (P+) and TB6-1 (S-) reversed) or (TB6-3 (P-) and TB6-2 (S+) reversed)
I	P- is wired to Ground. Should be wired to TB6-3.

CODE	21 mv Load Cells (Could be either load cell or cable) Probable Fault
J	TB6-4 (P+) open
K	TB6-3 (P-) open
L	TB6-4 (P+) to TB6-2 (S+) leg open
M	TB6-4 (P+) to TB6-1 (S-) leg open
N	TB6-3 (P-) to TB6-2 (S+) leg open
O	TB6-3 (P-) to TB6-1 (S-) leg open
P	(TB6-4 (P+) and TB6-2 (S+) reversed) or (TB6-3 (P-) and TB6-1 (S-) reversed)
Q	(TB6-4 (P+) and TB6-1 (S-) reversed) or (TB6-3 (P-) and TB6-2 (S+) reversed)

Voltage one either TB6-1 (S+) or TB6-2(S+)	500 mv Load Cell Probable Fault
Negative	Wired to -5 Vdc. Should be wired to Ground
0.000	Wired to -5 Vdc. Should be wired to Ground
	Signal and Ground leads reversed.
	Power lead open
2.500	Normal voltage
5.000	Ground lead open
	Signal and Power leads reversed.

9.5 Gain scheduling diagnostics

9.5.1 System is unstable

Problem: The system becomes unstable as soon as Gain Scheduling is activated and stays unstable even if Gain Scheduling is then deactivated.

Explanation:

When Gain Scheduling is activated the PID values are all overwritten by values determined from the Gain Scheduling parameters. Disabling Gain Scheduling fixes PID at these new parameters which may or may not be stable. Continue below for a complete description of Gain Scheduling.

9.5.2 Gain Scheduling problems

"Gain Scheduling Was Not Successful"

See Gain Scheduling Theory, section 9.6. For Gain Scheduling to work properly the following are all needed:

- 1) A properly calibrated diameter signal (voltage, velocity/RPM, or Fieldbus are all valid)
- 2) A set of PID values that gives a stable system at core and the diameter that corresponds to that system.
- 3) A set of PID values that gives a stable system at full roll and the diameter that corresponds to that system.
- 4) A finite value of Overall Gain. The factory default of 1.0 should normally be used. If the system is stable at core and at full roll but is unstable at an intermediate roll, the Overall Gain can be reduced to give a stable system. This is done automatically when using Quick Stabilize while Gain Scheduling is active. Quick Stabilize is available at:

Home>>More..>>Program>>Quick Stabilize

9.6 Gain scheduling theory

Note that a properly calibrated diameter sensor is needed for gain scheduling.

When Gain Scheduling is active, stability and tuning are affected by:

- Overall Gain,
- Error Limit,
- Present Diameter,

- Proportional Gain at Core,
- Integrator Time at Core,
- Derivative Time at Core,
- Core Diameter

- Proportional Gain at Full Roll,
- Integrator Time at Full Roll,
- Derivative Time at Full Roll,
- Full Roll Diameter.

The current, active dynamic tuning parameters (PID) are interpolated between the core PID values and the full roll PID values using the present diameter (as read by the diameter sensor). The core and full roll PID values can be edited directly at

Home>>More...>>Program>>Calibrate>>Dynamic Parameters>>Gain Sched Parameters

Or at

Home>>More...>>Program>>Calibrate>>Calibrate Dynamics>>Gain Scheduling>>Parameters

The PID values at core and at full roll can also be generated using Auto tuning or using Manual Optimization. (See appropriate section in this manual.) Whatever method is used a valid set of PID parameters must be generated at core and another valid set of PID parameters must be generated at full roll.

After the valid set of PID parameters is generated it can be automatically stored as Gain Scheduling parameters by going to:

Home>>More...>>Program>>Calibrate>>Calibrate Dynamics>>Gain Scheduling

and then press "Store Values" for either values tuned at core or for values tuned at full roll.

9.7 Auto tune and gain scheduling

Auto tuning with Gain Scheduling usually consists of the following steps:

1. With Run Auto tune at core (or full roll) to generate the Auto Tune Parameters.
2. (Home>>Program>>Calibrate>>Calibrate Dynamics>>Auto Tune Menu)
3. With Gain Scheduling disabled design a control (PID, PI, or I only) using these Auto Tune Parameters.
4. Go to >>Gain Scheduling (full path Home>>Program>>Calibrate>>Calibrate Dynamics>>Gain Scheduling) and press “Store Values” for “Tuned at Core:” (or for “Tuned at Full R:”).
5. Repeat steps 1 to 3 for full roll.
6. Select “Use Gain Scheduling” “Yes”.

The above “store” operation stores these Auto Tune Parameters and the diameter along with the PID parameters. If the user wishes to design a different controller

Home>>More..>>Program>>Calibrate>>Calibrate Dynamics>>Gain Scheduling>>Recover Values

can be used to recover these Auto Tune Parameters. After a new design is completed the new PID values must be stored again in the appropriate set of data (core or full roll) using:

Home>>More..>>Program>>Calibrate>>Calibrate Dynamics>>Gain Scheduling>>Store Values

SCREEN DEFINITIONS

10.0 Screen definitions, alphabetical

The descriptions of individual screen functions is provided to aid the understanding of the control operation. Calibration and tuning procedures included in this manual must be used for proper operation. The information contained in this section is not sufficient to allow proper set-up.

Screen Function	Definition
Accel time ___sec	Enter a value for the amount of time in seconds that it takes to accelerate the machine from stopped to maximum operating speed
Adjust contrast	Adjust the display appearance by pressing 4 to increase contrast or 9 to reduce contrast
Analog I/O: (sensor type, isolated out...)	Select to configure load cell input and control output modes
Auto / Manual	Toggles between Manual and Automatic modes; see also RUN, HOLD, MANUAL, STOP, START, and SPLICE
Auto tune menu	Select to access the auto tune options
Auto tune start / stop	Toggle to begin or end auto tune feature. CYGNUS will use the DISTURBANCE LEVEL to create an unstable condition and then design the optimum tuning parameters to correct it.
Bar graph rate	Enter a value for the rate in seconds that the bar graph display updates. Default value = 0.1 sec.
Basic	Select to enter system type selection (Unwind, Rewind, etc.) and load cell calibration
Cal ten ___	Enter a value corresponding to the amount of known weight to be used to calibrate the load cell(s). See also Section 6.3
Calibrate	Select to enter sensor and system calibration options.
Calibrate Dynamics	Select to enter tuning parameter calibration options including out of round roll compensation, gain scheduling, and dynamic tuning
Calibrate inertia/accel comp	Display directs the operator to calibrate the present diameter (entered by the operator) with the current output to the torque device. This step is critical.
Calibrate isolated output	Select to enter control output calibration menu. Use a multimeter to set the high and low ends of the control signal output as appropriate for your equipment. (not normally required.)
Calibrate non isolated output	Select to calibrate inverse diameter output. See also Section 8.9
Calibrate setpoint ___ [diameter]	Enter a value corresponding to the present diameter of the roll being measured by the diameter sensor
Calibrate setpoint ___ [web velocity]	Enter a value corresponding to the present speed of the web being measured by the velocity sensor

SCREEN DEFINITIONS

Screen Function	Definition
Calibrate setpoint ___RPM	Enter a value corresponding to the present speed of the roll being measured by the RPM sensor
Calibrate tension meter output	Select to calibrate the 0 to 1 mADC auxiliary tension meter output (Not normally required)
Calibration single pt/two pt	Toggle between single or two point diameter sensor calibration. Two point is more accurate
Change parameters	Select to access inertia and acceleration compensation parameters
Change Setup	Select to enter setup selection screen. Up to ten different setups may be stored to allow different setup parameters to be accessed quickly. This feature is useful when one machine is used to run more than one material; also see COPY SETUP
Configure I/O	Select to enter CYGNUS inputs and outputs configuration
Consult the manual to diagnose failures	Display message advises you to consult the manual if the voltages present do not agree with the expected values. See section 6.3.3 of this manual for further instructions
Copy Setup	Select to enter setup copy options. You will be prompted to select a setup number to copy to the current setup number. You will then be prompted to choose either a complete copy of all settings, a copy of sensor calibrations only, or to exit without copying anything. If you choose to exit without copying, you must recalibrate sensors for the new setup number.
Core diameter___	Enter a value for the diameter of the core
Core WK ² ___	Enter a value for the inertia of your core. A core may be approximated as a solid disk, for which the inertia is calculated by multiplying half the weight with the radius squared: $inertia = (WK^2) = (W)*(R^2)$. (Core weight must include the shaft or chucks.)
Decel time ___ sec	Enter a value for the amount of time in seconds that it takes to decelerate the machine from max operating speed to a complete stop
Derivative ___sec	Enter a value for the derivative time. This tuning parameter helps to prevent overshooting of the setpoint while tension deviations are corrected. decreasing this value can improve stability.
Design using auto tune parameters	Select to enter control design method configuration by choosing PI, PID, or I only. The design can be changed without re-tuning.
Diagnose Load Cell	Select to enter load cell diagnosis screen
Diameter	Select to enter calibration of an external diameter sensor. Diameter sensor input must be active; see also CONFIGURE I/O

SCREEN DEFINITIONS

Screen Function	Definition
Diameter sensor type	Toggle to activate diameter sensing capabilities. Select "Voltage" if your diameter sensor provides a 0 to 10 VDC output. Select "Estimated" to allow the CYGNUS to estimate the present diameter based upon the parameters you provide - see also CALIBRATE INERTIA/ ACCEL COMP. Select "Velocity/RPM" if you have velocity and RPM sensors present for the same roll. Select NONE if diameter will be set by a fieldbus.
Diameter, Vel., RPM sensor types	Select to enter analog input screen. This is where you will configure velocity, RPM, and diameter sensor inputs for use.
Digital in: (run/stop, e-stop, splice...)	Select to enter digital input configuration screen. See also DIGITAL INPUT VOLTS, DIGITAL INPUT MODE ACTIVE:, RUN/STOP INPUT, SPLICE INPUT, and TENSION ON/OFF MODE
Digital input mode active	Toggle to select high active or low active as appropriate
Digital input volts	Toggle to select the input voltage for digital control inputs. See also RUN/STOP INPUT, SPLICE INPUT, and TENSION ON/OFF MODE
Digital out: (alarm, tension on/off state)	Select to enter digital output configuration screen. See also DIGITAL OUTPUT MODE, TENSION ALARM DELAY
Digital output mode	Toggle to set alarm output levels
Display	Select to enter display calibration options
Display rate	Enter a value for the rate in seconds that the digital display updates. Default value is 1.0 sec.
Disturb level ___%	Enter a value for the disturbance level to be used during AUTO TUNE; default is 10%. The disturbance level is a percentage of the present MANUAL LEVEL. See also AUTO TUNE START / STOP
Dynamic Parameters	Select to enter tuning parameter screens
E-Stop	Display indicates the present mode of operation is "emergency stop". This mode is triggered when TB3.3 and TB3.2 are opened. Output goes immediately to 100% for UNWIND mode and 0% for all other modes. Terminals TB3.2 and TB3.3 must be closed and the connection for TB3.1 and TB3.2 must be toggled to cancel E Stop mode.
Enter security code to lock	Enter the four digit code desired to limit access to CYGNUS settings. See also SECURED and UNSECURED

SCREEN DEFINITIONS

Screen Function	Definition
Error lim ___%	Enter a value for the error limit between 10% and 100%. The error limit aids the tuning process by setting a boundary for the actual tension error that CYGNUS will recognize during control corrections. Smaller values for the error limit will lengthen the amount of time necessary for CYGNUS to correct large tension transients. See also PRESS UNTIL STABLE and MANUALLY ADJUST ERROR LIMIT
Fieldbus	Select to enter Fieldbus configuration screen. This is necessary only if your CYGNUS is equipped with the optional Fieldbus communication card and you wish to use its serial communication capabilities.
Full roll diameter ___	Enter a value in the units specified for the diameter of your roll when it is full
Gain scheduling	Select to access the gain scheduling options. Gain scheduling allows the operator to specify different tuning parameters from full roll to core based upon the changing inertia of a roll. This feature requires a diameter sensor. See also USE GAIN SCHEDULING
Gain scheduling parameters	Select to access the gain scheduling parameters. The operator must store tuning parameters for full roll and core; CYGNUS will then create the values for all points in between. See also USE GAIN SCHEDULING, STORE VALUES and RECOVER VALUES
Hold	Display indicates the present mode of operation is "machine stopped"; this is activated when TB3.1 and TB3.2 are closed and the STOP TIME expires. See also HOLD LEVEL___% , HOLD MULT___ , and HOLD LEVEL CHANGES WITH:
Hold and Splice features	Select to access the menu of HOLD and SPLICE features
Hold level ___%	Enter a value from 0 - 100% that will dictate the control output while CYGNUS is in HOLD mode. The tension display will function normally during this time
Hold level changes with: diameter	Toggle to change the HOLD LEVEL output according to the present diameter of the roll. This feature provides accurate hold levels that compensate for the changing weight of an unwinding roll and requires the DIAMETER SENSOR TYPE to be properly configured
Hold level changes with: diameter & tension	Toggle to use both HOLD LEVEL CHANGES WITH TENSION and HOLD LEVEL CHANGES WITH DIAMETER
Hold level changes with: none	Toggle to set output during HOLD mode using the HOLD LEVEL ___% parameter
Hold level changes with: output	Toggle to set output during HOLD mode by multiplying the HOLD MULT___ with the last output before the STOP signal was received. This will compensate for the changing weight of an unwinding roll without requiring a diameter input

SCREEN DEFINITIONS

Screen Function	Definition
Hold level changes with: tension	Toggle to change the HOLD LEVEL output by a scaled amount identical to changes made in the TENSION SETPOINT. This feature accommodates changing hold level requirements for different tension setpoints
Hold mult ____	Enter a value to manipulate the control output in HOLD mode when the HOLD LEVEL CHANGES WITH OUTPUT option is selected
Home	Selecting this returns you to the home screen
I only	Toggle to design a control loop with INTEGRATOR only
If stable and the above optimization has been done...	Display prompts the operator to perform manual optimization while the roll is near core
If stable, optimize first at full roll	Display prompts the operator to perform manual optimization while the roll is full
Inertia comp	Select to enter Inertia compensation options. Inertia compensation allows CYGNUS to account for the different characteristics of roll behavior with the weight of a full roll versus the weight of the roll at core to provide improved tension control while accelerating and stopping.
Integrator ____sec	Enter a value for the integrator time, which is the amount of time elapsed between control corrections. A value that is too high will make the system less responsive to tension errors, while a value that is too low will make the system quick but unstable. Factory default setting is 2 seconds.
Is accel comp used?	Toggle YES or NO to activate the acceleration compensation feature. This feature uses the parameters CORE WK2, ROLL WGT ____, CORE DIA ____, ROLL DIA ____, WIDTH ____, VELOCITY ____, and THRESHOLD ____% to adjust the control loop to provide improved tension control during the special conditions of acceleration and deceleration. A velocity sensor is required.
Is inertia comp used?	Toggle YES or NO to activate the inertia compensation feature. This feature uses the operator entered values for CORE WK2, ROLL WGT, CORE DIA ____, ROLL DIA ____, DECEL TIME__ SEC, and ACCEL TIME __SEC to adjust the applied stopping torque to fit the changing requirements of a roll as its weight decreases during the unwind operation. The effect is improved control of tension during stops throughout the unwind process. Diameter must be calibrated.
Isolated out modes (4-20 ma, 10v, +/- 10v)	Toggle the control output mode. Verify which is correct by checking the specifications for the device that the CYGNUS control output is connected to.
Isolated out use	Toggle to select which output, torque or 1/D, is isolated. For more information on 1/D, see also Section 8.9
Language	Toggle preferred language to view all screens in: English, French, German, Spanish, or Italian

SCREEN DEFINITIONS

Screen Function	Definition
Larger roll calibration	Select to enter diameter sensor calibration for the larger diameter of a two point calibration
Length & velocity units	Toggle preferred units for display of diameters, lengths, and speeds
Load Cell rating	Enter a value corresponding to the total load rating of all load cells present at the sensing roll
Load cell type (Magpowr, 500mv, 10v) (See Figure 4 for wiring diagrams)	Toggle the type of load cell input to be used. Magpowr load cells feature a 0 - 21 mVDC signal. CYGNUS will also accept tension inputs of either 0 - 10 VDC or a 0 - 500mVDC signal; check the specifications of your equipment for the proper selection
Manual	Display indicates the present mode of operation is under manual control; see also MANUAL ___%
Manual ___%	When MANUAL mode is selected, the CYGNUS control output is determined solely by the value entered here, representing a percentage of total output possible
Manually adjust error limit	Enter a value of 10 to 100 for the ERROR LIMIT
Max Ten___	Enter a value to set the upper limit of the tension range as read by the load cells. You should choose a value for the max tension that will have room for the highest setpoint tension you plan to run plus any tension errors that may occur during operation within limits of the load cell load rating. This setting also determines the scale for the analog displays.
New roll feature	Toggle yes or no to activate this feature. When activated, CYGNUS will anticipate the added weight of a new roll when starting up after a roll change. When in HOLD mode and TENSION ON/OFF is selected, CYGNUS will prompt the operator to indicate whether a new roll is being added or if the machine was simply stopped part way through the roll
Non-isolated out use	Toggle to select which output, torque or 1/D, is not isolated. For more information on 1/D, see also Section 8.9
Not allowed not running	Display indicates that the feature you are attempting to access is only available when CYGNUS is in RUN mode. Check the HOME screen to verify which mode CYGNUS is currently in
Off	Display indicates the present mode of operation is "tension off". The control output from CYGNUS is 0%
Optimize manually	Select to enter manual optimization procedure. Follow the on-screen prompts to achieve proper tuning settings
Optimize with PI / PID	Toggle DERIVATIVE TIME parameter active during OPTIMIZE MANUALLY. The operator must select the method before tuning
Out of round comp	Select to access the out of round roll compensation configuration menu

SCREEN DEFINITIONS

Screen Function	Definition
Out of round enable	Toggle to activate the out of round feature that will compensate for eccentric rolls in an UNWIND application. This feature requires an external RPM sensor
Out of round gain ____	Enter a value for the PROPORTIONAL GAIN tuning parameter to be used in the control loop while OUT OF ROUND COMPENSATION is active
Out of round max RPM	Enter a value to limit the RPM sensor input in the event that the out of round roll compensation activity approaches the natural frequency of the system. This situation is unlikely, but will become evident if the braking action on the web begins to oscillate out of control during the unwind. If this happens, check the readout of the present roll RPM and set the OUT OF ROUND MAX RPM at some value below this reading.
Output ____%	Display of the current output level from the CYGNUS at TB1.1 and TB1.2, TB1.3, or TB1.4 depending upon which output is utilized
Overall gain ____	Enter a value for the overall gain. This parameter is similar to the PROP GAIN in definition, however, it is always present and multiplied through the control signal regardless of other settings. Factory default is "1" and it is not normally recommended that you modify this unless you are using the GAIN SCHEDULING feature. In this case, the overall gain can be manipulated to improve stability at mid-roll.
Percent Taper ____%	Enter a value to taper tension down as roll builds during REWIND mode. This will help reduce the pressures that build in rolls as consecutive layers are wound and can reduce or eliminate the unwanted effects such as crushed cores, starring and telescoping rolls.
Perform calibrate	Select to continue with tension sensor calibration. Follow the on-screen prompts for the subsequent steps. See also Section 6.3
PI	Toggle to utilize a control loop with PROPORTIONAL GAIN and INTEGRATOR. Manual tuning only.
PID	Toggle to utilize a control loop with PROPORTIONAL GAIN, INTEGRATOR, and DERIVATIVE. Manual tuning only.
Precision calibration	Select to enter load cell precision calibration procedure. This will require use of weights and a temporary web that mimics the normal web path around the sensing roll. This is recommended as the most accurate method of load cell calibration. See also Section 6.3
Press here to calibrate diameter	Select 4 or 9 to match the ACTUAL READING ____ with CALIBRATE SETPOINT ____
Press here to calibrate RPM	Select 4 or 9 to match the ACTUAL READING ____ RPM with CALIBRATE SETPOINT ____ RPM
Press here to calibrate velocity	Select 4 or 9 to match the ACTUAL READING ____ with CALIBRATE SETPOINT ____

SCREEN DEFINITIONS

Screen Function	Definition
Press until stable (decrease error lim)	Press either 3 or 8 to decrease the ERROR LIMIT incrementally until the web tension becomes stable. Watch the ACTUAL TENSION display above as you adjust the ERROR LIMIT.
Program	Select to enter programming screens
Prop gain ____	Enter a value for the proportional gain. This tuning parameter adds a correction factor that is proportional to the deviation from the tension setpoint. A higher value will make the system more responsive but a proportional gain that is too high will result in an unstable system. Factory default setting is "0"
Quick Stabilize	Select to attempt to remedy an unstable condition by manipulating the error limit. This feature should be used if the default settings are causing extreme disturbances in the system. After stabilizing with this method, it is necessary to tune the system. See also Section 7.0
Rating	Enter a value for the max combined load rating of your load cell(s) as specified by the manufacturer
Recover values	Select to use the corresponding tuning parameters as your fixed tuning parameters if GAIN SCHEDULING is deactivated or if parameters are manually modified. It can also be used to recover AUTO TUNE measurements.
Rewind	Toggle this selection for applications where CYGNUS is controlling a device that sets the tension in a rewind zone. See also Figure 3
Roll dia ____	Enter a value for the diameter of your full roll
Roll wgt ____	Enter a value for the weight of your full roll
RPM	Select to enter roll RPM sensor calibration. RPM sensor must be activated to continue; see also CONFIGURE I/O
RPM sensor type	Toggle to activate an external RPM sensor. Check the specifications for the sensor to determine if its output is "pulse" or "voltage" type
Run	Display indicates the present mode of operation is normal running status. TB3.1 and TB3.2 must be open and START TIME expired
Run/stop input	Toggle to indicate if RUN/STOP will be triggered from TB3.1 & TB3.2 or by Fieldbus communication. See also FIELDBUS
Secured	Select to enter security screen. When SECURED is displayed, all calibration and parameter settings are not accessible until unlocked by the proper four digit code; see also UNSECURED
Sensor type is set to "none"	Display indicates the sensor you are attempting to access has not been configured correctly. See also CONFIGURE I/O
Setpoint	Enter the desired tension value for your process that you wish to maintain during normal running conditions

SCREEN DEFINITIONS

Screen Function	Definition
Setup ____	Displays the number corresponding to the current setup. Selecting this will take you to the setup selection screen; see also CHANGE SETUP and COPY SETUP
Single point calibration	Select to enter single point diameter sensor calibration
Smaller roll calibration	Select to enter diameter sensor calibration for the smaller diameter of a two point calibration
Splice	Display indicates the present mode of operation is "splicing"; see also SPLICE MULT ____ and SPLICE FEATURE
Splice feature	Toggle yes or no to activate this feature. When active, a switch closure of TB4.8 and TB4.6 will signal CYGNUS to enter SPLICE mode to manipulate the control output during a zero-speed splicing operation. See also SPLICE MULT ____
Splice input	Toggle to indicate if SPLICE operation will be triggered from TB4.6 & TB4.8 or by Fieldbus communication. See also FIELDBUS
Splice mult	Enter a value for the splice multiplier. This parameter behaves much like the HOLD MULTIPLIER except that it has acceleration and deceleration modifiers
Splice, Hld, Start, Stop	Select for configuration of the automatic mode special condition options
Start	Display indicates the present mode of operation is "starting"; activated when TB3.1 and TB3.2 are opened. See also START TIME__SEC
Start time ____ sec	Enter a value based upon the amount of time it takes your machine to ramp up from stopped to steady state operation. If the tension spikes during this time, try increasing this START TIME value
Stop	Display indicates the present mode of operation is "machine stopping". This mode is initiated when TB3.1 and TB3.2 are closed. See also STOP TIME__SEC and STOP MULT__
Stop mult	Enter a value that will dictate the control output during STOP mode. CYGNUS will use the last control output sent during RUN mode before the STOP signal is received and multiply it by the value set here for the duration of the STOP TIME. When the stop multiplier value is correctly set, it will automatically boost output to the braking device during stops to keep the tension constant.
Stop time ____ sec	Enter a value based upon the amount of time it takes your machine to ramp down from steady state operation to a complete stop. When this time has expired, CYGNUS will automatically proceed into HOLD mode
Store values	Select to enter the present tuning parameters as the corresponding core or full roll values to be used during GAIN SCHEDULING. If AUTO TUNED the tuning measurements will also be stored.

SCREEN DEFINITIONS

Screen Function	Definition
System type	Select to enter the system type menu. From here you may select either UNWIND, REWIND, or one of the four point-to-point system configurations. See also Figure 3
Taper	Select to enter taper options screen. You may enter the taper percent, full roll, and core diameters. Without a separate diameter sensor, CYGNUS will make an estimation of the current diameter of the roll based upon the numbers entered here; see also TAPER ___%
Taper ___%	When REWIND type is selected, you may enter a value here that will taper off the output as the roll progresses from core to full. This feature is useful for reducing the inward forces that develop in rolls with a large differential between core and full diameters. If you are experiencing crushed cores, telescoping or starring rolls, try increasing taper in steps until you reach a value that works well for your process; see also TAPER, DIAMETER
Tension alarm	Toggle to activate the web break detection feature. See also DIGITAL OUTPUT MODE, TENSION ALARM LEVEL ___ and TENSION ALARM DELAY ___
Tension alarm delay ___sec	Enter a value to set an amount of time the actual tension must remain below the TENSION ALARM LEVEL ___% before the web break alarm is activated. See also TENSION ALARM. Values greater than 100% are given a high tension alarm.
Tension alarm level ___%	Enter a value to determine when CYGNUS will send a signal through TB3.4 & TB3.5 to indicate that a web break has occurred. The value entered represents a percentage of deviation below the tension SETPOINT. See also TENSION ALARM. A "VALUE GREATER THAN 100%" will provide a HIGH TENSION ALARM.
Tension decreases, clutch or motor	For point-to-point applications using a clutch or motor and drive, select 5 if the controlled device is located upstream from the sensor placement or 0 if it is downstream from the sensor placement. See also Figure 3
Tension increases, brake or regen drive	For point-to-point applications using a brake or regenerative drive, select 3 if the braking device is located upstream from the sensor placement or 8 if it is downstream from the sensor placement. See also Figure 3
Tension on / off	Toggles the output between 0% for OFF and under the control of all other modes for ON. When TOGGLE selected, TB4.7 also toggles.
Tension on/off mode	Toggle to indicate if TENSION ON/OFF will be triggered from keypad (toggle) or TB4.7 (level).


SCREEN DEFINITIONS

Screen Function	Definition
Tension units	Toggle preferred tension measurement units. This will be applied to any displays related to tension measurements
Threshold ___%	Enter a value for the acceleration threshold. This parameter determines a minimum amount of change in web velocity before the ACCEleration COMPensation feature activates. A lower value here will make the feature more sensitive to changes in speed.
Tuned at core	Select STORE VALUES to save current tuning parameters as the core tuning parameters; select RECOVER VALUES to return to these same stored settings at any time if they have been changed. See also USE GAIN SCHEDULING.
Tuned at full roll	Select STORE VALUES to save current tuning parameters as the full roll tuning parameters; select RECOVER VALUES to return to these same stored settings at any time if they have been changed. See also USE GAIN SCHEDULING
Units & Language	Select to view options for the units of measure and language to be applied to all CYGNUS screens
Unsecured	Select to enter security screen. A four digit code may be entered to lock all calibration and parameter settings and prevent manipulation by unauthorized users. The same four digit code must be entered to unlock and grant access to these settings. When UNSECURED is displayed, any four digit code may be used regardless of the last code used; see also SECURED
Unwind	Toggle this selection for applications where CYGNUS is controlling a device that sets the tension in an unwind zone. See also Figure 3
Use gain scheduling	Toggle to activate the gain scheduling feature that will utilize different tuning parameters from full roll to core. This feature requires a diameter sensor to function and will compensate for changing tuning requirements throughout the unwind or rewind process by using the settings you provide at full roll and core and interpolating the values for every diameter point in between.
Velocity sensor type	Toggle to activate an external velocity sensor. Check the specifications for the sensor to determine if its output is "pulse" or "voltage" type
Velocity____	Enter a value for the steady state line speed of your machine
Voltage between TB6-1 & 2	Display of the voltage present corresponding to the load cell signal input. This is useful for evaluating the performance of load cells by comparing actual vs. expected return signal for a given applied force.
Voltage on TB6-1	Display of the voltage present corresponding to the load cell signal input. This is useful for evaluating the performance of load cells by comparing actual vs. expected return signal for a given applied force.

SCREEN DEFINITIONS

Screen Function	Definition
Voltage on TB6-2	Display of the voltage present corresponding to the load cell signal input. This is useful for evaluating the performance of load cells by comparing actual vs. expected return signal for a given applied force.
Sensor Voltage	Display of actual voltage present at the sensor input terminal
Web Velocity	Select to enter calibration of an external web speed sensor. Web speed sensor input must be active; see also CONFIGURE I/O
Web Width____	Select to edit the current web width for use in tension setpoint calculation when TENSION UNITS of PLI, kg/cm, gm/mm, oz/in, or N/cm are selected. Also used for changing INERTIA values.
Weightless calibration	Select to calibrate load cells without using weights. This procedure depends on correct entries for the LOAD CELL RATING and WRAP ANGLE to provide accurate readings
Width ____	Enter a value for the web width
Wrap angle	Enter a value for the wrap angle formed by the web around the sensing roll. Example: A web that comes straight up, wraps around the roll, and continues straight down is a 180 degree wrap. A web that comes straight up, wraps around the roll, and continues on to the right is a 90 degree wrap.


Figure 1. System types

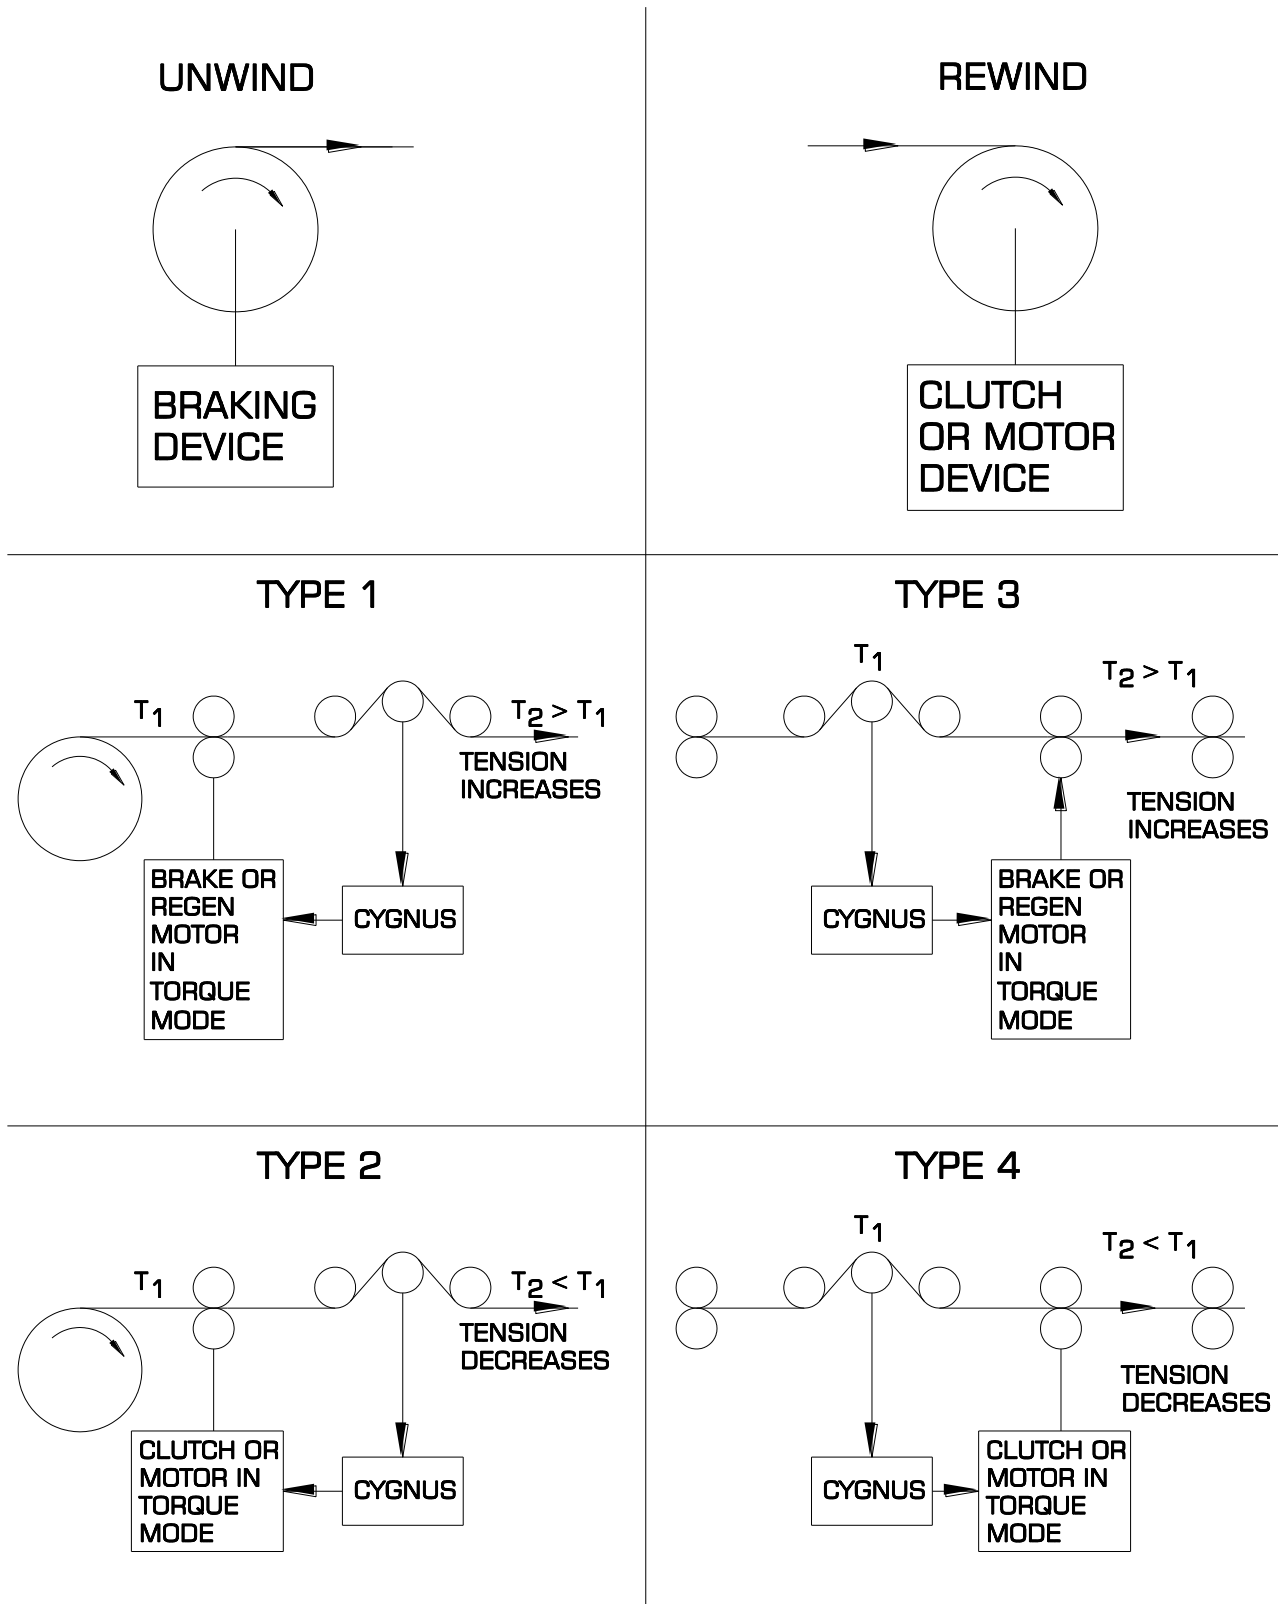

SYSTEM TYPES
Figure 1





FIGURES AND TABLES

Figure 3. CYGNUS wiring diagram

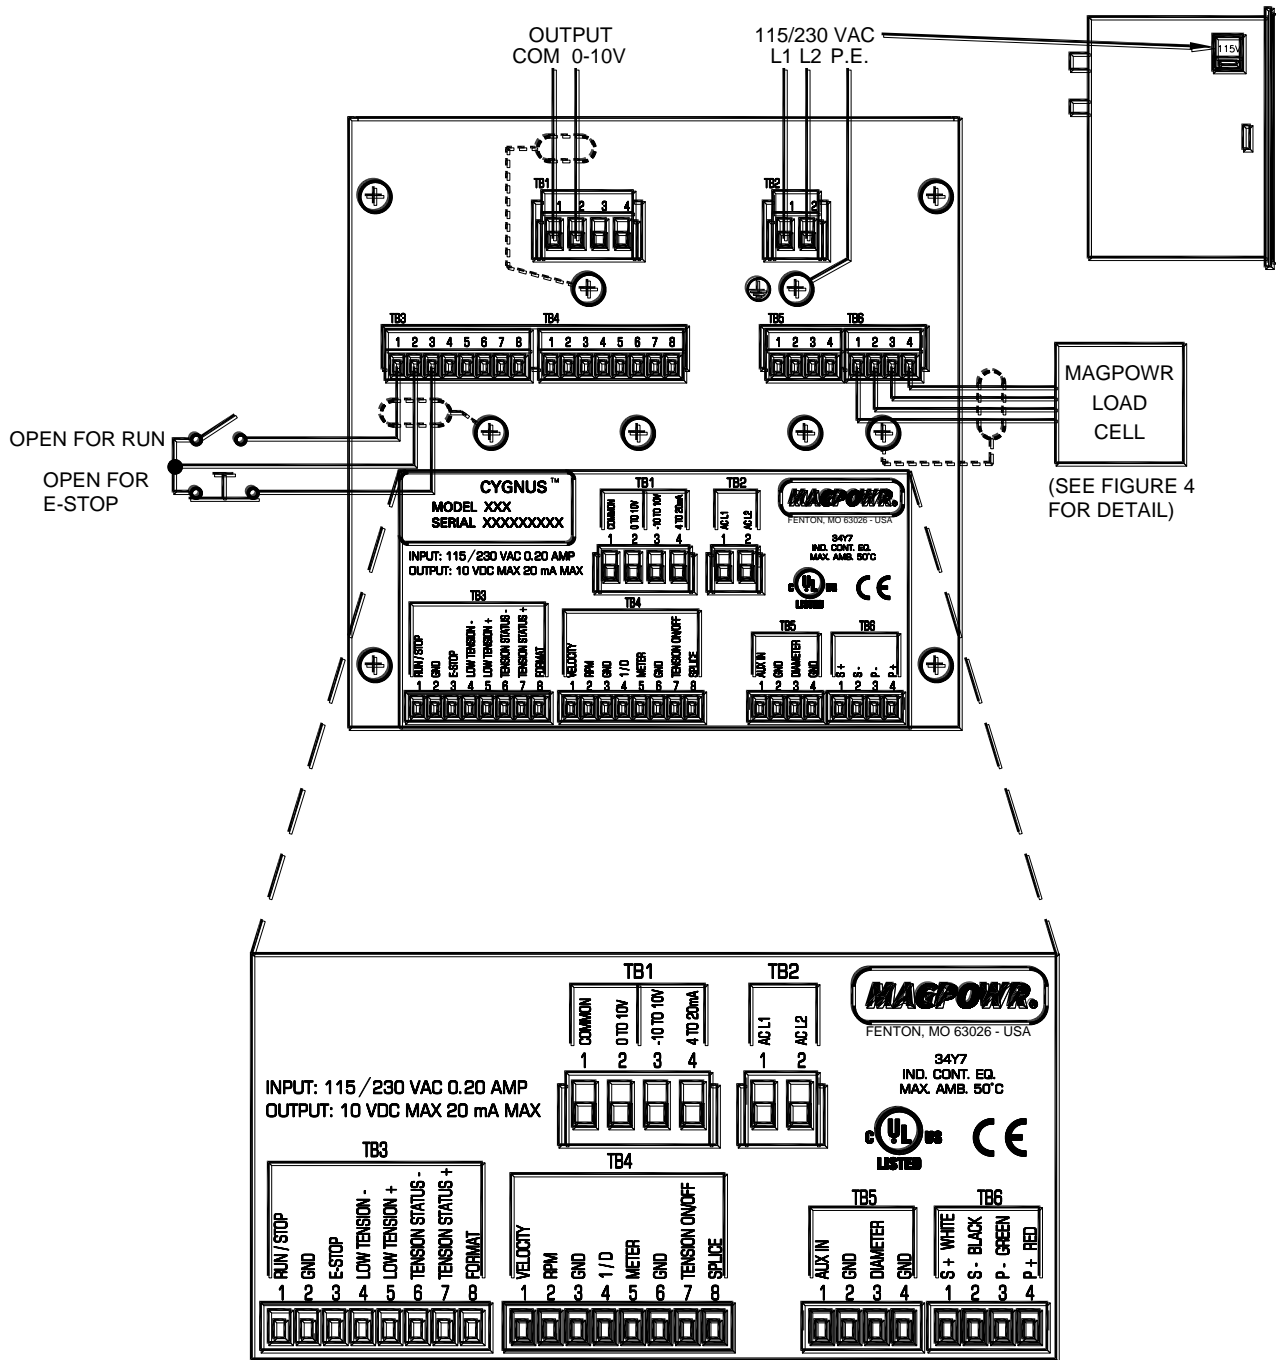


CYGNUS WIRING DIAGRAM
Figure 3

Figure 4. Load cell wiring detail

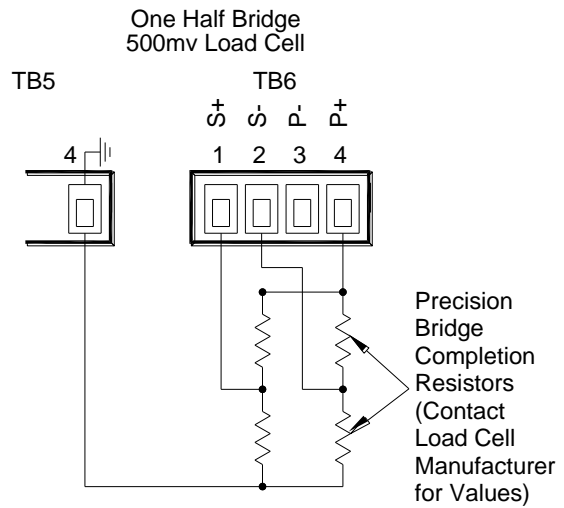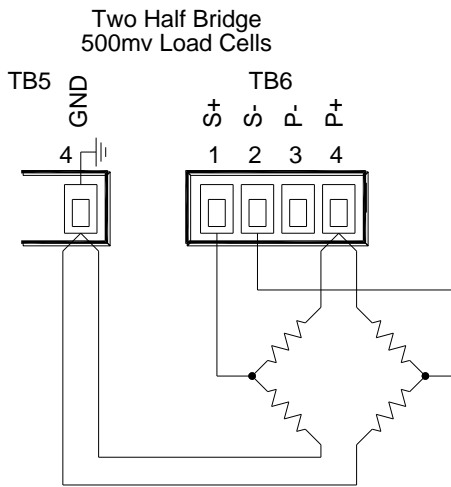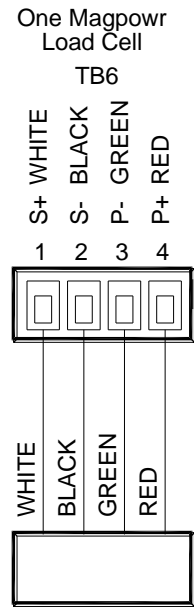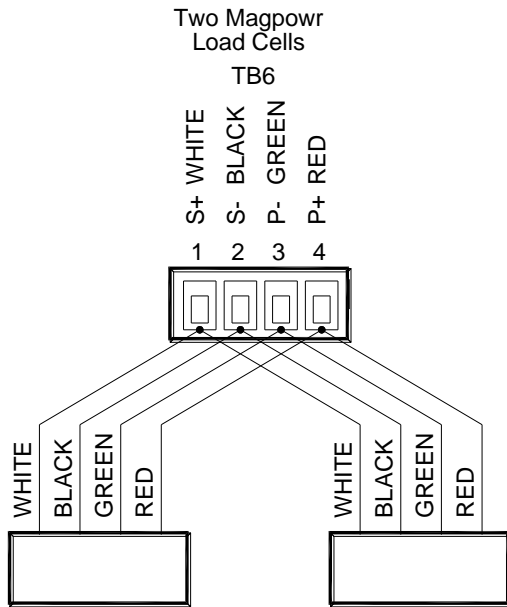


10 Volt (DC)
Tension Signal

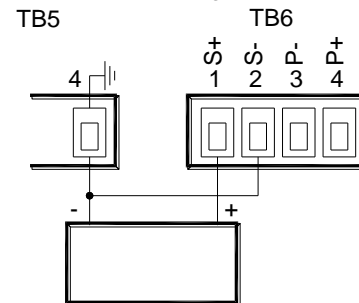

LOAD CELL WIRING DETAIL
Figure 4

Figure 5. Wiring diagram for use of digital inputs

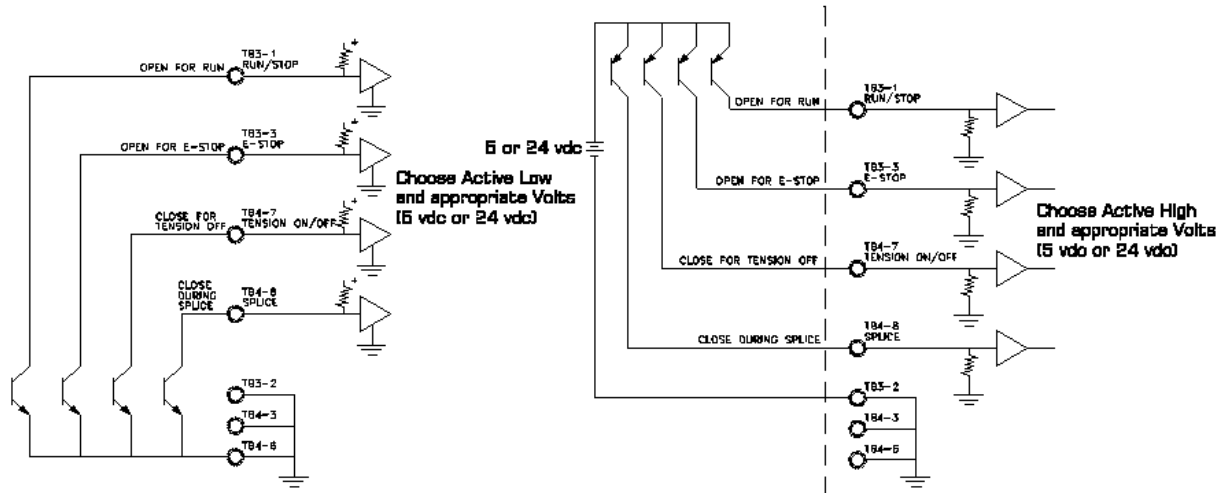


WIRING DIAGRAM FOR USE OF DIGITAL INPUTS
Figure 5

FIGURES AND TABLES


Figure 6. Wiring diagrams, remote tension setpoint

Figure 7. Wiring diagrams, remote setup select

Table 2. Voltage table, remote setup select

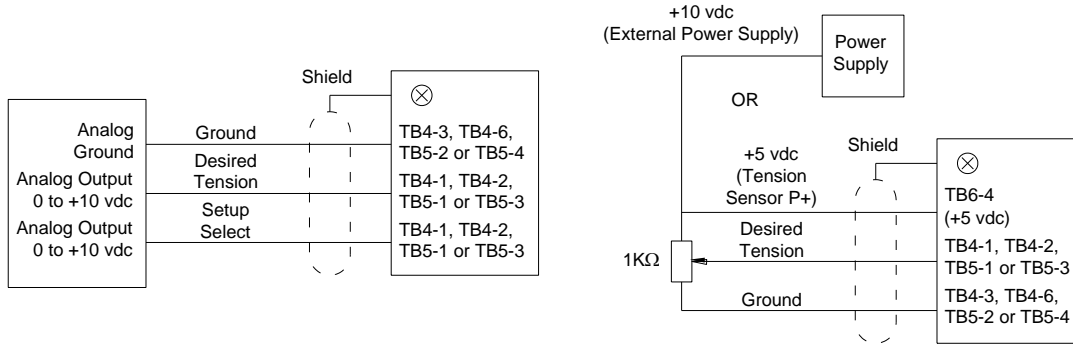

WIRING DIAGRAMS FOR REMOTE TENSION SETPOINT
Figure 6

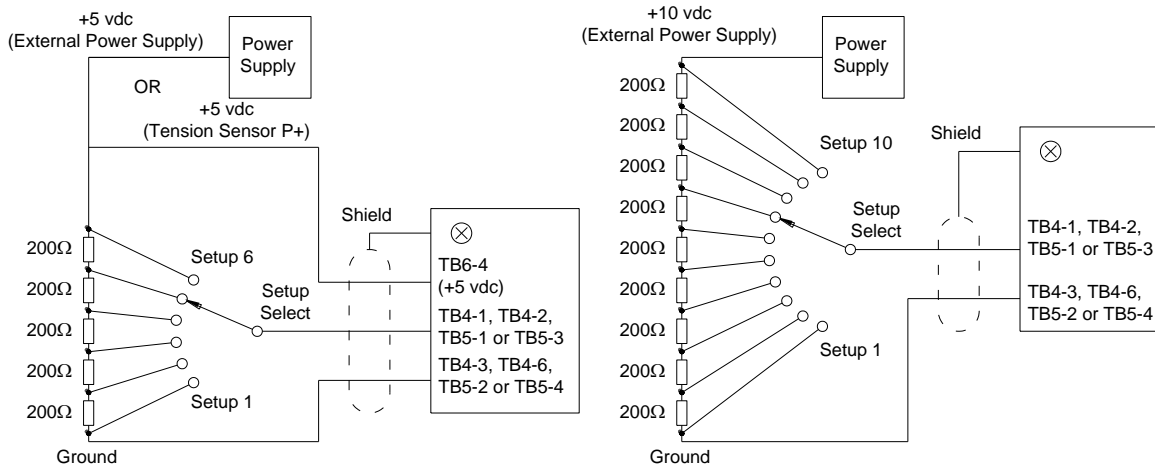


WIRING DIAGRAMS FOR REMOTE SETUP SELECT
Figure 7


Input Voltage	Setup Number
0±0.25	1
1±0.25	2
2±0.25	3
3±0.25	4
4±0.25	5
5±0.25	6
6±0.25	7
7±0.25	8
8±0.25	9
9±0.25	10

VOLTAGE TABLE FOR REMOTE SETUP SELECT
Table 2

Figure 8. CYGNUS-E wiring layout

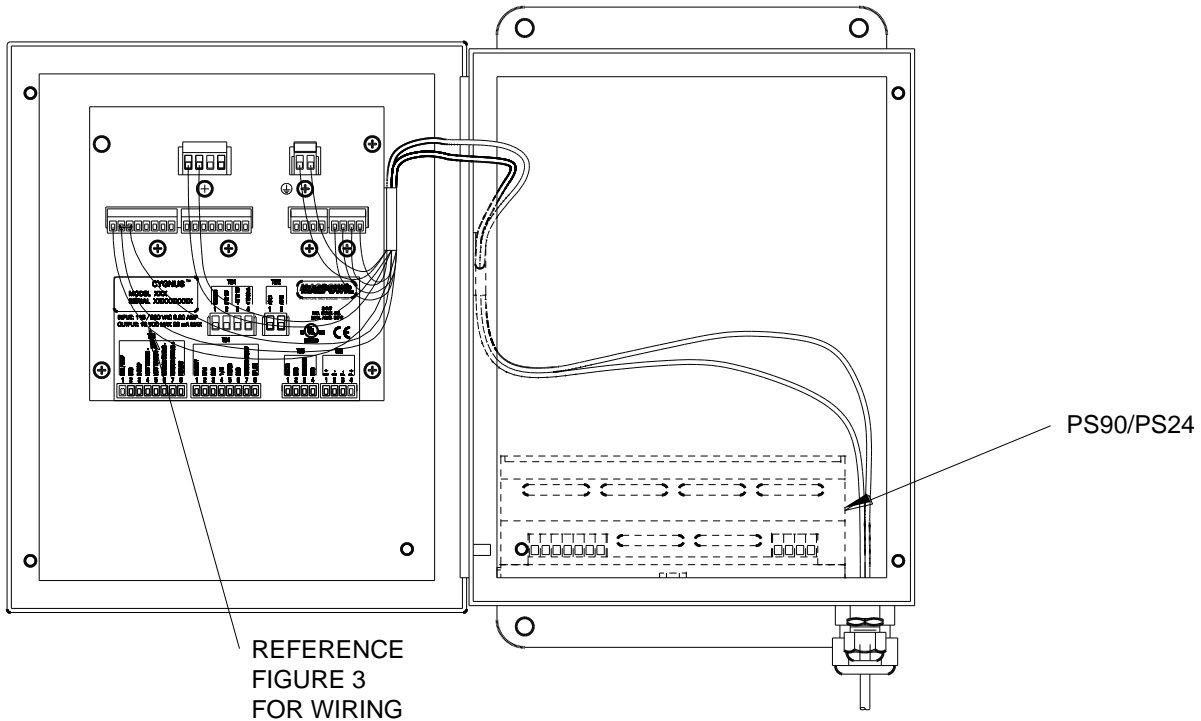

CYGNUS-E WITH DOOR OPEN

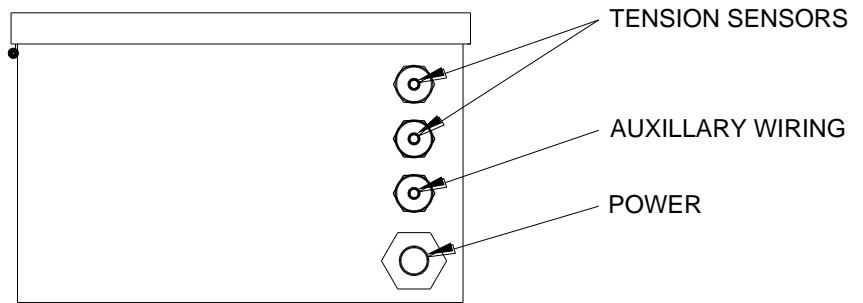


CYGNUS-E WITH DOOR CLOSED


CYGNUS-E WIRING LAYOUT
Figure 8

FIGURES AND TABLES

Figure 9. Outline dimensions, CYGNUS-DIN and CYGNUS-E

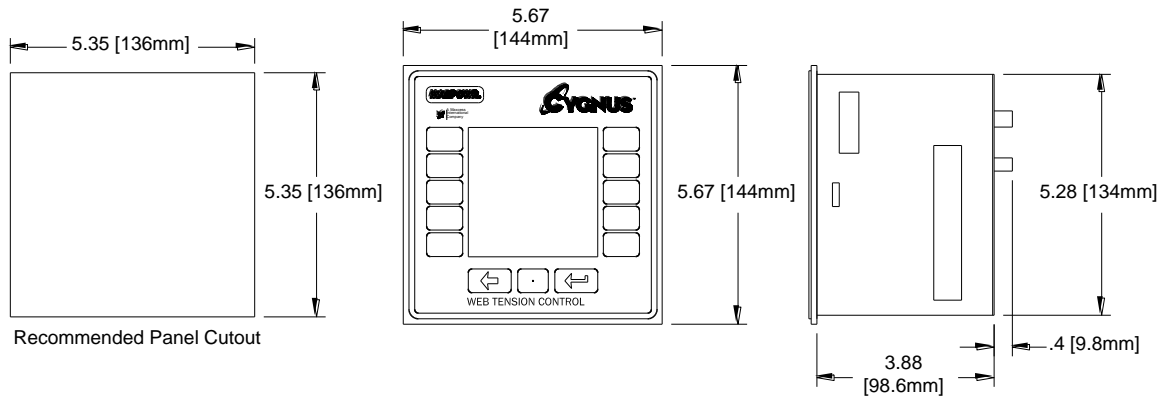

CYGNUS-DIN

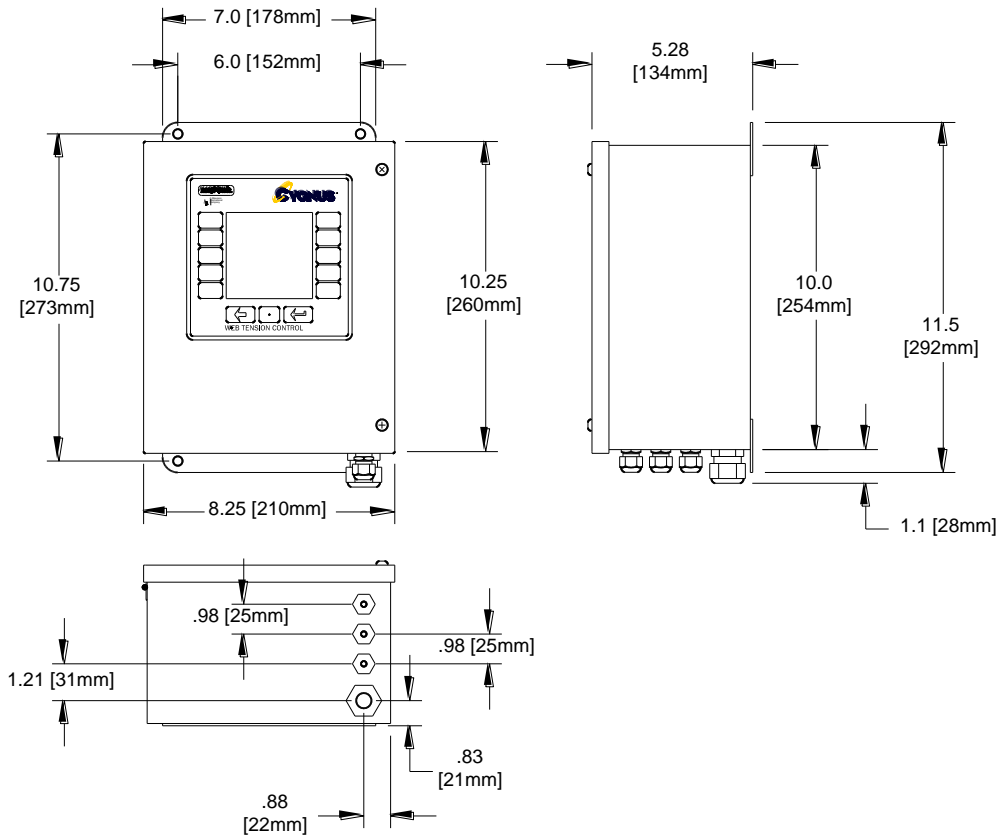

CYGNUS-E

OUTLINE DIMENSIONS
Figure 9

SPECIFICATIONS

11.0 Specifications

Supply Voltage		115 or 230 volts rms, $\pm 10\%$, 24 VA
Supply Frequency:		50 or 60 cycles per second, sinusoidal
Fuses: F1, F2		1.6 amp, Littelfuse Part No. 21601.6, or Wickmann Part No. 19194-053-FS
Enclosure		
CYGNUS-DIN	Front Panel	IP65 (IEC529)
	Enclosure	IP20 (IEC529)
CYGNUS-E		IP65 (IEC529)
Climatic Class:		3K3 (EN60721)
Temperature Range:		
Operating		
CYGNUS-DIN		0 °C to 50 °C
CYGNUS-E		0 °C to 40 °C
Storage		-30 °C to +80 °C
Relative Humidity		5% to 85%
Pollution Degree:		2 (IEC664-1)
Altitude:		0 to 2000 m
Compatible Residual Current Device Types:		A or B (IEC755)
Worst Case Fault Current:		1.6 amp
Inputs:		
Load cell		2.1 millivolts/volt using +5 and -5 VDC (10 VDC) across one 350 ohm sensor or two 350 ohm sensors in parallel, or 100 mVDC, using 5 volts across one 120 ohm full bridge, or 0 to +10 VDC analog
Diameter		0 to +10 VDC analog
Velocity / RPM		0 to +10 volts analog, or 0.01 to 50,000 pulses per second, 5 VDC or 24 VDC logic
Auxiliary Input		0 to +10 VDC, 1 mADC maximum
E-Stop		switch closure or 5 VDC or 24 VDC logic, 8 mADC maximum
Run/Stop		switch closure or 5 VDC or 24 VDC logic, 8 mADC maximum
Tension Off		switch closure or 5 VDC or 24 VDC logic, 8 mADC maximum
Format		switch closure or 5 VDC or 24 VDC logic, 8 mADC maximum
Splice		switch closure or 5 VDC or 24 VDC logic, 8 mADC maximum
Outputs:		
Isolated		0 to +10 VDC, 1 mADC maximum 4 to 20 mADC, 500 ohms maximum -10 to +10 VDC, 1 mADC maximum
Non-isolated		0 to +10 VDC, 1 mADC maximum
Inverse Diameter		0 to +10 VDC, 1 mADC maximum
Low Tension		DC solid state relays, 100 mADC, 30 VDC maximum or TTL levels
Tension status		DC solid state relay, 100 mADC, 30 VDC maximum or TTL levels
Tension Reference		0 to 1 mADC or 0 to +10 VDC analog

12.0 Service

To request service or to get replacement parts, contact one of the following addresses or your regional office.

Fife

222 West Memorial Rd.
Oklahoma City, OK, 73114
USA
Phone: 1.405.755.1600
Fax: 1.405.755.8425
Web: www.maxcessintl.com

Fife-Tidland GmbH

Max-Planck-Strasse 8
65779 Kelkheim
Deutschland
Telefon: +49.6195.7002.0
Fax: +49.6195.7002.933
Web: www.maxcess.eu

When ordering replacement parts, please indicate, where possible, part number, drawing number and model description.

If it is necessary to return the product for service, take care to properly package the unit to prevent damage during shipment. If possible, use the original shipping containers.



AMERICAS

Tel +1.405.755.1600
Fax +1.405.755.8425
sales@maxcessintl.com
www.maxcessintl.com

EUROPE, MIDDLE EAST AND AFRICA

Tel +49.6195.7002.0
Fax +49.6195.7002.933
sales@maxcess.eu
www.maxcess.eu

CHINA

Tel +86.756.881.9398
Fax +86.756.881.9393
info@maxcessintl.com.cn
www.maxcessintl.com.cn

INDIA

Tel +91.22.27602633
Fax +91.22.27602634
india@maxcessintl.com
www.maxcess.in

JAPAN

Tel +81.43.421.1622
Fax +81.43.421.2895
japan@maxcessintl.com
www.maxcess.jp

KOREA, TAIWAN, AND SE ASIA

asia@maxcessintl.com
www.maxcess.asia