



VERSATEC™
Tension Control
Instruction Manual



TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>No.</u>	<u>Figures</u>	<u>Page</u>
1	Introduction	2		Specifications	19
2	Installation	2	1	Wiring Isolated Inputs.....	20
3	Electrical Connections.....	3	2	Outline Dimensions VTC.....	20
4	Tension Mode	3	3	Outline Dimensions VTC-E	21
5	Dancer Mode.....	6	4	Power Amp Instructions	22
6	Free Loop Mode.....	9	5	Wiring Diagrams.....	23
7	Ranger Mode	12	6	Tension Mode Flow Chart	24
8	Power Amp.....	13	7	Dancer Mode Flow Chart	25
9	Optional Connections.....	14	8	Free Loop Mode Flow Chart	26
10	Common Features	16	9	Ranger Mode Flow Chart.....	27
11	Trouble Shooting.....	17			
12	Reset Procedures	18			

All of the information herein is the exclusive proprietary property of Maxcess International, and is disclosed with the understanding that it will be retained in confidence and will neither be duplicated nor copied in whole or in part nor be used for any purpose other than for which disclosed.

Copyright 2004, 2017, all rights reserved.

Periodically there will be updates to this manual. The latest version is available on our website or by calling your regional office listed on the back page of this publication.

1. INTRODUCTION

The MAGPOWR® Model VERSATEC is a microprocessor-based control, designed for precise tension control of a moving web. The VERSATEC is capable of controlling web tension in unwind and rewind systems when in Tension mode, dancer position when in Dancer mode, loop position when in Free Loop mode, or the Versatec can be used as a ranging control when in Ranger mode.

Throughout this manual, instructions or options specific to one of the operating modes (Tension, Dancer, Free Loop or Ranger mode) will be contained in the corresponding section. Instructions and options common to all modes will be grouped together. Throughout this manual, bold words or symbols represent keystrokes.

All data entry and calibration is done through the touch pad keyboard. In some numerical data screens, pressing ← or → moves a cursor below the digits. The underlined digit can be changed with the + or -.

2. INSTALLATION

ENVIRONMENTAL

The VERSATEC, Model VTC-E and its variants are intended for mounting on any flat vertical surface capable of supporting it. See Figures 2 and 3 for dimensions. The VTC-E meets the environmental and mechanical requirements of EN50178 with the exception that the degree of protection provided by the VTC-E enclosure is IP65 which is more stringent than the standard. If the IP65 rating is required in the final installation, sealing type cable grips should be used for cable entry. Four mounting holes are provided for attachment of the VTC-E to the mounting surface. The means of attachment should comply with the essential requirements of the appropriate standard(s) and is the responsibility of the installer.

The VERSATEC, Model VTC is intended for installation through a DIN panel opening. The panel itself should exhibit sufficient strength to support the weight of the VTC as well as insure the integrity of the environmental seal. The VTC maintains a degree of protection of IP65 over its front panel. It also meets the environmental and mechanical requirements of EN50178. The VTC mounting clips found on both sides of the enclosure behind the front panel will accommodate panel thickness of 0.06 inches (1.5 mm) to 0.5 inches (12 mm).

Wiring to and from the enclosure must be done with double or reinforced insulation or protective screening which provides protective separation. All wiring outside either of the Versatec enclosures should comply with the essential requirements of the appropriate standard(s) and is the responsibility of the installer.

The US-2 ultrasonic sensor must be mounted 6 inches (152 mm) or greater from any target, and not more than 60 inches (1524 mm) from any target.

If using a magnetic particle clutch or brake, see Section 8 to install Power Amplifiers.



WARNING: DISCONNECT MAINS BEFORE OPENING ENCLOSURE

MAINTENANCE

The only maintenance that may be required on VTC is fuse replacement. Replacement of any fuse requires opening the enclosure, which circumvents the enclosure IP rating. To replace a fuse:

On Model VTC and its variants:

1. Disconnect the supply mains.
2. Remove the two screws on the rear of the VTC that retain the top cover.
3. Remove the top cover.
4. Remove the PA-90 or PA-2 power amplifier if present.
5. Remove and replace the blown fuse.
6. Re-install the PA-90 or PA-2 and the top cover.
7. Reconnect supply mains.

On Model VTC-E and its variants:

1. Disconnect the supply mains.
2. Open the door of the VTC-E by loosening the two retaining screws.
3. Remove the PA-90 or PA-2 power amplifier if present.
4. Remove VTC-E and replace the blown fuse.
5. Re-install the PA-90 or PA-2.
6. Close the door and tighten the retaining screws.
7. Reconnect supply mains.

3. ELECTRICAL CONNECTIONS

Figure 5 shows the connections that are required for the basic Versatec system. They are:

- 115 or 230 vac power
- MAGPOWER US-2 ultrasonic sensor
- RUN/STOP using the Versatec internal logic supply
- Control OUTPUT to clutch, brake, motor controller, etc
- Power Amplifier input (if used) 115 vac for 90 vdc clutch or brake, or 24 vdc for a 24 vdc clutch or brake.


See Section 9 for other options and connections.

Route AC power away from sensor and control wiring. MAGPOWER sensor cables are color coded on the nameplate. Run all wiring in shielded cable. Connect shields to the enclosure using the standoffs provided. Maximum shield length and maximum length of wires outside of the shield is 3 inches (75 mm).

4. TENSION MODE INSTRUCTIONS

Apply power. Screen contrast can be adjusted by pressing ← and → for 2 seconds. Adjust using the + and - keys.

The Versatec is shipped from the factory in Tension mode. The HOME screen (below) always appears at power up. **HOME** also returns you to this screen.

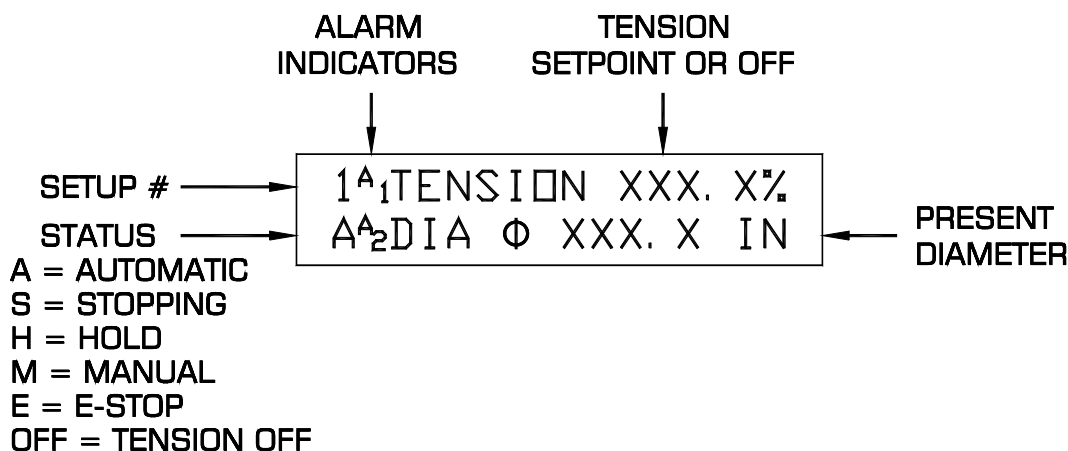

Automatic mode: The output automatically adjusts to correct for changes in roll diameter

Manual mode: Switch to Manual mode anytime using the AUTO/MANUAL key. The output is now fixed at the level set in the MANUAL LEVEL screen. Switch back to Automatic mode using the AUTO/MANUAL key.

Stopping: During the Stop Time, the Versatec is still in Automatic mode, but the output is momentarily changed by Stop Multiplier. At the end of Stop Time, the Versatec switches to Hold mode.

Hold Mode: In Tension mode, the Hold mode output is the same as the operating level.

E-Stop: During Emergency Stop, the output goes to full on for unwind systems and to zero output for rewind systems.

Off: The output is zero when tension is turned off either by the **TENSION ON/OFF** key or by a remote connection.

Setup #: This number indicates the present setup.

Alarm Indicators: The A₁, or A₂ will flash when the corresponding alarm is on.


The operator screens (shown in the figure) are those normally used during machine operation and are accessed using \uparrow or \downarrow from the HOME screen. A complete flow chart is shown in Figure 6.

The OUTPUT LEVEL screen shows the present output when in Automatic mode.

The MANUAL LEVEL screen shows the output when in Manual mode.

The SETUP NUMBER screen shows the present setup number. The setup can be changed when in Hold mode by pressing \leftarrow or \rightarrow .

The CORE TENSION and TAPER PERCENT screens only appear when using Taper Tension for rewinds.

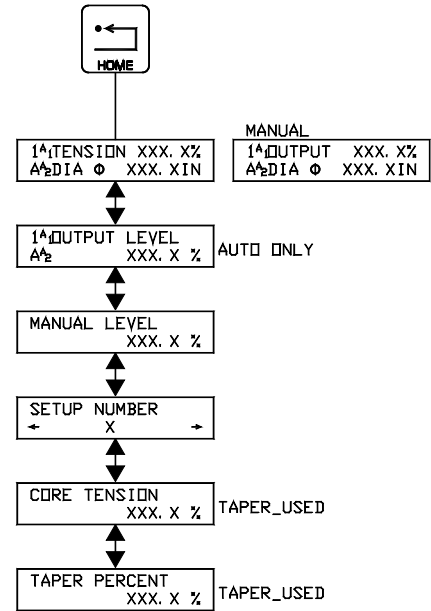

4.1 Tension Mode Setup

Basic setup cannot be performed if E-STOP is open, or if RUN/STOP is in run mode.


To align the sensor, press **PROGRAM** and use $\leftarrow\rightarrow$ to display SENSOR ALIGN. Press \downarrow . The screen will show the distance to the target when properly aligned and will show **** if no echo is received. Adjust the alignment of the US-2 as necessary.

Press **PROGRAM** and use \leftarrow or \rightarrow to enter the CONFIGURATION menu. Use \downarrow to access the SYSTEM screen. Use \leftarrow or \rightarrow to select unwind or rewind.

Press **PROGRAM**, \downarrow to display the ROLL DIMENSIONS menu (shown in the figure). Enter the Full Roll Diameter, Core Diameter, and Distance to Axis. The Distance to Axis is the distance from the sensor to the centerline of the roll. Press **HOME** to return to the HOME screen.

In the HOME screen press + or - to set the desired Tension Setpoint.

Basic setup is complete.

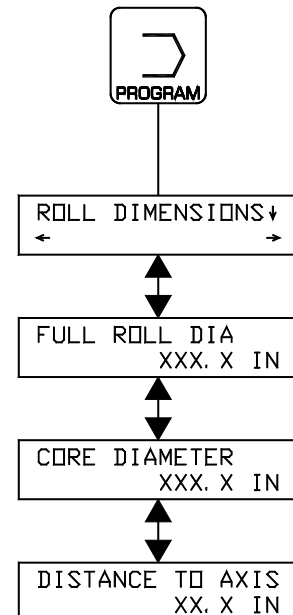


4.2 Tension Mode Options

Configuration Menu Screens


TAPER TENSION	Taper Tension can be used on rewinds to decrease the web tension as the diameter increases. To use taper, select yes for taper tension in the Configuration menu. Two new screens will appear in the operator loop. Enter the Core Tension setpoint and the Taper Percent. The taper percent is the percentage decrease in web tension from the core to full roll. When using Taper Tension, the Tension Setpoint % displayed on the HOME screen will show the tension setpoint at the present diameter. As the roll builds, the tension setpoint % will decrease as the diameter increases based on the amount of taper percent set. At full roll, it will show the core tension setpoint less the taper percent.
TENSION ON/OFF	Use this screen to select the method of using a remote connection to turn the tension on and off.
CORE OFFSET	Use this screen to adjust the output at core.

Stop and Alarms Screens

STOP TIME	This is the number of seconds from the time the user applies the stop signal until the system is stopped. The stop signal is applied by the user at terminals TB3.8 and TB3.6. After this time, the system output returns to the normal operating value.
STOP MULTIPLIER	Stop Multiplier can be used on unwinds to provide extra torque to help stop the unwind roll. The control output is increased based on this multiplier and the present diameter during the stop time. The factory setting of 1.00 creates no increase in output. If tension falls during stop time, increase the value. Decrease the value if tension rises during stop.
MINIMUM DIAMETER DETECT (A ₁)	Enter the diameter of the desired minimum diameter detection point. The solid state relay output marked "ALARM1" at terminals TB4.1 and TB4.2 will close whenever diameter is less than or equal to the display value. NOTE: Hysteresis and delay will change the way the output works slightly. See below.
MAXIMUM DIAMETER DETECT (A ₂)	Enter the diameter of the desired maximum diameter detection point. The solid state relay output "ALARM2" at terminals TB4.3 and TB4.4 will close whenever diameter is great than or equal to the display value. NOTE: Hysteresis and delay will change the way the output works slightly. See below.
ALARM TIME DELAY	Delays are timed from the moment the target reaches the trigger distance (minus hysteresis if any). If the target moves outside the trigger distance before the delay time is passed, the output will not activate and the delay will be reset as if the target had never reached the trigger distance. The factory setting is 0.01 seconds.
ALARM HYSTERESIS DISTANCE	Hysteresis allows the target to move a certain distance with no change in output status. It is used to prevent the output from chattering near the set detect distance. Hysteresis is set in distance units using the + and – keys. The factory setting is 0.1 in.

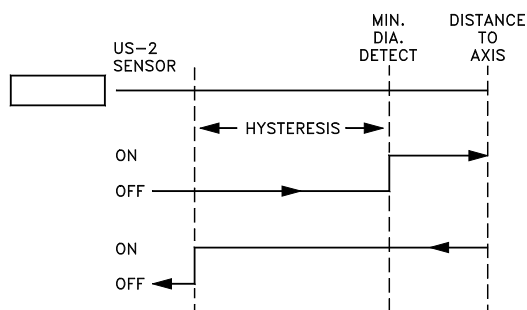

UNWIND MINIMUM DIAMETER DETECT

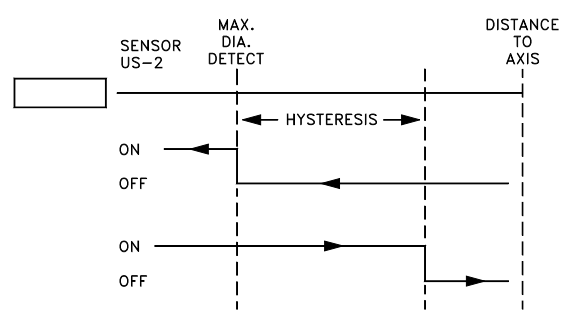


REWIND MAXIMUM DIAMETER DETECT

5.0 DANCER MODE INSTRUCTIONS

For a Dancer system, you must also connect the MAGPOWR DFP or DFP-2 to pins TB3.10, TB3.11 and TB3.13 as shown in the wiring diagram Figure 5. The US-2 ultrasonic sensor is optional.

Apply power. Screen contrast can be adjusted by pressing \leftarrow and \rightarrow for 2 seconds. Adjust using the + and - keys. *To configure the Versatec for Dancer mode (unit must be in "HOLD"), press \uparrow and \downarrow for 2 seconds. Then select Dancer mode by pressing \leftarrow or \rightarrow . Press \downarrow to enter the Dancer mode.*

The Dancer mode HOME screen (below) will now be displayed. You can always return to the HOME screen by pressing **HOME**.

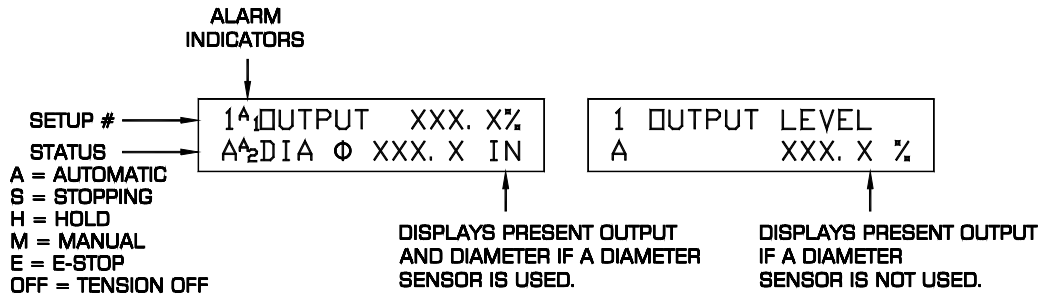

Automatic Mode: The output automatically adjusts to control dancer position.

Stopping: During the Stop Time, the Versatec is in Automatic operation, but the output is momentarily changed by the Stop Multiplier and Inertia Compensation. After stop time expires, the unit is in Hold mode.

Hold Mode: The output is held at the last running output level. Or, if Reset Hold is used, the output is set by the Reset Level.

E-Stop: During an Emergency Stop condition, the output will go to maximum if using a torque device or minimum if controlling a speed device.


Off: The output is zero when tension is turned off by the TENSION ON/OFF key or by a remote connection. Tension Off is only allowed in TORQUE mode.

A complete flowchart is shown in Figure 7.

The operator screens (shown in the figure) are those normally used during machine operation and are accessed by pressing \uparrow or \downarrow from the HOME screen. These are the only screens accessible when the setup is secured.

The Setup Number screen can be used to change the Setup. You must be in Hold mode to change setup.

If using the Tension Output, the TENSION screen will show the tension setpoint and the present output level. If using Taper Tension and Diameter Input, the last two screens will appear.

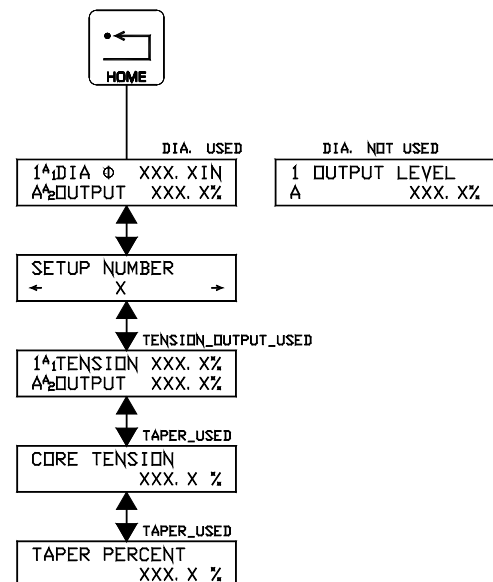

5.1 Dancer Mode Setup

Setup cannot be performed if E-Stop is open, or if RUN/STOP is in run mode.

1. Choose control device.

Press **PROGRAM** and **←** or **→** to access the Configuration menu. Press **↓** until CONTROL DEVICE is displayed. Press **←** or **→** to select the type of device, Speed or Torque. If a brake or clutch is being used, choose torque. If a motor is being used, choose speed.

2. Configure the diameter signal. If not using a diameter signal, go directly to Step 3.

From the Control Device screen, press **↓** until DIAMETER SENSOR is displayed. Use **←** or **→** to choose YES.

Press **PROGRAM**, and **←** or **→** to enter the Roll Dimensions menu. Press **↓**. Enter the Full Roll Diameter, Core Diameter, and Distance to Axis. The Distance to Axis is the distance from the US-2 to the centerline of the roll.

3. Set the Dancer Position

Press **PROGRAM**, **↓** to enter the Dynamic Tuning menu.

While holding the dancer arm in the desired running position. Press **+** and **-** until the display says OK. Press **↓**.

4. Tuning

The screen below is the Tuning screen. Pressing **←** or **→** when in this screen chooses CORE, FULL, or EXIT. Pressing **↑** or **↓** adjusts the dancer position (if necessary). Pressing **+** or **-** adjusts the tuning (**+** will normally increase the stability and **-** will increase the responsiveness.)

TUNE + -	POS ↑ ↓
← FULL	CORE EXIT →

In the following steps, the words **+** (FULL) means to press **+** when FULL is selected, **-** (FULL) means to press **-** while FULL is selected, etc. When asked to "STABLIZE" an oscillation, perform one of the following steps:

1. If the dancer is oscillating rapidly (faster than several seconds per cycle), press **+** until the oscillation stops.
- OR
2. If the dancer is oscillating slowly (several seconds per cycle), press **-** until the oscillation stops.

Torque device with a diameter signal or speed device (with or without diameter sensor):

NOTE: The next step requires that the machine be running near full roll. If this is a rewind, a preliminary adjustment can be made at core with final tuning done at full roll. If the dancer position oscillates during winding, use the appropriate method above to stop the oscillation.

With a full roll mounted run the machine at a low speed.

If the dancer position is oscillating stabilize the dancer. If necessary, adjust the dancer position using **↑** or **↓**.

If the dancer position is not oscillating, press **-** (FULL) until the dancer position begins to oscillate.

NOTE: The next step requires that the machine be running near core. If this is an unwind you may mount a small roll, or you may continue to unwind until the roll approaches core. Select CORE. If the dancer position oscillates at any time during the unwind stabilize the dancer.

Press **←** or **→** to select CORE.

Run the machine at a low speed near core.

If the dancer position is oscillating stabilize the dancer.

If the dancer position is not oscillating, press **-** (CORE) until the dancer position begins to oscillate, and then press **+** (CORE) until oscillations stop.

Tuning is complete. Select EXIT and press \downarrow . This screen shows the condition of AUTO POSITION. It will normally be ON after tuning CORE and OFF after tuning FULL. It can be turned ON or OFF using this screen, but it is best left ON. If controlling a torque device with diameter signal, the AUTO POSITION is always ON, so the AUTO POSITION screen does not display in this mode.
Press **HOME**.

Torque device with no diameter signal:

NOTE: The next step requires that the machine be running near core. If this is an unwind you may mount a small roll, or you may continue to unwind until the roll approaches core. Select CORE. If the dancer position oscillates at any time during the unwind press + (CORE) until the oscillations stop.

With a small roll (near core) mounted run the machine at a low speed.

If the dancer position is oscillating press + (CORE) until the oscillations stop. Adjust the dancer position using \uparrow or \downarrow if necessary.

If the dancer does not oscillate, press - (CORE) until the dancer position begins to oscillate, and then press + (CORE) until the oscillations stop.

NOTE: The next step requires that the machine be running near full roll. If this is a rewind, you may mount a full roll, or you may continue to wind until the roll approaches full. Select FULL. If the dancer position oscillates at any time during the wind, press + (FULL) until the oscillations stop.

Press \leftarrow or \rightarrow to select FULL.

Run the machine at a low speed near full roll.

If the dancer position is oscillating press + (FULL) until the oscillations stop. If dancer position is not oscillating, press - (FULL) until the dancer position begins to oscillate, and then + (FULL) until oscillations stop.

Tuning is complete. Select EXIT and press \downarrow . This screen shows the condition of AUTO POSITION. It will normally be ON after tuning FULL and OFF after tuning CORE. It can be turned ON or OFF using this screen, but it is best left ON.
Press **HOME**.

5.2 Dancer Mode Options

Configuration Screens

TENSION ON/OFF	This is available when the control device is torque. Use this screen to select the method of using a remote connection to turn the tension on and off.
DIAMETER SENSOR	The US-2 Ultrasonic sensor can be used to improve the stability of systems with large diameter ratios. The US-2 should be connected to TB2.
RESET HOLD CHG WITH DIAMETER	The reset hold value can change with the diameter of the new roll. This automatically adjusts the starting output to compensate for variable new roll diameters. Otherwise, the reset hold value is just a constant. To calibrate the reset hold value to diameter ratio, put on a new roll and then enter into the reset hold parameter the output level needed to just balance the dancer arm.
TENSION OUTPUT	A 4 to 20 mdc signal is available at TB3.1 and TB3.4 to connect to the dancer loading device to set the tension in the web
TAPER TENSION	Taper tension can be used on rewind systems to decrease the web tension as the diameter increases if using the Tension Output and a diameter signal. The Tension Output to the dancer loading device at terminals TB3.1 and TB3.4 will decrease as the diameter increases. To use Taper Tension, select yes in the TAPER TENSION screen. Enter the core tension and the taper percent in the operator screens. The taper percent sets the percent decrease in tension from core to full roll.
INTEGRATOR TIME	This time adjusts the response to errors. Larger values slow down the response to rapidly changing errors. The value is adjusted during Dynamic Tuning.
PROPORTIONAL GAIN	Generates an output adjustment proportional to error. This value is adjusted during Dynamic Tuning.
DERIVATIVE TIME	Gives an output adjustment proportional to the rate of change of error.
FILTER TIME	The roll-off time constant. This value is preset at the factory. Adjustment is normally not needed.
STOP TORQUE RATIO	Ratio of torque required to stop a roll at core to the torque required to stop a full roll. This value is determined through Dynamic Tuning.

Stop and Hold Screens

STOP TIME	This is the time that the Versatec stays in Stopping (automatic) mode after the stop signal is received. After the Stop Time expires, the control goes to Hold mode. Stop Time should be slightly longer than the actual machine stopping time. The output in Hold mode is the last running output level, for torque control and 0 for speed control.
STOP MULTIPLIER	Multiplies the output upon receipt of a stop signal. A value of 1.0 creates no increase. This is a simple adjustment for roll inertia during stopping.
INERTIA COMP	The percent increase in output required to stop the roll at the present diameter and running output level. The value will be computed automatically for changes in diameter. While running press + or – to change the value at the present diameter.
HOLD LEVEL MULT	The output in Hold Mode is the last running output level multiplied by this value. A value of 1.0 creates no increase. A value of 2.0 will double the output.
RESET HOLD	The output in HOLD MODE is the last running output multiplied by the HOLD LEVEL MULTIPLIER. When changing from an empty roll to a full roll you may have insufficient output when you restart the machine. The symptom would be that the dancer arm would hit the low tension stop at startup. To avoid this, a momentary switch closure between terminals TB3.9 and TB3.6 will force the output into the value you enter under RESET HOLD. It is adjustable from 0 to 100% output.

Alarms Screens

MINIMUM DIAMETER DETECT ALARM 1	Enter the diameter of the desired minimum diameter detection point. The solid state relay output marked “ALARM1” at terminals TB4.1 and TB4.2 will close whenever diameter is less than or equal to the display value. NOTE: Hysteresis and delay will change the way the output works slightly. See below.
MAXIMUM DIAMETER DETECT ALARM2	Enter the diameter of the desired maximum diameter detection point. The solid state relay output “ALARM2” at terminals TB4.3 and TB4.4 will close whenever diameter is great than or equal to the display value. NOTE: Hysteresis and delay will change the way the output works slightly. See below
ALARM TIME DELAY	Delays are timed from the moment the target reaches the trigger distance (minus hysteresis if any). If the target moves outside the trigger distance before the delay time is passed, the output will not activate and the delay will be reset as if the target had never reached the trigger distance. The factory setting is 0.01 seconds.
ALARM HYSTERESIS DISTANCE	Hysteresis allows the target to move a certain distance with no change in output status. It is used to prevent the output from chattering near the set detect distance. Hysteresis is set in distance units using the + and – keys. The factory setting is 0.1 in.


6.0 FREE LOOP MODE INSTRUCTIONS

Apply power. Screen contrast can be adjusted by pressing ← and → for 2 seconds. Adjust using the + and - keys. *To configure the Versatec for Free Loop mode (unit must be in “HOLD”), press ↑ and ↓ for 2 seconds. Then select Free Loop mode by pressing ← or →. Press ↓ to enter the Free Loop mode. A complete flowchart is shown in Figure 8.*

The operator screens (shown in the figure) are those normally used during machine operation and are accessed using ↑ or ↓ from the HOME screen. These are the only screens which are accessible when the setup is secured.

The HOME screen (top screen) displays the target setpoint and the actual distance, the present setup number, the system status (Automatic, Stopping, Hold, or E-Stop), and the alarm indicators. The alarm indicators will flash when the corresponding alarm is on. The output level screen shows the present output. You can always return to this HOME screen by pressing **HOME**.

The setup can be changed from the SETUP NUMBER screen. You must be in Hold mode to change setups.

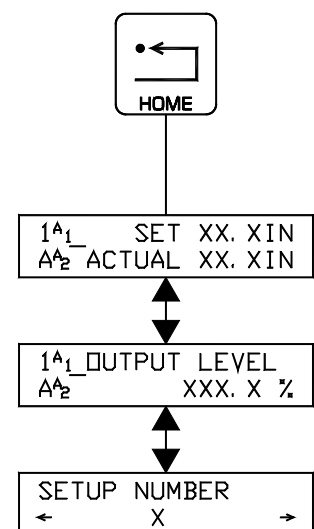

6.1 Free Loop Mode Setup

Basic setup cannot be performed if E-STOP is open, or if RUN/STOP is in run mode.

To begin, do the following:

Press **PROGRAM**


Press **↓** to enter LOOP DISTANCES menu

Continue through the flow chart at right entering desired data in each screen.

The parameters DISTANCE FOR MAX OUTPUT and DISTANCE FOR MIN OUTPUT set the basic gain of the system. The free loop will operate between these distances. DISTANCE FOR MAX OUTPUT is not always greater than DISTANCE FOR MIN OUTPUT. The following rule defines which is greater:

RULE: When the motor is at maximum RPM, the free loop will move from the DISTANCE FOR MAX OUTPUT toward the DISTANCE FOR MIN OUTPUT.

Enter POSITION SETPOINT. If Auto Position is not being used the free loop will not stay exactly at this position. Adjustment may be needed later.

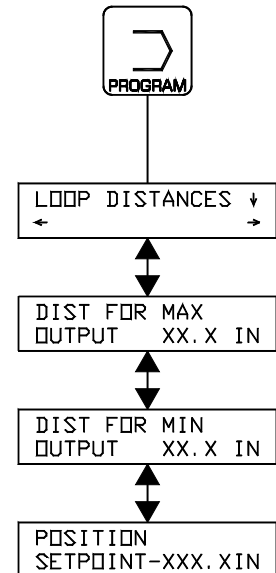

6.2 Free Loop Mode Tuning

The screen below is the Tuning screen. Pressing **←** or **→** when in this screen chooses Full, Core, or Exit. Pressing **↑** or **↓** adjusts the loop position (if necessary). Pressing **+** or **-** adjusts the tuning (**+** will increase the stability and **-** will increase the responsiveness.)



In the following steps, the words **+** (Full) means to press **+** when Full is selected, **-** (Full) means to press **-** while Full is selected, etc.

NOTE: The next step requires that a full roll be mounted. If this is a rewind, a preliminary adjustment can be made at core with final tuning done at full roll. If the loop position oscillates during winding, press **+** (FULL) until the oscillations stop.

With a full roll mounted run the machine at a low speed.

If the loop position is oscillating press **+** (FULL) until the oscillations stop. If necessary, adjust the loop position using **↑** or **↓**.

If the loop position is not oscillating, press **-** (FULL) until the loop position begins to oscillate, and then press **+** (FULL) until the oscillations stop.


NOTE: The next step requires that the machine to be running near core. If this is an unwind you may mount a small roll, or you may continue to unwind until the roll approaches core. Select CORE. If the loop position oscillates at any time during the unwind press **+** (CORE) until the oscillations stop.

Press **←** or **→** to select CORE.

Run the machine at a low speed near core.

If the loop position is oscillating, press **+** (CORE) until the oscillations stop.

If the loop position is not oscillating, press **-** (CORE) until the loop position begins to oscillate, and then press **+** (CORE) until oscillations stop.

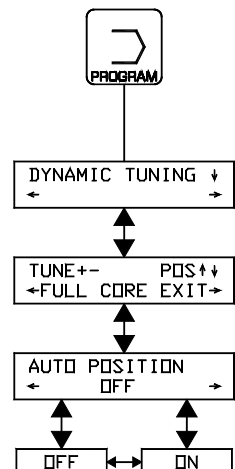

Tuning is complete. Select EXIT and press ↓. This screen shows the condition of AUTO POSITION. It will normally be ON after tuning CORE and OFF after tuning FULL. It can be turned ON or OFF using this screen, but it is best left ON.

6.3 Free Loop Mode Options

Configuration Screens

INTEGRATOR TIME	This time adjusts the response to errors. Larger values slow down the response to rapidly changing errors. The value is adjusted during Dynamic Tuning.
PROPORTIONAL GAIN	Generates an output adjustment proportional to error. This value is adjusted during Dynamic Tuning.
DERIVATIVE TIME	Gives an output adjustment proportional to the rate of change of error.
FILTER TIME	The roll-off time constant. This value is preset at the factory. Adjustment is normally not needed.

6.4 Free Loop Mode Stop and Alarms


Stop Time This is the number of seconds from the time the user applies the stop signal until the system is stopped. The stop signal is applied by the user at terminals TB3.8 and TB3.6. After this time, the system output goes to zero.

- ALARM 1 ON DISTANCE
- ALARM 1 OFF DISTANCE
- ALARM 2 ON DISTANCE
- ALARM 2 OFF DISTANCE

Enter the desired distance at which ALARM 1 or 2 is to turn ON. the solid state relay output ALARM 1 or 2, will close whenever the displayed distance equals this value.

Enter the desired distance at which ALARM 1 or 2 is to turn OFF. The solid state relay output ALARM 1 or 2 will open whenever the displayed distance equals this value.

ALARM OFF DISTANCE is usually set to a value which is far enough away from the ALARM ON DISTANCE so that chattering of the alarm will not occur. If delay is set, alarm actuation will be delayed.

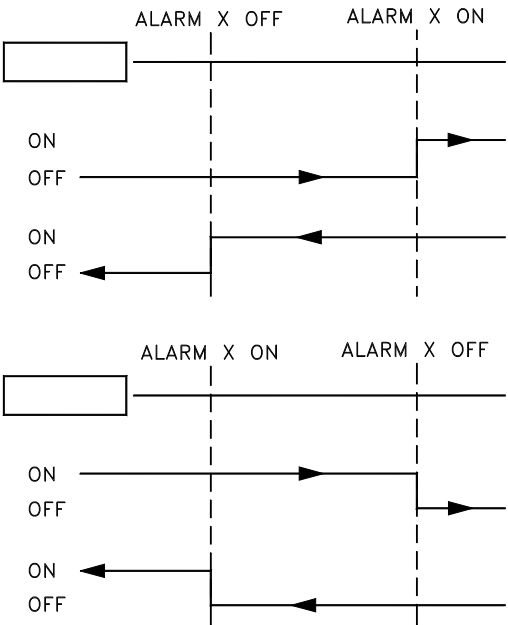

7.0 RANGER MODE INSTRUCTIONS

Apply power. Screen contrast can be adjusted by pressing ← and → for 2 seconds. Adjust using the + and - keys.

To configure the Versatec for Ranger mode (unit must be in "HOLD"), press ↑ and ↓ for 2 seconds. Select Ranger mode by pressing ← or →. Press ↓ to enter the Ranger mode.

The HOME screen (top screen in the figure) appears. It shows the target distance and the present output. The number in the top left corner is the present setup. The alarm indicators (A₁ and A₂) will flash when the alarms are on. The letter in the bottom left corner indicates the status (either A or H).


Automatic Mode: The output automatically adjusts to changes in target position.

Hold Mode: The output is zero when in Hold mode.

The setup can be changed from the SETUP NUMBER screen when in Hold mode. The HOME screen and SETUP NUMBER screen are the only screens accessible when security is set.

You can always return to the HOME screen by pressing **HOME**.

A complete flowchart is shown in Figure 9.

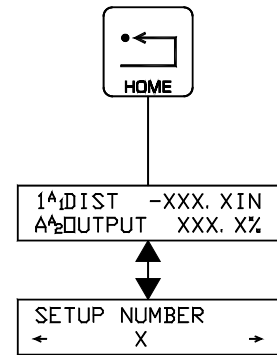

7.1 Ranger Mode Setup


Basic setup cannot be performed if E-STOP is open, or if RUN/STOP is in run mode.

Press **PROGRAM** to enter the TARGET DISTANCES menu. Continue through the screens shown in the figure entering the desired data in each screen.

The Distance for Display = 0 is the distance at which a reading of 0.0 is to occur. For example, if a value of 7 is entered, the Distance will display 0.0 at 7 inches from the sensor.

The Readout Multiplier is the desired scaling value of the Distance. For example, a Readout Multiplier of 3 would make a target distance of 12.0 inches appear as a 36.0.

Distance for Display=0, and Readout Multiplier automatically convert the displayed values for Distance, Position, Distance for Max Output, Distance for Min Output and Alarm 1 and Alarm 2 On and Off.

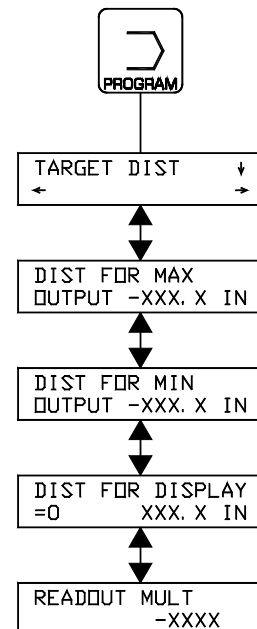


7.2 Ranger Option – Alarm Settings

ALARM 1 ON DISTANCE ALARM 1 OFF DISTANCE ALARM 2 ON DISTANCE ALARM 2 OFF DISTANCE

Enter the desired distance at which ALARM 1 or 2 is to turn ON. The solid state relay output ALARM 1 or 2, will close whenever the displayed distance equals this value.

Enter the desired distance at which ALARM 1 or 2 is to turn OFF. The solid state relay output ALARM 1 or 2 will open whenever the displayed distance equals this value.

ALARM OFF DISTANCE is usually set to a value which is far enough away from the ALARM ON DISTANCE so that chattering of the alarm will not occur. If delay is set, alarm actuation will be delayed.

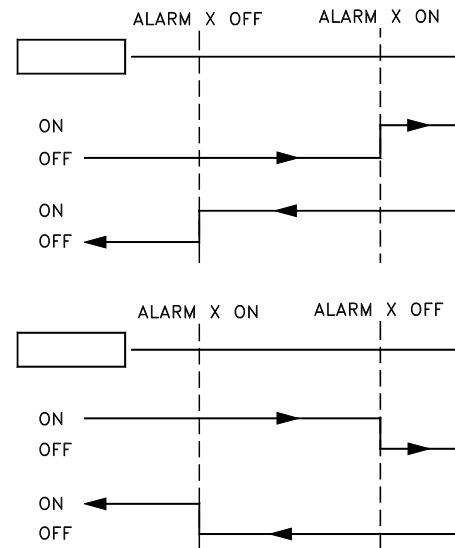

8.0 INSTALLATION OF POWER AMPLIFIERS (IF USED)

8.1 PA-90

Install the PA-90 before applying power to the control.
Remove the VTC cover, or open the VTC-E door.
Set JP1 on the Versatec p.c. board to "0-10V".
Set JP1 on the power amplifier for the desired output current range.
On model VTC, unplug TB6 and remove the knockout from the rear of the enclosure.
Mount Power Amplifier per Figure 4 using the standoffs provided with the PA-90.
Re-secure cover or door.

When using the PA-90, the 0 to 10 vdc control output is still active but no longer isolated, and is referenced to the AC line.

8.2 PA-2

Install the PA-2 before applying power to the control.
Remove the VTC cover, or open the VTC-E door.
Set JP1 on the Versatec p.c. board to "0-10V".
Set JP1 and JP2 on the power amplifier for the desired output voltage and current range.
On model VTC unplug TB6 and remove the knock-out from the rear of the enclosure.
Mount Power Amplifier per Figure 4 using the standoffs provided with the PA-2.
Re-secure cover or door.

When using the PA-2, the 0 to 10 vdc control output is still active but no longer isolated, and is referenced to the AC line.

9. OPTIONAL CONNECTIONS, FUNCTIONS AND OTHER TECHNICAL INFORMATION

A complete wiring diagram is shown in Figure 5.

TABLE OF CONTENTS

FUNCTION

RUN/STOP	9.1
E-STOP	9.2
REMOTE TENSION ON/OFF	9.3
DANCER POSITION SENSOR	9.4
ALARM	9.5
TENSION ON/OFF OUTPUT	9.6
OUTPUT INDICATORS	9.7
TENSION OUT	9.8
INVERSE DIAMETER OUTPUT	9.9
TENSION UP / TENSION DOWN	9.10
REMOTE SETUP SELECT	9.11
ISOLATED LOGIC INPUTS	9.12
SELECTING OUTPUT VOLTAGE/CURRENT	9.13
RESET HOLD	9.14

9.1 RUN/STOP

Connect TB3.6 to TB3.8 to initiate the stopping function. Open the connection between TB3.6 and TB3.8 to run.

When using the internal 5 vdc supply (set JP6-5 (OPTO SUPPLY) to INT (internal)), 2 madc flows in the switch. See Section 9.12 to use isolated logic inputs (5 or 24 vdc).

9.2 E-STOP (E-STOP IS AN AUXILIARY FUNCTION NOT INTENDED TO PROVIDE CATEGORY 1 SAFETY PROTECTION)

Open the connection between TB3.6 and TB3.7 to initiate E-STOP. To run again, connect TB3.6 and TB3.7 and toggle the run/stop connection.

When using the internal 5 vdc supply (set JP6-5 (OPTO SUPPLY) to INT (internal)), 2 madc flows in the switch. See Section 9.12 to use isolated logic inputs (5 or 24 vdc).

9.3 REMOTE TENSION ON/OFF

The output can be set to zero from a remote location by using the remote Tension On/Off.

Either of two optional modes of operation are selected using PROGRAM-CONFIGURATION.

TOGGLE duplicates **TENSION ON/OFF** on the keypad. A momentary connection between TB3.5 and TB3.6 will toggle between TENSION ON and OFF. When the toggle is selected, the **TENSION ON/OFF** key remains functional.

LEVEL turns TENSION OFF when TB3.6 is connected to TB3.5. When level is selected, the **TENSION ON/OFF** key is disabled.

When using the internal 5 vdc supply (set JP6-5 (OPTO SUPPLY) to INT (internal)), 2 madc flows in the switch. See Section 9.12 to use isolated logic inputs (5 or 24 vdc).

9.4 DANCER POSITION SENSOR

Connect DFP or DFP2 to terminals TB3.10, TB3.11, TB3.13 (TB3.12 is not used) when using Dancer mode.

9.5 ALARM 1, ALARM 2

Both alarm outputs function identically but are independent. Each has an open collector, open emitter NPN output which can switch up to 100 ma at 30 vdc. The alarm output can be made TTL compatible by setting JP3 and JP4 to the 4 ma setting. An output is considered to be on when the VTC connects the two terminals together. For example, when ALARM 1 is turned on, terminals TB4.1 and TB4.2 are connected together.

When in Tension mode or Dancer mode with a diameter signal, ALARM 1 turns on when the target reaches the MIN DIAMETER DETECT distance. ALARM 2 turns on when the target reaches the MAX DIAMETER DETECT distance. When in Ranger mode or Free Loop mode there are four distance settings ALARM 1 ON DISTANCE, ALARM 1 OFF DISTANCE, ALARM 2 ON DISTANCE, and ALARM 2 OFF DISTANCE which determine at what target position each alarm will turn on or off. JP2 can be used to make this output TTL compatible.

9.6 TENSION ON/OFF output

This is an output which has the same electrical capabilities as the ALARM outputs. The Versatec connects terminals TB4.5 and TB4.6 when tension is on and disconnects them when tension is off.

9.7 TENSION INDICATORS (0 to 1 mdc)

A 1 mdc meter may be connected to terminals TB3.2 and TB3.4 to get a remote indication of % TENSION setpoint.

9.8 TENSION OUT (4 to 20 mdc)

A 4 to 20 mdc signal is provided to set the load on the dancer arm. Connect to terminals TB3.1 and TB3.4.

9.9 INVERSE DIAMETER OUTPUT (0 to 10 vdc)

A 0 to 10 vdc output is provided that is inversely proportional to diameter. This can be used on rewinds that utilize clutches to reduce the motor input speed as the roll builds, which will reduce the heat dissipation in the rewind clutch. Connect to terminals TB3.3 and TB3.4. You must have a US-2 diameter signal to use this feature.

9.10 TENSION UP / TENSION DOWN

TENSION MODE:

Connecting terminal TB3.17 to TB3.15 will cause tension (when in Auto mode) or the manual level (when in Manual mode) to increase.

Connecting terminal TB3.18 to TB3.15 will cause tension (when in Auto mode) or the manual level (when in Manual mode) to decrease.

FREE LOOP MODE:

Connecting terminals TB3.17 and TB3.15 will increase position. TB3.18 and TB3.15 will decrease position.

DANCER MODE:

Connecting terminals TB3.17 and TB3.15 will increase the Tension output. TB3.18 and TB3.15 will decrease the Tension output.

9.11 REMOTE SETUP SELECT

The setup can be changed remotely. The Versatec must be in Hold mode to change setup. The following table defines the function of the setup select terminals.

Setup	TB3.16	TB3.14
1	Open	Open
2	Open	Closed
3	Closed	Open
4	Closed	Closed


9.12 ISOLATED LOGIC INPUTS

If it is desired to isolate the logic inputs on TB4 to interface with other equipment or for increased noise immunity, an external power supply can be used as shown in Figure 1. On the main PCB set JP6 and JP5 (OPTO SUPPLY) to EXT (external).

9.13 SELECTING OUTPUT VOLTAGE/CURRENT

The output voltage/current at TB5.1(+) and TB5.2(-) is set by positioning jumpers on JP1 as shown in figure to the right. JP1 must be set for 0 to 10 vdc when the PA-90 or PA-2 Power Amplifiers are used.

The -10 to +10 vdc output is normally used with regenerative drives in torque mode. When using -10 to +10 vdc output, select -10 to +10 vdc in the OUTPUT RANGE screen of the Configuration menu.

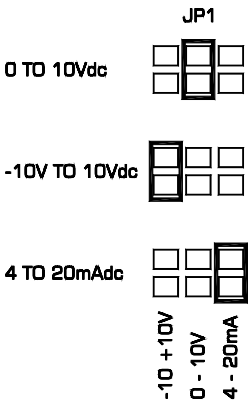

9.14 RESET HOLD

Connect TB3.9 to TB3.6 to enable reset hold. Used in Dancer mode only.

10. FEATURES COMMON TO ALL MODES

The following are the screens which are common to all the operating modes.

CONFIGURATION 10.1

STOP AND ALARMS 10.2

COPY SET-UPS 10.3

UNLOCKED 10.4

SENSOR ALIGN 10.5

RECALIBRATE OUTPUT 10.6

10.1 CONFIGURATION SCREENS

SELECT LANGUAGE	ENGLISH, FRANCAIS, DEUTSCH, ESPANOL, or ITALIANO
SELECT UNITS	ENGLISH, METRIC
OUTPUT RANGE	Select -10 to +10 vdc if using a regenerative drive.
ECHO REJECT DIST	The VERSATEC ignores objects that are closer to the ultrasonic sensor than this distance. The minimum distance allowed between the actual target and ECHO REJECT DISTANCE is 2 inches (50 mm).

10.2 STOP AND ALARMS SCREENS

ALARM TIME DELAY	Delays are timed from the moment the target reaches the trigger distance (minus hysteresis if any). If the target moves outside the trigger distance before the delay time is passed, the output will not activate and the delay will be reset as if the target had never reached the trigger distance. The factory setting is 0.01 seconds.
------------------	--

10.3 COPY SETUPS

There are four independent setups. Each contains its own complete set of parameters. You can switch between setups only while stopped using the setup number screen, in the OPERATOR LOOP. Each setup can be entered individually as described in the previous sections, or the parameters in any one setup can be copied to any other setup by using the COPY SETUPS screen. COPY SETUPS always copies from a selected setup to the present setup. You can also copy the factory DEFAULTS to the present setup.

10.4 UNLOCKED

PROGRAM-UNLOCKED can be used to prevent changes to all the programming parameters. When secured, only values in the operator screens can be changed.

10.5 SENSOR ALIGN

The sensor align screen is provided to aid in initial positioning of the US-2 sensor. The screen will show **** if no echo is received and will show the distance to the target when properly aligned.

10.6 RECALIBRATE OUTPUT

The RECALIBRATE OUTPUT screen allows fine adjustment of the output voltage/current at 0% and 100%. Use the + or – keys to adjust the actual output with a meter on TB5.1 and TB5.2

11. TROUBLE SHOOTING FOR ALL OPERATING MODES

PROBLEM	POSSIBLE CAUSE	SOLUTION OR DIAGNOSTIC
Screen blank or hard to read	Contrast misadjusted Power select switch improperly set.	Press ←, → for 2 seconds. Use + and - to adjust. Set 115/230 vac power select switch to the appropriate voltage.
Output always low	TENSION ON/OFF set to OFF	If REMOTE TENSION ON/OFF is set to "TOGGLE" press TENSION ON/OFF on the keypad once. If REMOTE TENSION ON/OFF is set to "LEVEL" one or more of the remote tension off switches are closed.
	E-STOP is active (except unwind). E-STOP is wired incorrectly. JP6-5 not set for the proper logic supply.	If the internal logic is being used (the factory default) TB3.6 must be connected to TB3.7 to disable E-STOP. Also verify JP6-5 is set to "INT". If an external logic supply is used see Section 9.12.
Output always high	E-STOP is active (unwinds only). E-STOP is wired incorrectly. JP6-5 not set for the proper logic supply.	If the internal logic is being used (the factory default) TB3.6 must be connected to TB3.7 to disable E-STOP. Also verify JP6-5 is set to "INT". If an external logic supply is used see Section 9.12.

Cannot enter PROGRAM	Not in Hold mode: RUN/STOP not wired correctly. JP6-5 not set for the proper logic supply.	If the internal logic supply is being used (the factory default) TB3.8 must be connected to TB3.6 to be in Hold mode. Also verify JP6-5 set to "INT". If an external logic supply is used see Section 9.12.
Front panel TENSION ON/OFF does not work	VTC configured for LEVEL for external TENSION ON/OFF	When LEVEL is selected for TENSION ON/OFF only external tension on/off can be used.
	E-STOP is active E-STOP is wired incorrectly JP6-5 not set for the proper logic supply.	If the internal logic is being used (the factory default) TB3.6 must be connected to TB3.7 to disable E-STOP. Also verify JP6-5 set to "INT". If an external logic supply is used see Section 9.12. This is normal for Free Loop and Dancer, Speed modes.
Cannot change to a different setup	Not in Hold mode RUN/STOP not wired correctly JP6-5 not set for the proper logic supply	If the internal logic supply is being used (the factory default) TB3.8 must be connected to TB3.6 to be in Hold mode. Also verify JP6-5 set to "INT". If an external logic supply is used see Section 9.12.
	Remote setup selection enabled	You cannot change setup from the keypad when using remote setup selection.

12. RESET PROCEDURES

If it is desired to reset parameters to factory default values perform one of the following reset procedures:

1. Turn the power to the Versatec "OFF" for 5 seconds.
2. Press + and - simultaneously.
3. While holding the keys down, turn the power "ON".
4. Release both keys when the screen appears. The screen will display "RESET
← NO →"
5. Press → to display "RESET
← YES →"
6. Press ↓.
7. Program reset is complete. The basic setup has been erased, and all other programming has been reset to factory default values
The VERSATEC has returned to the Tension Mode

VERSATEC Specifications

Supply Voltage 115 or 230 vac, $\pm 10\%$
 Supply Frequency: 50 or 60 cycles per second, sinusoidal
 Fuses: F1, F2 1.6 amp, Littelfuse Part No. 21601.6, or
 Wickmann Part No. 19194-053-FS

Enclosure
 VTC Front Panel IP65 (IEC529)
 Enclosure IP20 (IEC529)
 VTC-E IP65 (IEC529)

Climatic Class: 3K3 (EN60721)
 Temperature Range:
 Operating 0°C to 40°C
 Storage -30°C to +80°C
 Relative Humidity 5% to 85%
 Pollution Degree: 2 (IEC664-1)
 Altitude: 0 to 2000 m

Compatible Residual
 Current Device Types: A or B (IEC755)
 Worst Case Fault Current: 1.6 amp ac

Inputs:

Power	115/230 vac +/- 10%, 50/60 Hz Switch selectable, 1.6 amp max
Ultrasonic Sensor	MAGPOWR US-2
E-Stop	Switch closure or 5 vdc or 24 vdc logic
Run/Stop	Switch closure or 5 vdc or 24 vdc logic
Tension On/Off	Switch closure or 5 vdc or 24 vdc logic
Remote Setup Select	Switch closure, or 5 vdc or 24 vdc logic
Remote Tension Adjust	Switch closure, or 5 vdc or 24 vdc logic
Reset Hold	Switch closure, or 5 vdc or 24 vdc logic
Dancer Position	MAGPOWR DFP or DFP-2 Sensor (0 to 5 vdc) 1 to 10 kohm potentiometer

Outputs:

Control Output	0 to 10 vdc, 1 ma max 4 to 20 madc, 500 ohm max -10 to +10 vdc, 1 madc max
Inverse Diameter	0 to 10 vdc, 1 madc max
Tension Output	4 to 20 madc, 500 ohm max
Tension Output Reference	0 to 1 madc, 500 ohm max
Alarm Outputs 1 & 2	dc solid state relay; 100 madc, 30 vdc max or TTL levels
Tension On/Off Reference	dc solid state relay; 100 madc, 30 vdc max or TTL levels

US-2 Sensing Range: 6 in. (152 mm) to 60 in. (1524 mm)

Resolution: .025% of span, or .007 in. (.18 mm) whichever is larger

Typical Accuracy: .05 in. at 25°C

Error due to air temperature change: .2% / °C



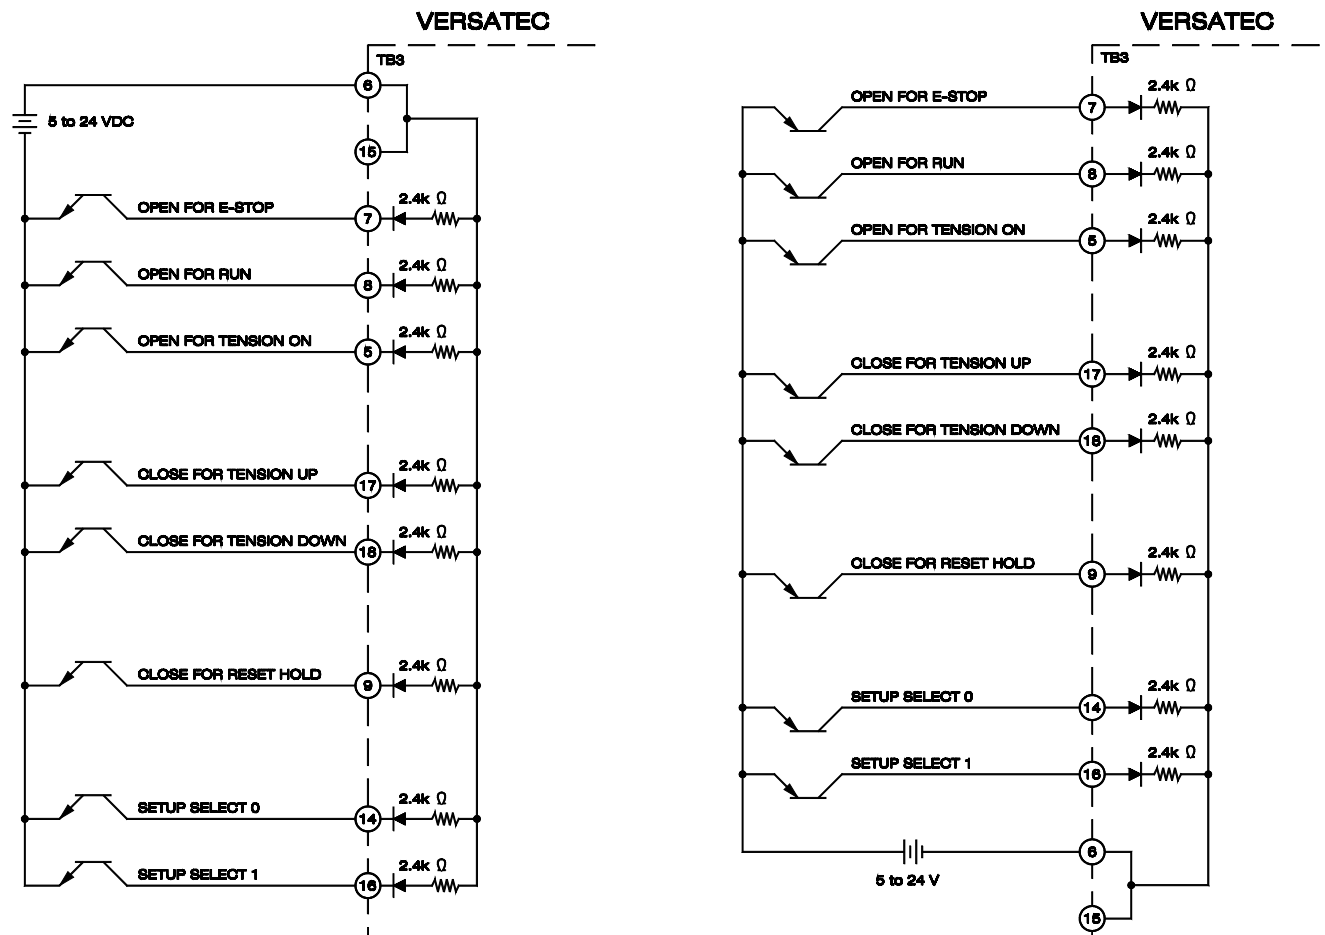


Figure 1

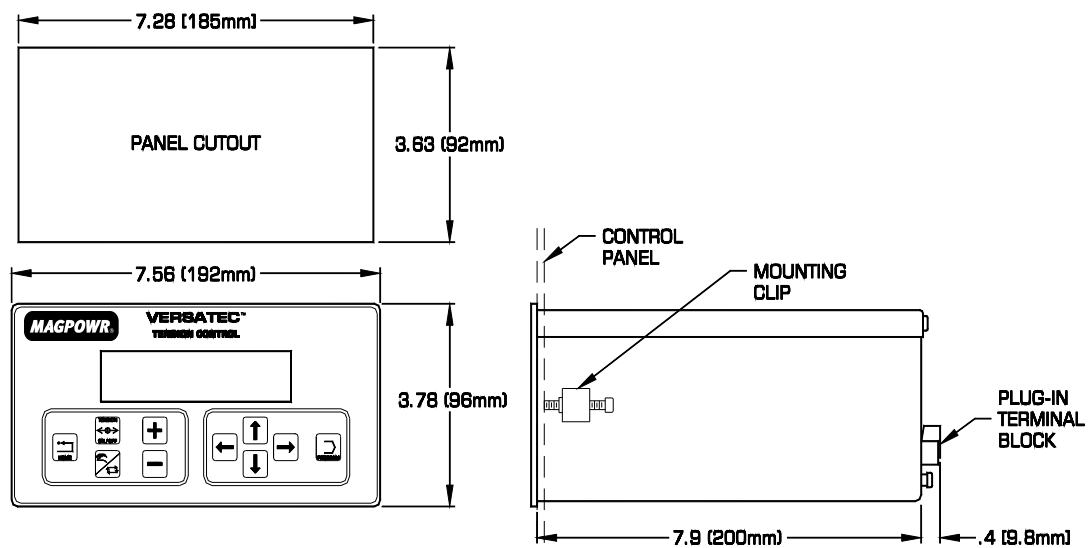

MODEL VTC

Figure 2

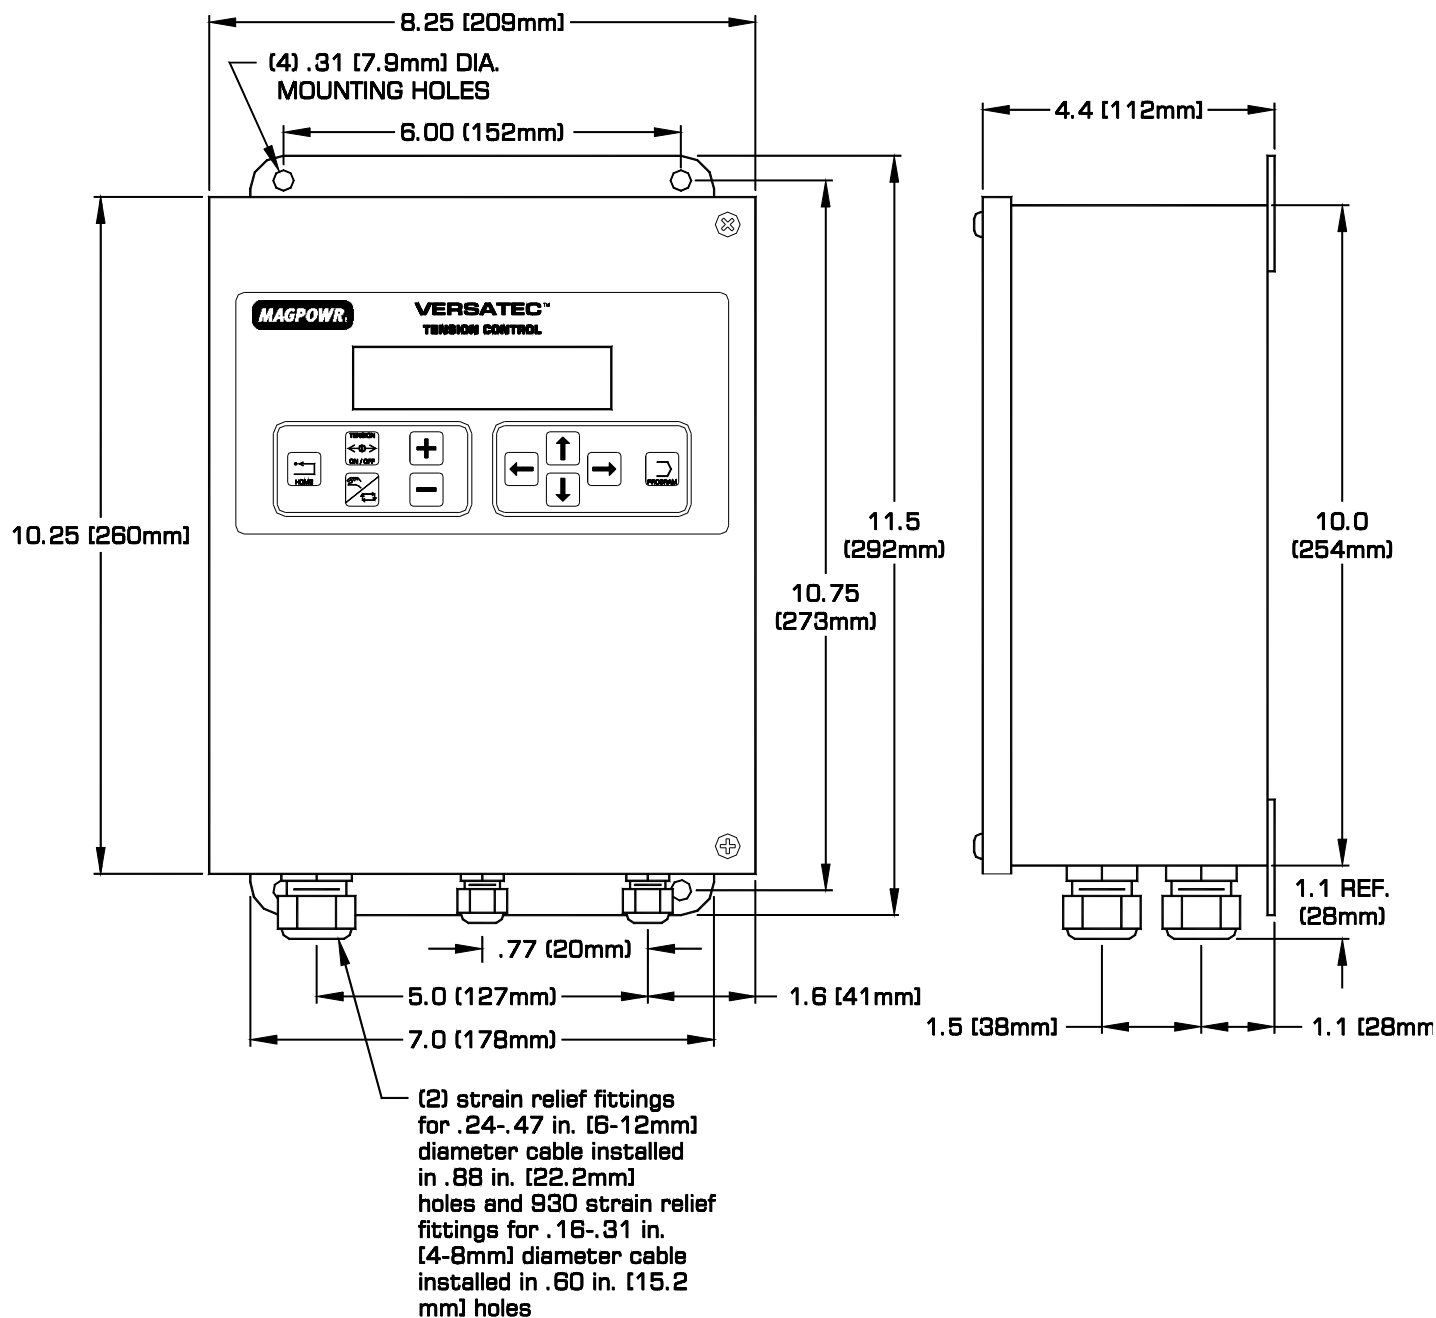


MODEL VTCE

Figure 3

JP1 CURRENT RANGE					
AMP	1	2	3	4	5
1/8	•	•	•	•	•
1/4	•	•	•	•	•
1/2	•	•	•	•	•

PA-90 JUMPER SETTINGS
(SHOWN IN FIGURE)

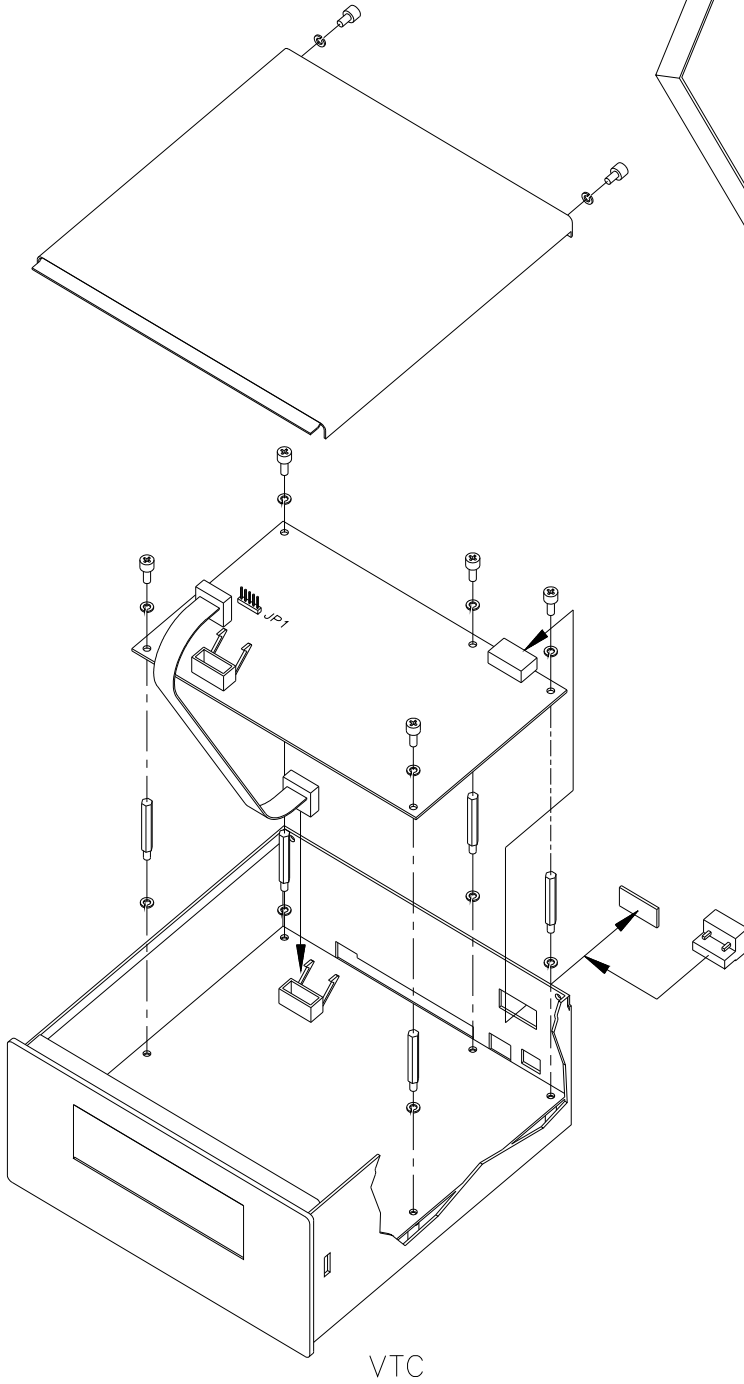

VTCE

JP1 OUTPUT VOLTAGE	
•	90V
•	24V

JP2 CURRENT RANGE									
AMP	1	2	3	4	5	6	7	8	9
1/8	•	•	•	•	•	•	•	•	•
1/4	•	•	•	•	•	•	•	•	•
1/2	•	•	•	•	•	•	•	•	•
* 1	•	•	•	•	•	•	•	•	•
* 2	•	•	•	•	•	•	•	•	•

* 24 VDC OUTPUT ONLY

PA-2 JUMPER SETTINGS
(NOT SHOWN IN FIGURE)

Figure 4



AMERICAS

Tel +1.405.755.1600
Fax +1.405.755.8425
sales@maxcessintl.com
www.maxcessintl.com

**EUROPE, MIDDLE EAST
AND AFRICA**

Tel +49.6195.7002.0
Fax +49.6195.7002.933
sales@maxcess.eu
www.maxcess.eu

CHINA

Tel +86.756.881.9398
Fax +86.756.881.9393
info@maxcessintl.com.cn
www.maxcessintl.com.cn

INDIA

Tel +91.22.27602633
Fax +91.22.27602634
india@maxcessintl.com
www.maxcess.in

JAPAN

Tel +81.43.421.1622
Fax +81.43.421.2895
japan@maxcessintl.com
www.maxcess.jp

**KOREA, TAIWAN,
AND SE ASIA**

asia@maxcessintl.com
www.maxcess.asia

TENSION MODE

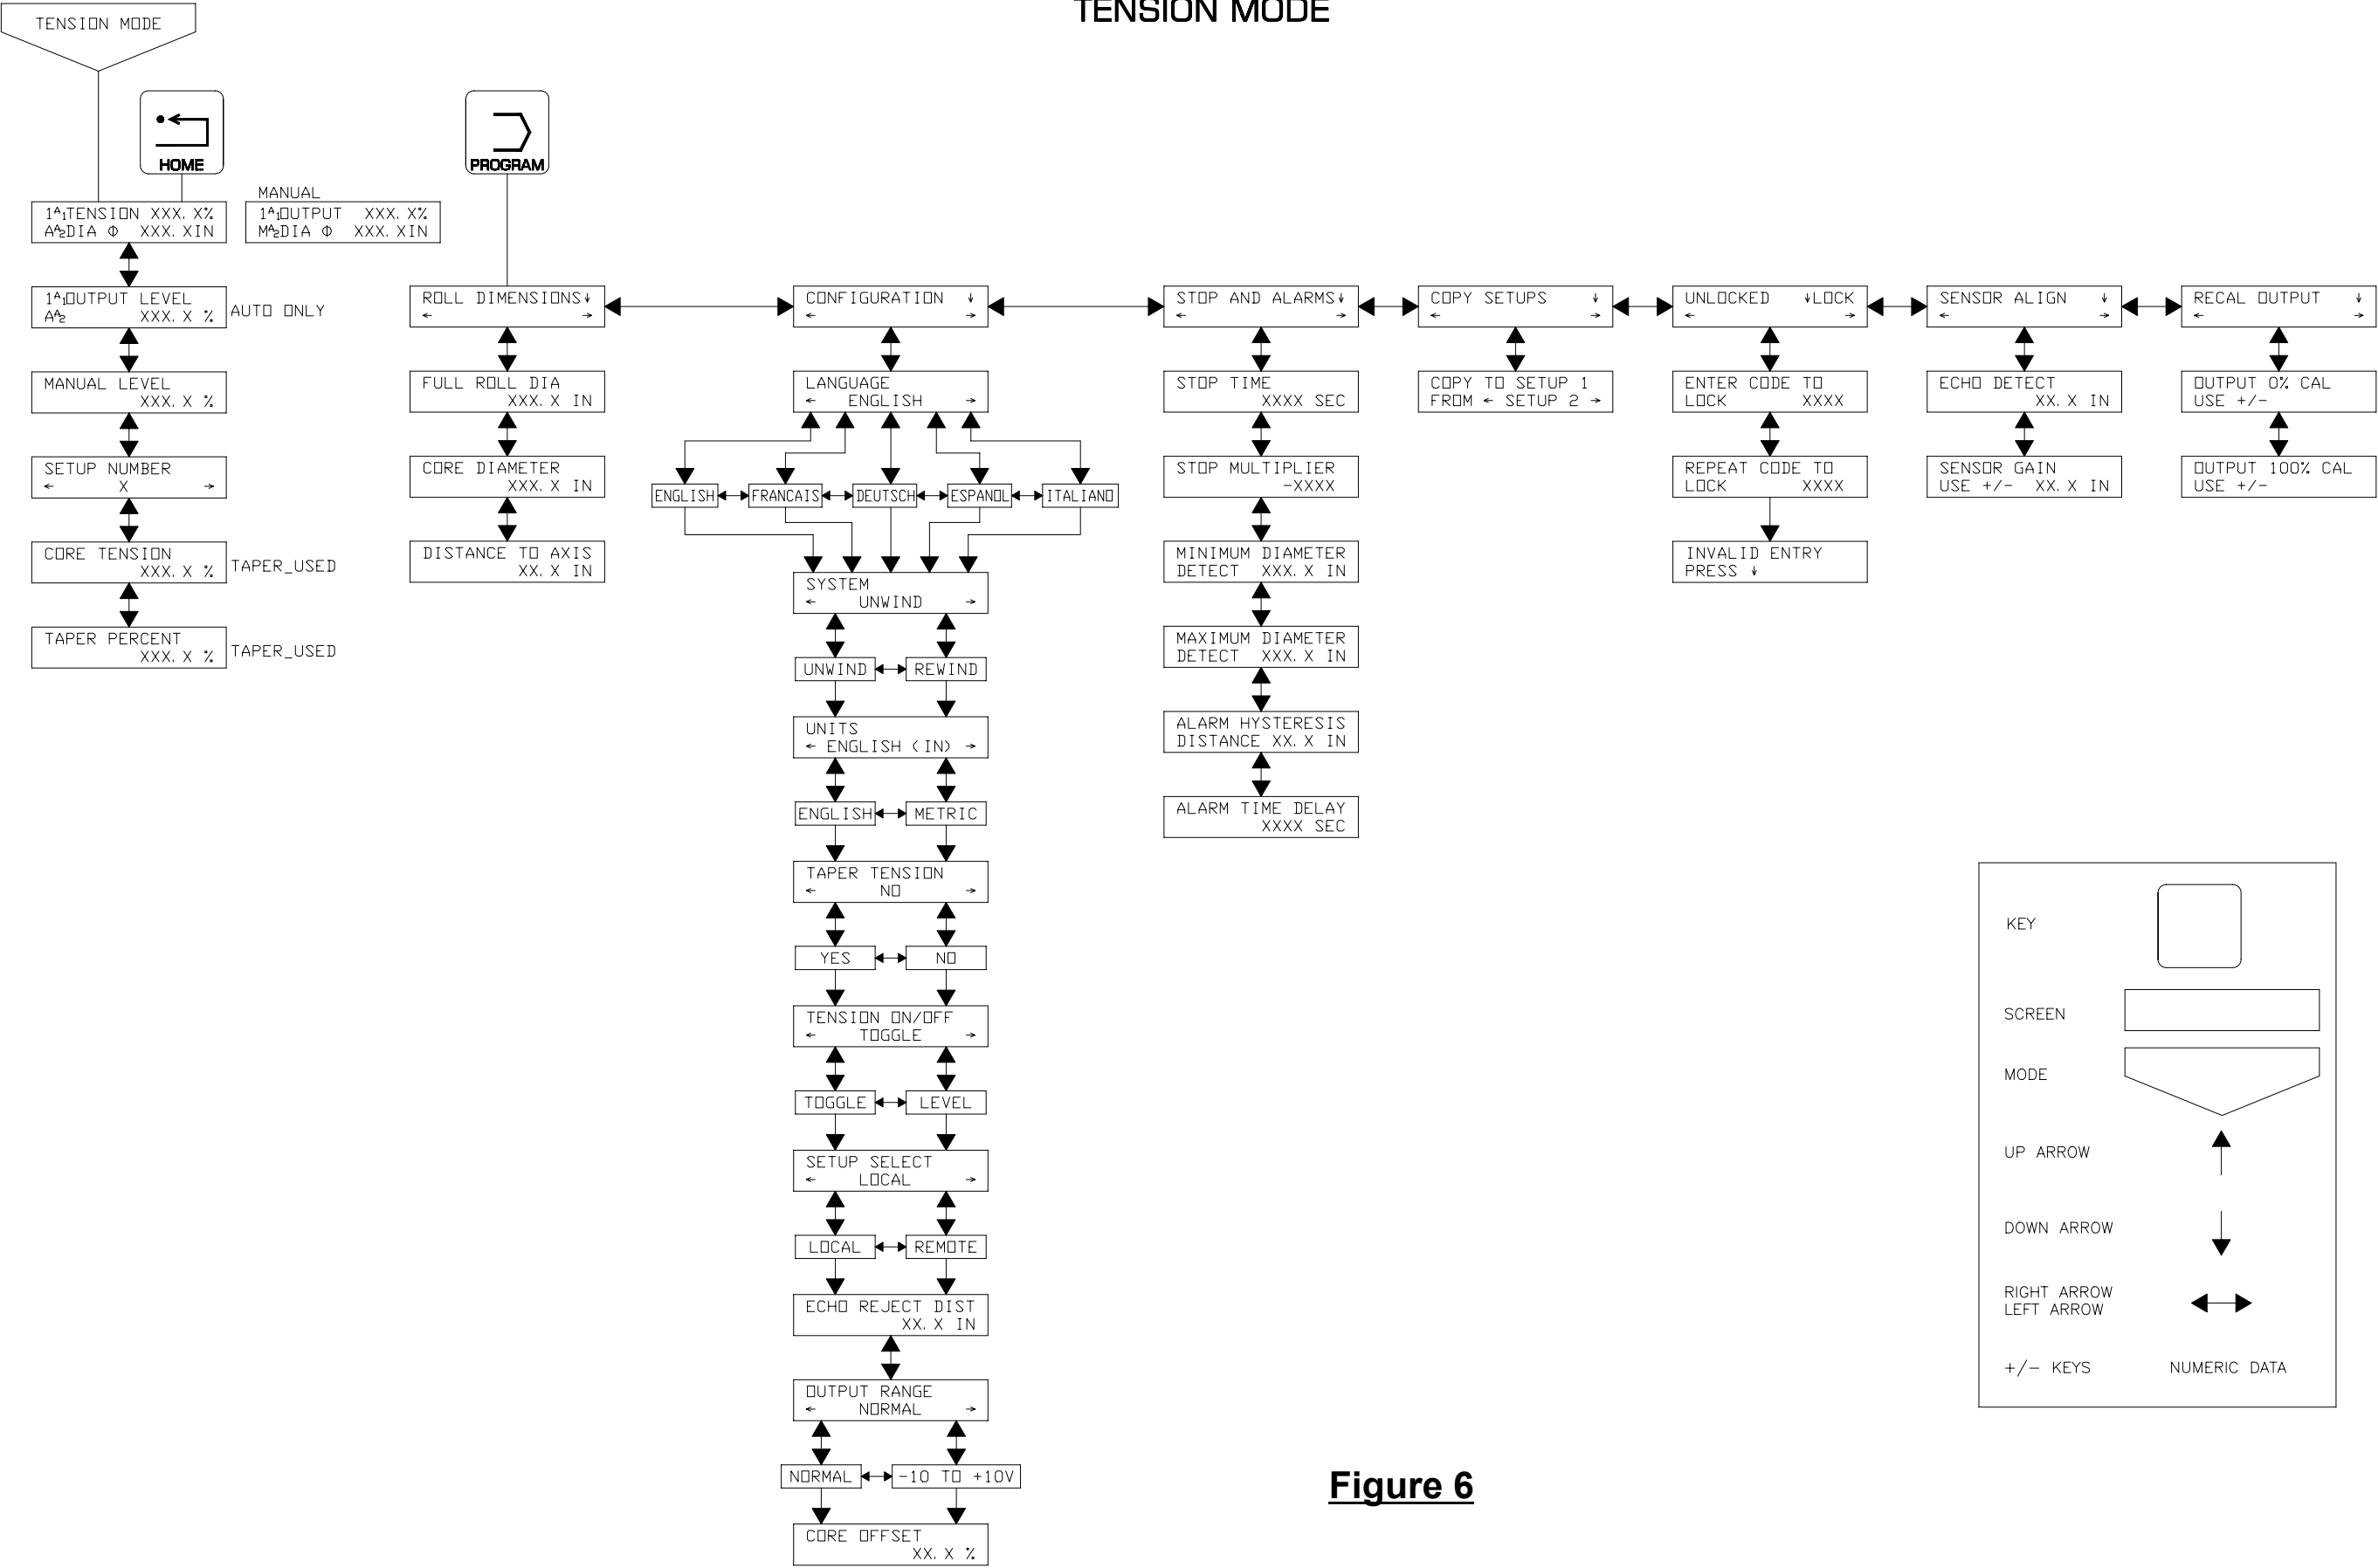


Figure 6

DANCER MODE

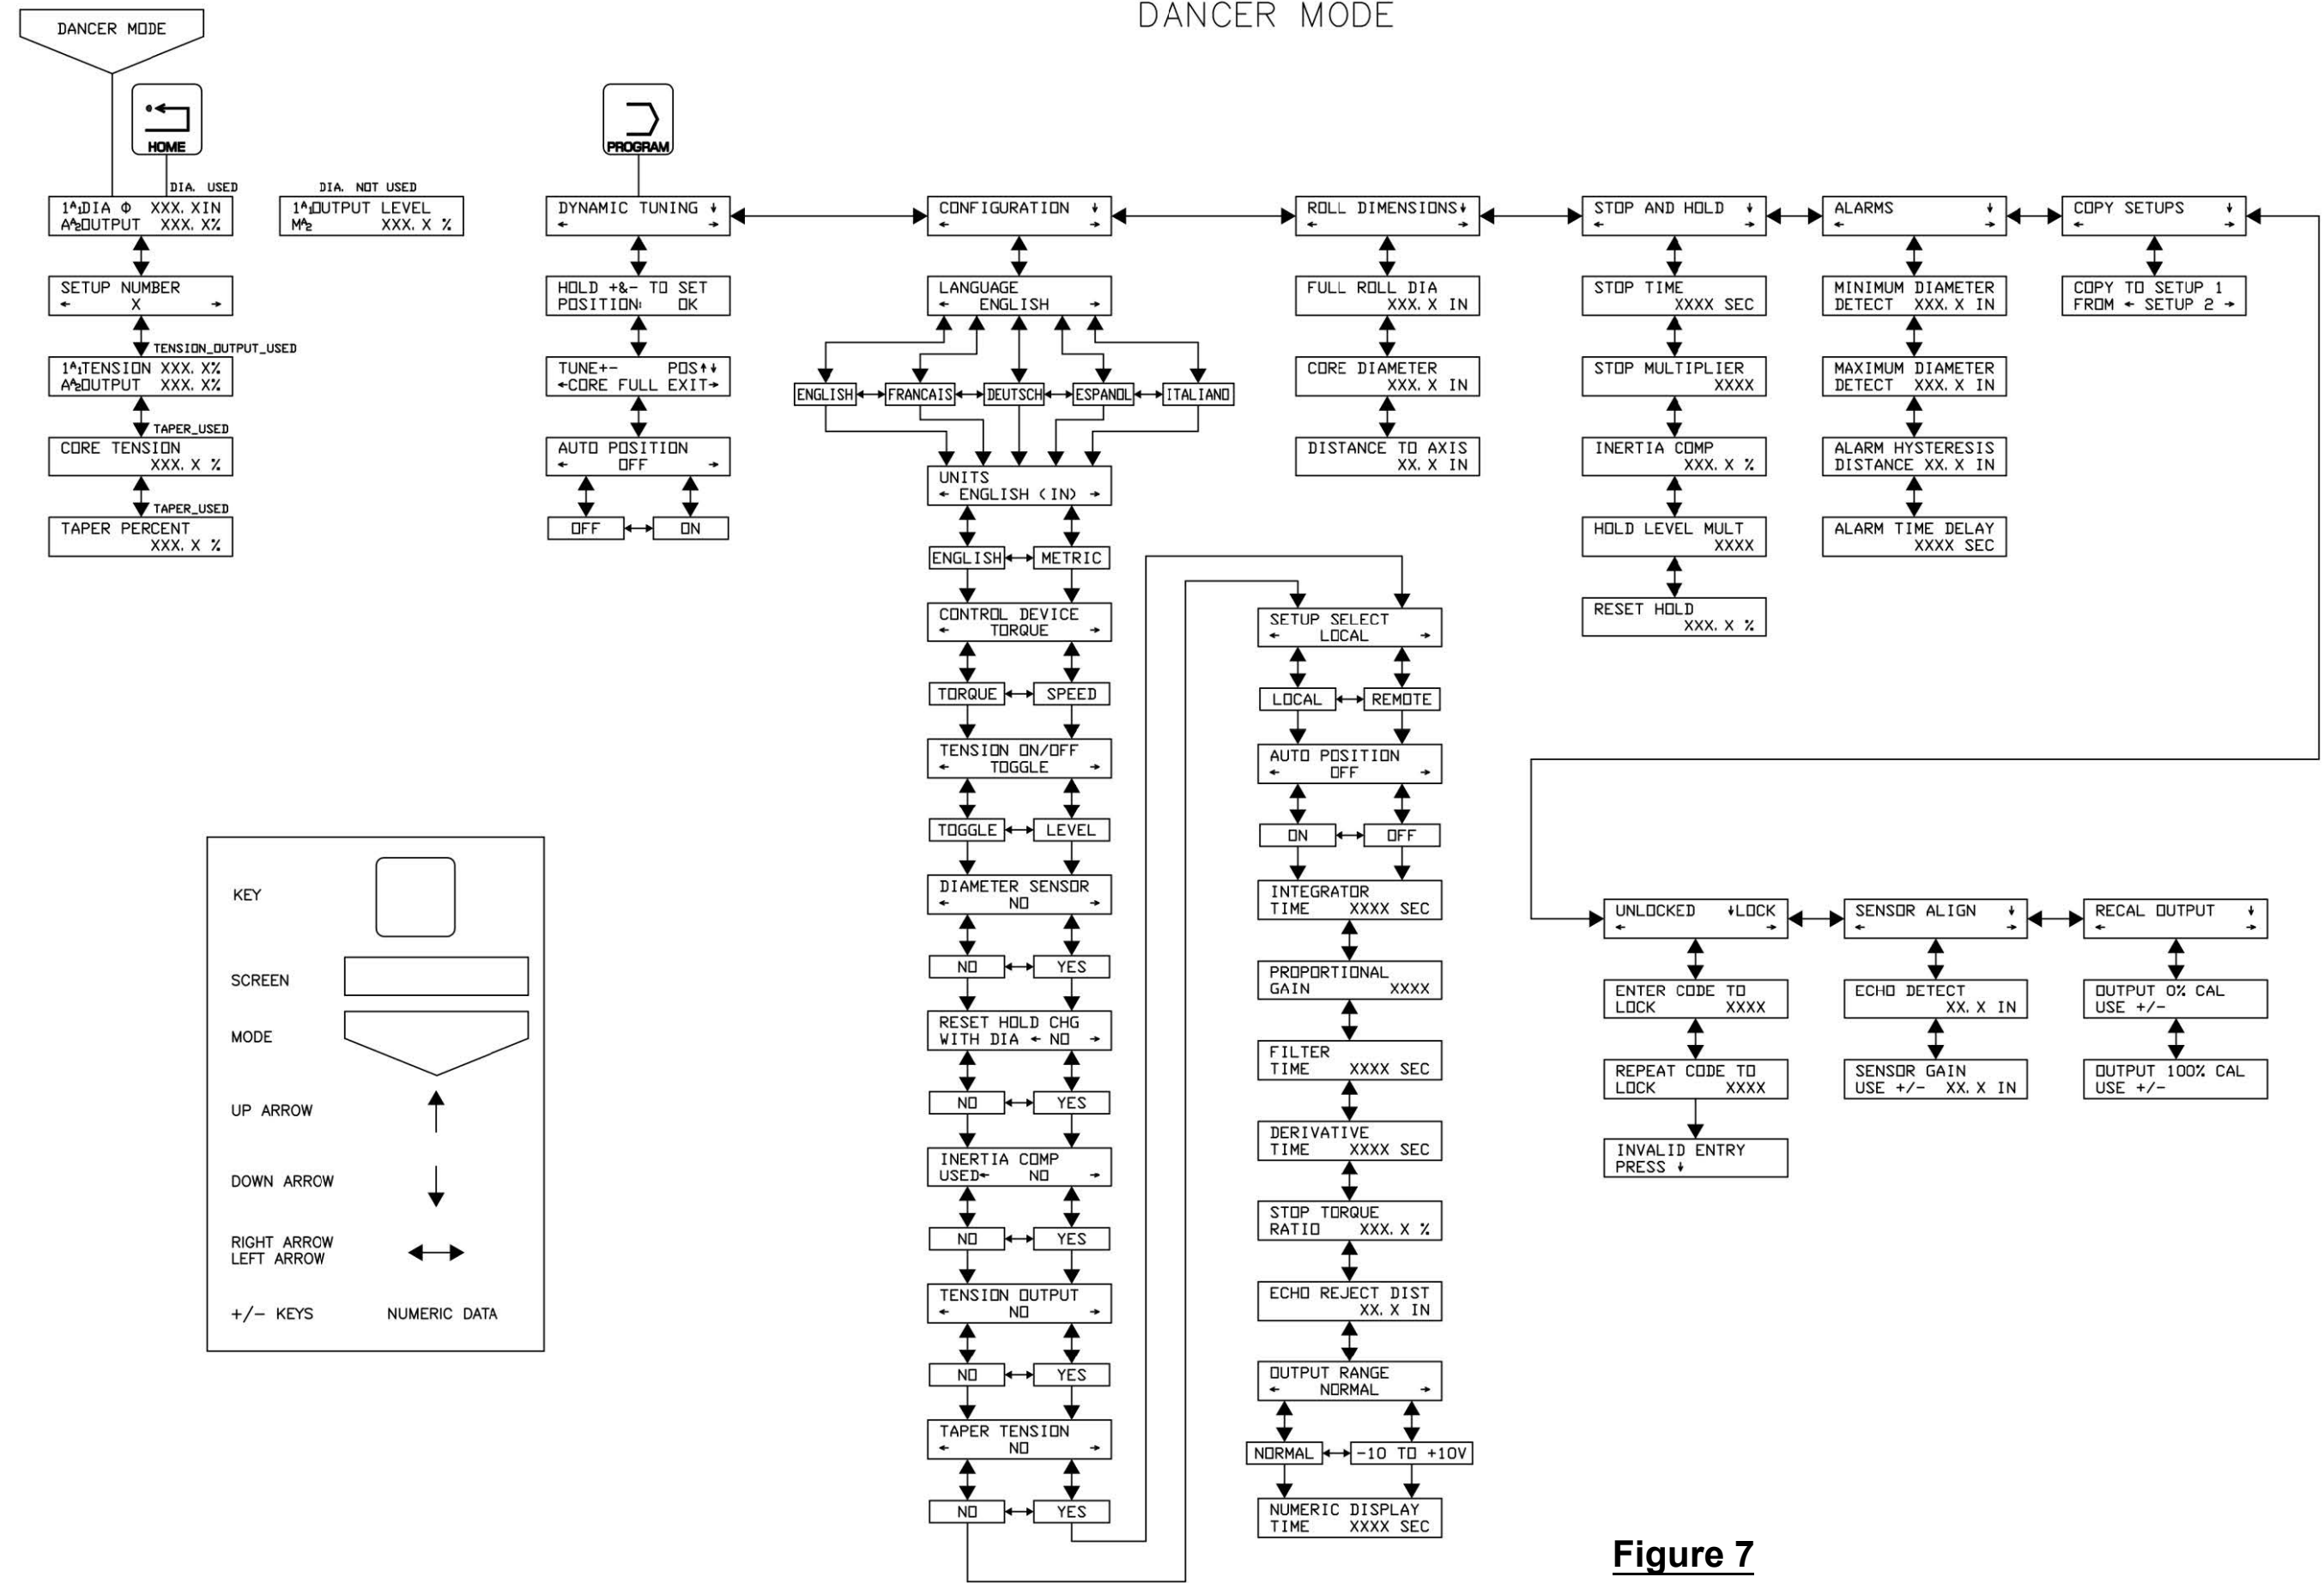


Figure 7

FREE LOOP MODE

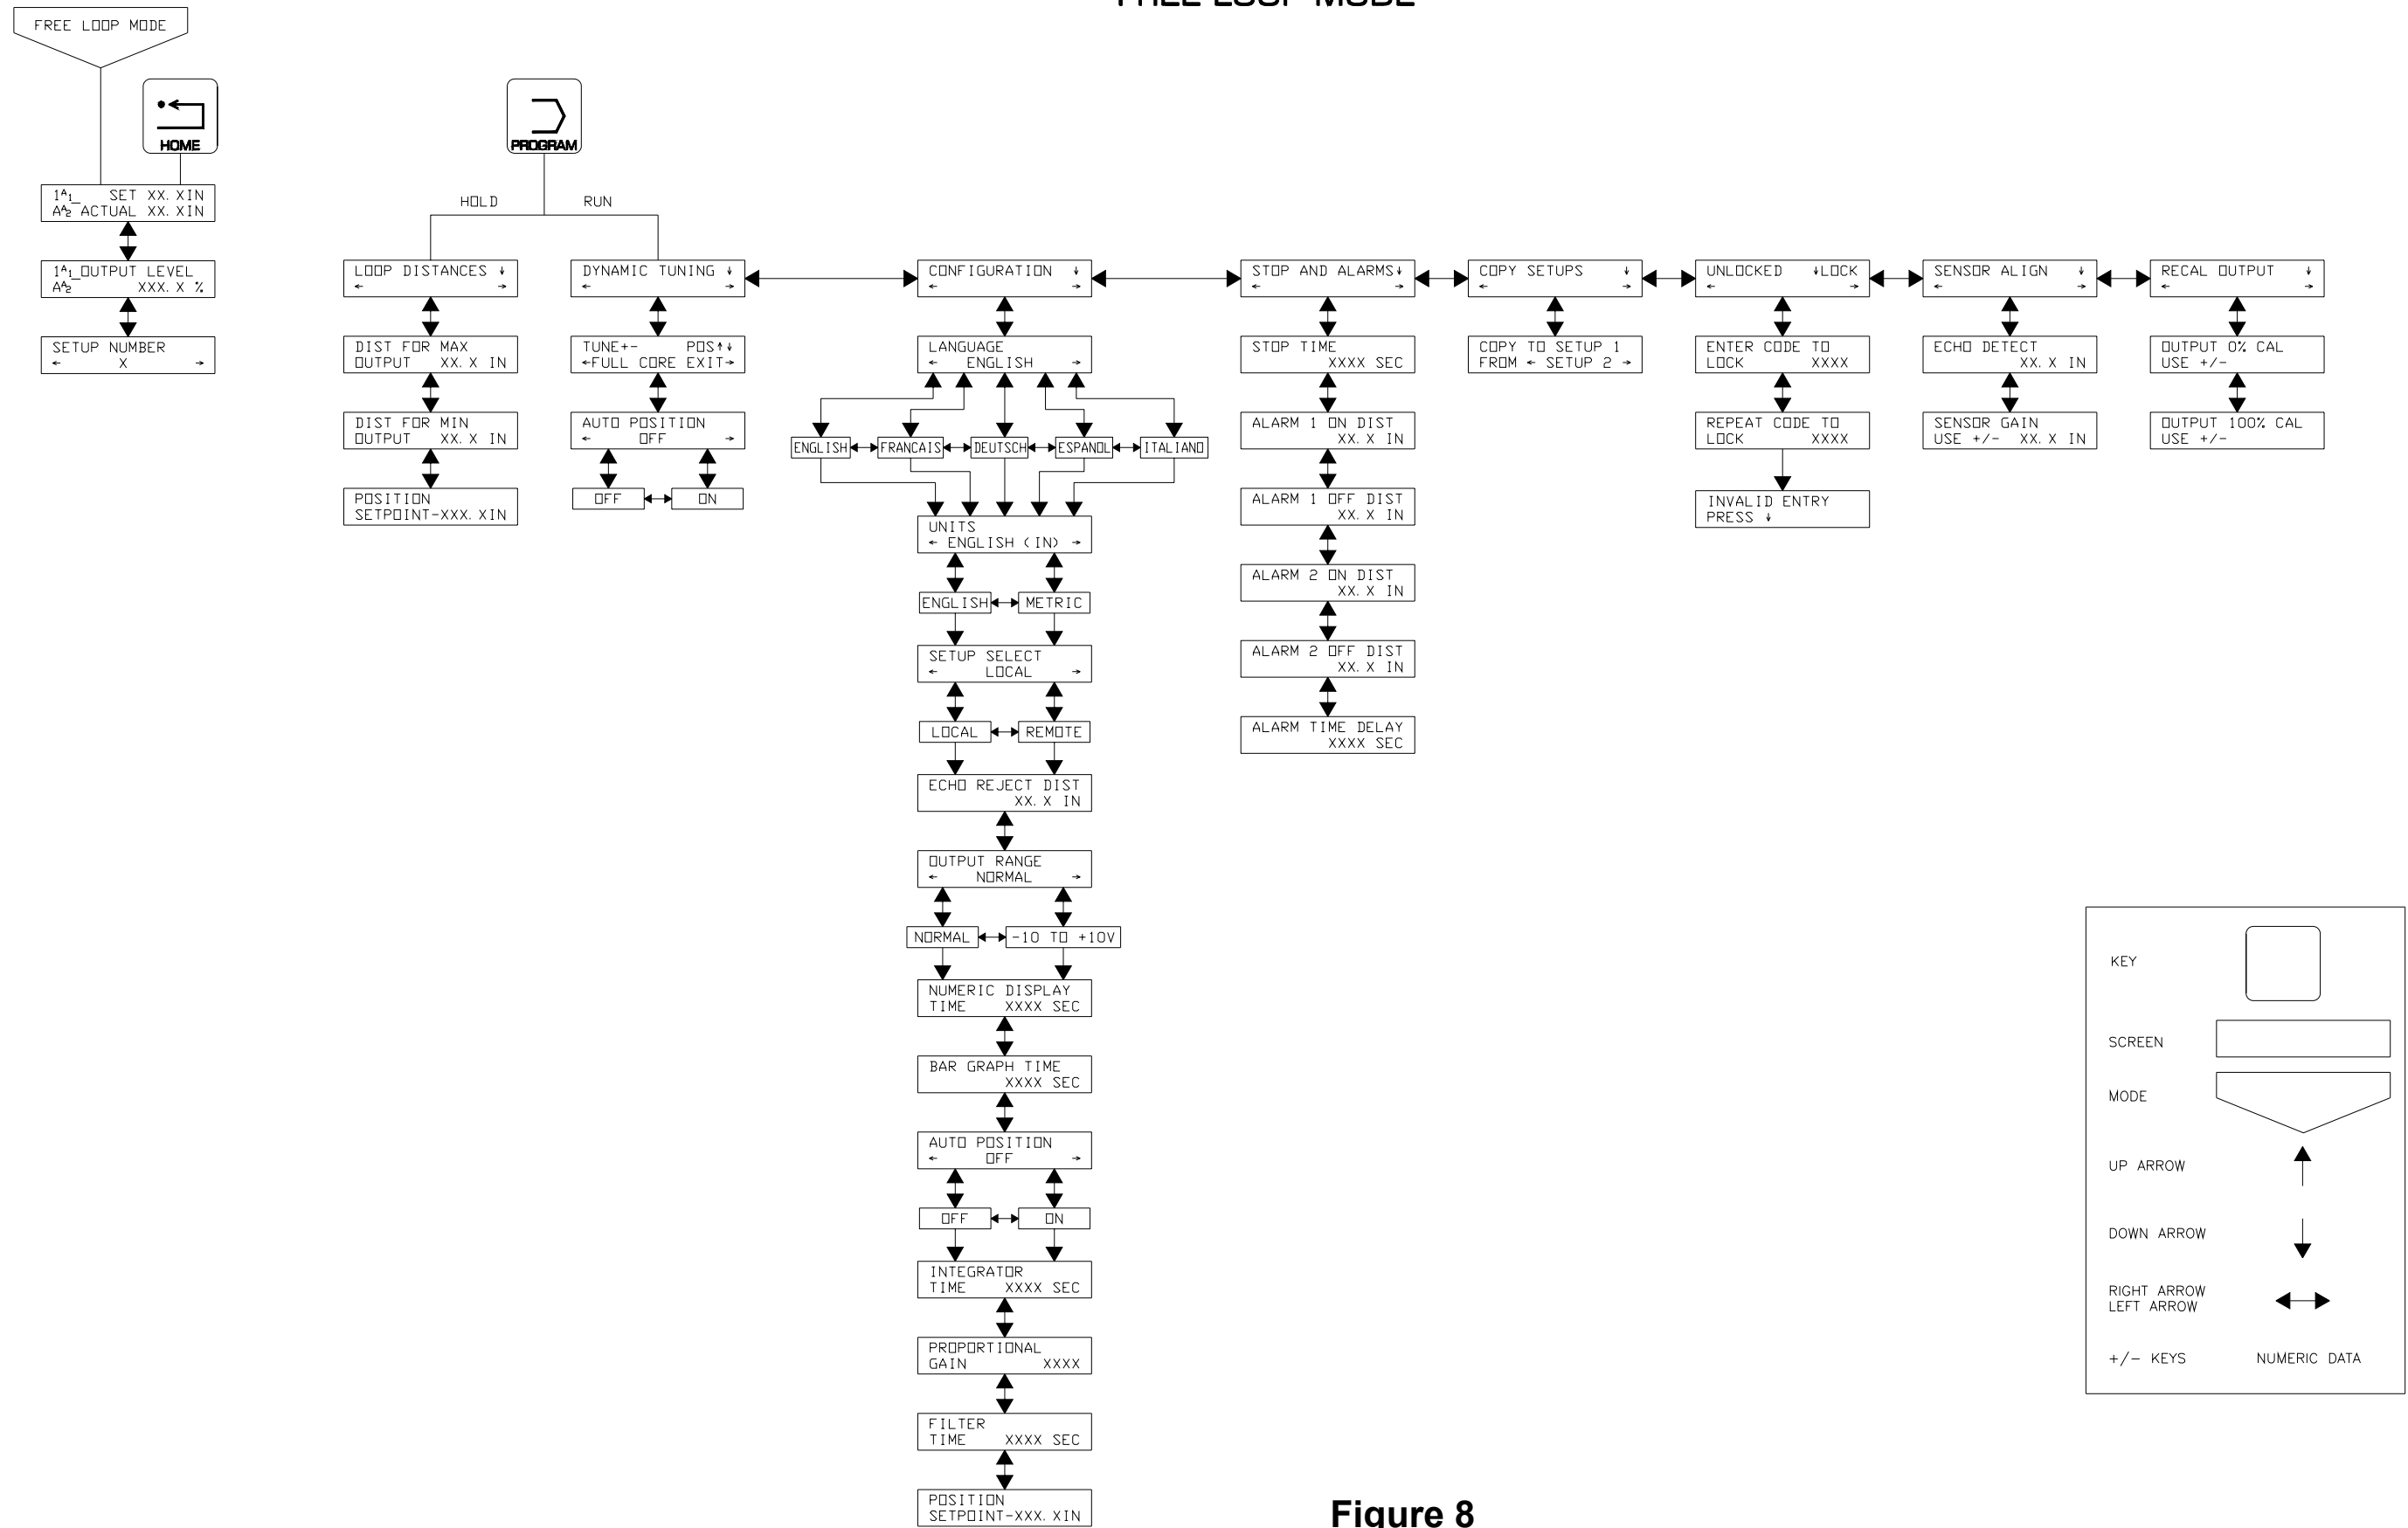


Figure 8

RANGER MODE

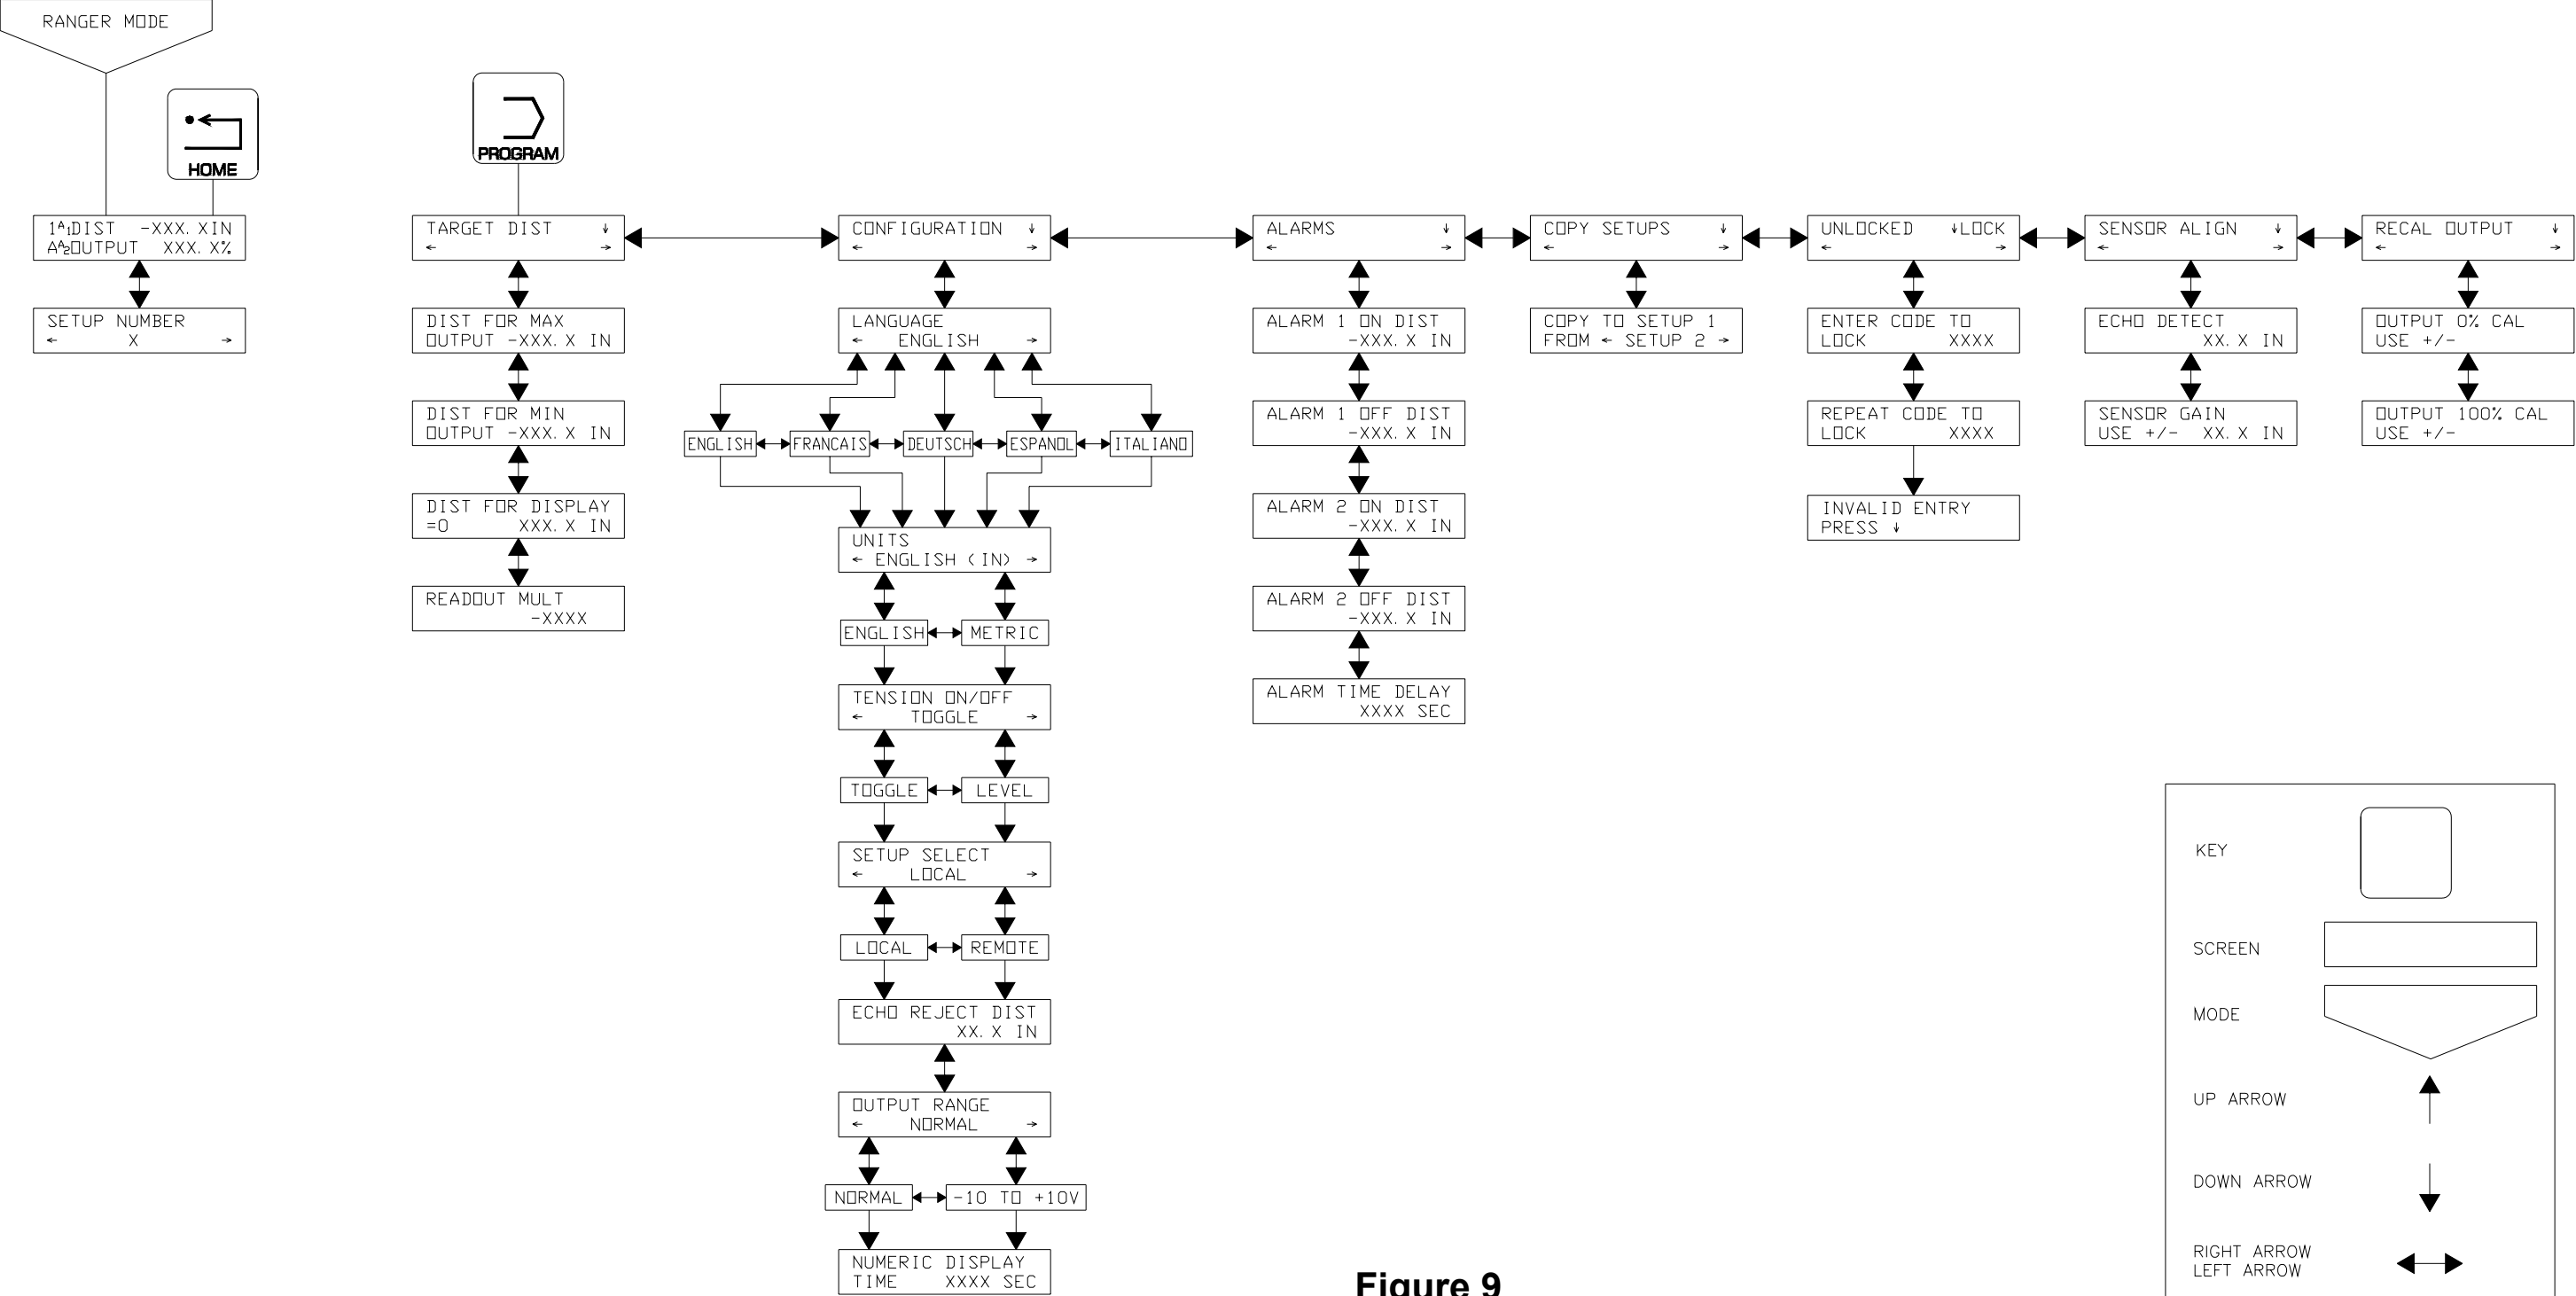


Figure 9