

42000 Guide Block

Switching Guideblock Between R5, R5-1/2, R6 and R2 Fasteners


Instructions



1. Original R5, R5-1/2, R6 locator block position.



2. Remove two socket head cap screws using 1/4" Allen wrench.

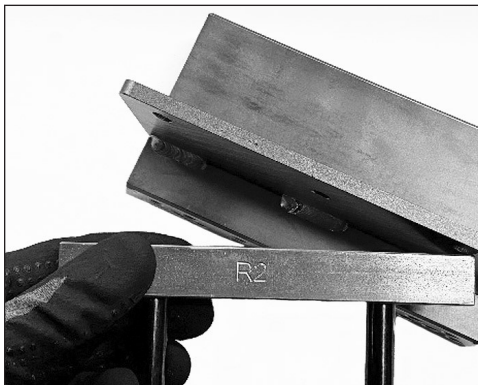

3. Flip locator block 180° so R2 is visible.



4. Reattach locator block using original socket head cap screws.



5. Final R2 locator block position.



2525 Wisconsin Avenue • Downers Grove, IL 60515-4200 USA
Tel: 1-630-971-0150 • Fax: 1-630-971-1180 • E-mail: info@flexco.com

Visit www.flexco.com for other Flexco locations and products.

©2022 Flexible Steel Lacing Company. 01-18-22. For Reorder: 103193

