

# **Installation & Maintenance Manual**

#### **Power Transmission Solutions**

Regal Beloit America, Inc. 7120 New Buffington Road Florence, KY 41042 Application Engineering: 800 626 2093 www.RegalPTS.com

**FORM** 9979E

## Revised **April 2016**

#### **▲** WARNING

- Read and follow all instructions carefully.
- Disconnect and lock-out power before installation and maintenance. Working on or near energized equipment can result in severe injury or death.
- Do not operate equipment without guards in place. Exposed equipment can result in severe injury or death.

#### **A** CAUTION

Periodic inspections should be performed. Failure to perform proper maintenance can result in premature product failure and personal


#### Unit Sizes 133-325 (one piece base kit)

- Place reducer on a smooth level surface with the side the base kit will be mounted on up.
- 2. Align the inner clearance holes in the base kit with the tapped holes in the reducer housing.
- Insert the four (4) supplied capscrews thru the clearance holes in the 3. base into the threaded holes in the housing.
- 4. Tighten to the appropriate torque as shown in Table 1.
- Follow instructions supplied with the reducer for mounting 5. assembled unit.


### Unit Sizes 375-600 (two piece base kit)

- Place reducer on a smooth level surface with the side the base kit will be mounted on up.
- 2. Align the inner clearance holes in the base kit with the tapped holes in the reducer housing.
- Insert the two (2) of the four (4) supplied capscrews thru the 3. clearance holes in the base into the threaded holes in the housing.
- 4. Tighten to the appropriate torque as shown in Table 1.
- Repeat steps 2, 3 and 4 for the other base. 5.
- Follow instructions supplied with the reducer for mounting 6. assembled unit.

Capscrew Tightening Torques			
Capscrew Size	Torque (FT/LBS)	Capscrew Size	Torque (FT/LBS)
1⁄4 - 20	6.25	7/16 – 14	35.0
5/16 – 18	13.0	1⁄2 - 13	50.0
3/8 – 16	20.0	5/8 – 11	90.0

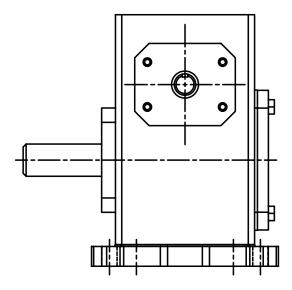

Horizontal Base 133-325 Center Below Base

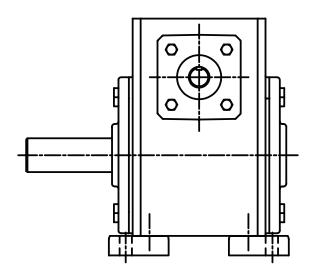

Horizontal Base 375 - 600 Center Below Base

