


Bevel Mite®

Bevel heads / Freeskoppen / Fräsköpfen / Cabezales de corte

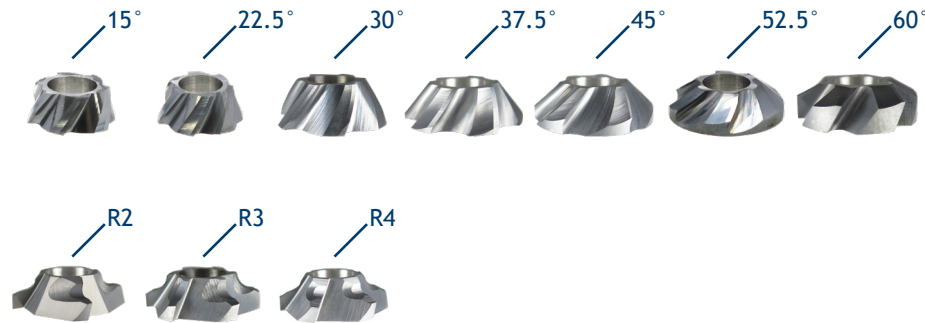

Available in / Verkrijgbaar in / Erhältlich in / Disponible en



Steel
Staal
Stahl
Acero



Premium
Premium
Premium
Premium



Aluminum
Aluminium
Aluminium
Aluminio



YouTube

www.youtube.com/beveltools

Beveltools B.V.
P.O. Box 190
6880 AD
Velp (Gld)
The Netherlands

T +31 (0)26 369 92 22
F +31 (0)26 369 92 23
E info@beveltools.com

Beveltools Inc.
11426 Moog Drive
Maryland Heights
MO 63146
United States

T +1 855 882 3835
F +1 314 567 0124
E sales@beveltools.com

Quick Start Manual

Bevel Mite® ABIS-R 3.0



www.beveltools.com




Quick Start Manual BevelMite® ABIS-R 3.0




1 • Mounting the bevel head


1 **ON OFF**

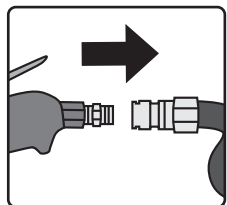


2

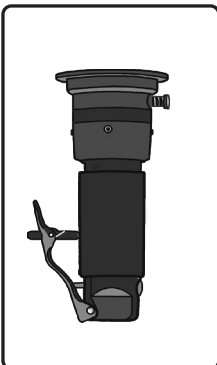

3

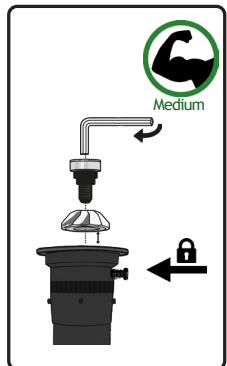


4

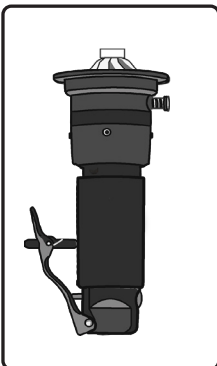

2A • Adjusting the depth (beveling)

1 **ON OFF**


2

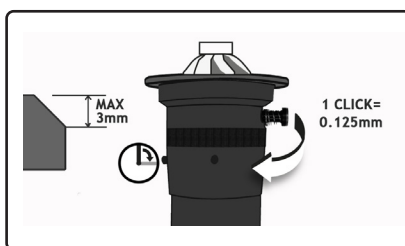


2B • Adjusting the depth (rounding)

1 **ON OFF**

2

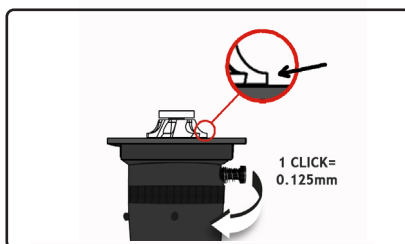

3




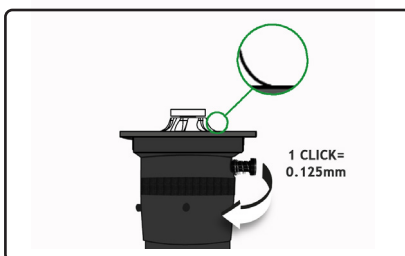


3 • Usage







1



2 **ON OFF**

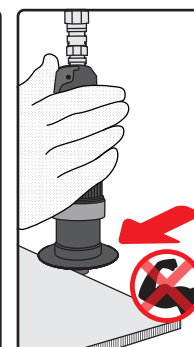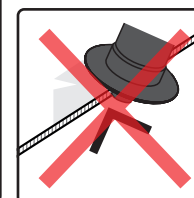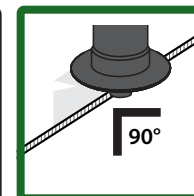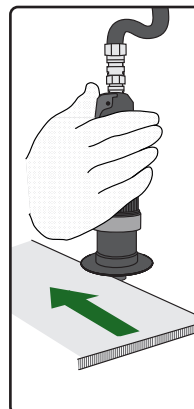

4 • Bevel direction

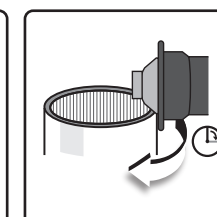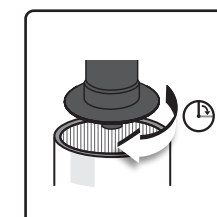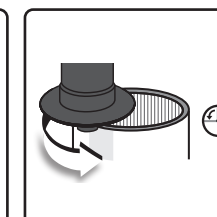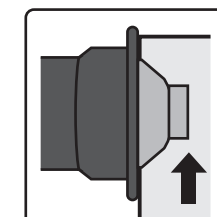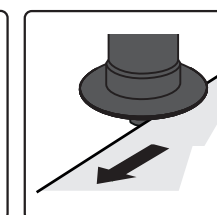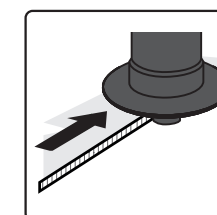

5 • Maintenance

