


# Hydraulic Wedgie and Spread Cylinders


▼ Shown clockwise from top: WR-15, WR-5, A-92




- **Single-acting, spring return**
- **WR-5 wedgie cylinder:** for use in very confined work areas
- **WR-15 spread cylinder:** for long stroke spreading applications
- **A-92, Spreader attachment:** threads on 10 ton RC-Series DUO cylinders (except RC-101).

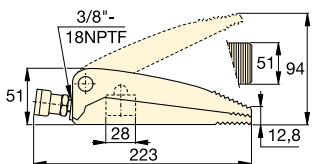


WR-5

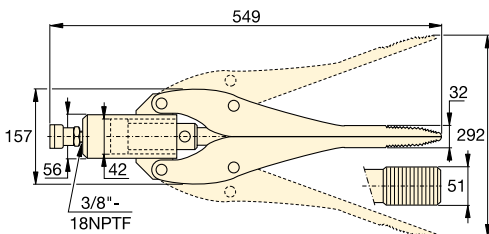

WR-15

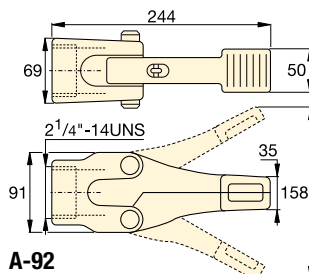

A-92

| Cylinder Capacity | Tip Clearance | Model Number | Maximum Spread | Cylinder Effective Area | Oil Capacity       |  |
|-------------------|---------------|--------------|----------------|-------------------------|--------------------|---|
| ton (kN)          | (mm)          |              | (mm)           | (cm <sup>2</sup> )      | (cm <sup>3</sup> ) | (kg)  |
| 1,0 (8,9)         | 12,8          | WR-5         | 94             | 6,5                     | 10                 | 2,3   |
| 0,75 (6,0)        | 32,0          | WR-15        | 292            | 14,5                    | 64                 | 11,3  |
| 1,0 (8,9)         | 35,0          | A-92         | 158            | –                       | –                  | 3,6   |

## A, WR Series

Capacity:

**0,75 - 1,0 ton**

Tip Clearance:

**12,8 - 35,0 mm**

Maximum Spread:

**94 - 292 mm**

Maximum Operating Pressure:

**700 bar**



### RC-Series DUO Cylinders

10 ton RC-Series DUO cylinders (except RC-101) fit into A-92 Spreader Attachment.

Page: 60



### Best Match Hand Pump

To power your WR-5, WR-15 and A-92 Spreader attachment the **P-392 Hand Pump** is an ideal choice. See [www.enerpac.com](http://www.enerpac.com) or

the Enerpac Industrial Tools catalogue for the full range of hand pump options.

Page: 60

▼ A WR-5 hydraulic wedgie cylinder is used for maintenance on a bridge bearing.

